OVEN, 60CM

PLANNING GUIDE

OVEN | OB60SC7CEX3

PLANNING GUIDE | OVEN, 60CM

This comprehensive Planning Guide provides you with the framework and tools to achieve your desired design outcome with Fisher & Paykel appliances. In this guide, you will find a range of conceptual, detailed and dimensional product information to bring your ideas to life and create spaces that truly reflect your vision.

CONTENTS

CONCEPT DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE
Specification Guides		Data Sheet	
Oven	4	Oven	7

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

FISHER & PAYKEL 90004831A PLANNING GUIDE COOKING - VERSION A - MAY 2025 ® FISHER & PAYKEL APPLIANCES LTD 2025 PAGE 2

SPECIFICATION GUIDE





OVERVIEW

This Series 5 Contemporary style oven features a spacious 85L capacity in a stainless steel finish. It includes seven functions, such as Bake or Grill, with AeroTech™ technology for even heat distribution. Designed for versatile cooking with six shelf positions.

PRODUCTS

OB60SC7CEX3

60cm Series 5 Contemporary Oven 7 Function

SERIES & STYLE

Series 5 Contemporary

FEATURES

- Stainless Steel finish to match our Contemporary style appliances
- ② Generous 85L capacity
- 3 Seven oven functions including Classic Bake, Fan Forced and Grill
- ④ AeroTech™ technology for even heat circulation
- (§) The CoolTouch door with triple glazing and a cooling system ensures it's safe to touch from the outside
- 6 Designed for multi shelf cooking with 6 shelf positions

ACCESSORIES

- ① Telescopic Clip-On Runners
- Step Down Wire Shelf
- (3) Wire Shelf
- 4 Flat Brushed Baking Tray
- S Roasting Dish
- 6 Chrome Side Ladders


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

FISHER & PAYKEL 90004831A PLANNING GUIDE COOKING - VERSION A - MAY 2025 ® FISHER & PAYKEL APPLIANCES LTD 2025 PAGE 4

SPECIFICATIONS

Model No.	OB60SC7CEX3	
Dimensions	H 598mm W 597mm D 565mm	
Total Oven Capacity	85L	
Weight		
Packaged	45kg	
Unpackaged	32kg	
Electrical		
Supply	220-240 V, 60 Hz	
Service	15 A	


PRODUCT DIMENSIONS

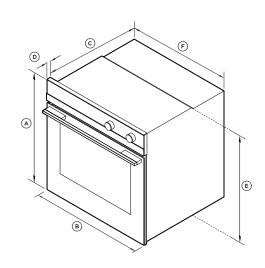

	mm
Overall height	598
Overall width	597
© Depth of chassis	545
Thickness of oven control panel (excl. handle, trim and dials)	20
(E) Height of chassis	575
F Width of chassis	556
Depth of oven door when fully open (measured from front of control panel)	466

ISO VIEW

CAVITY DIMENSIONS: STANDARD INSTALLATION

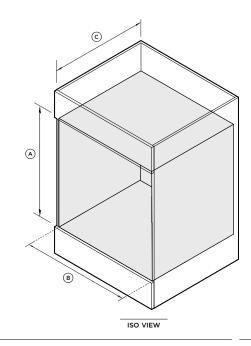


	mm
Minimum inside height of cavity	580
Minimum inside width of cavity	560
© Minimum inside depth of cavity	550
-	

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

DATA SHEET

DATA SHEET | **OVEN, 60CM** OB60SC7CEX3

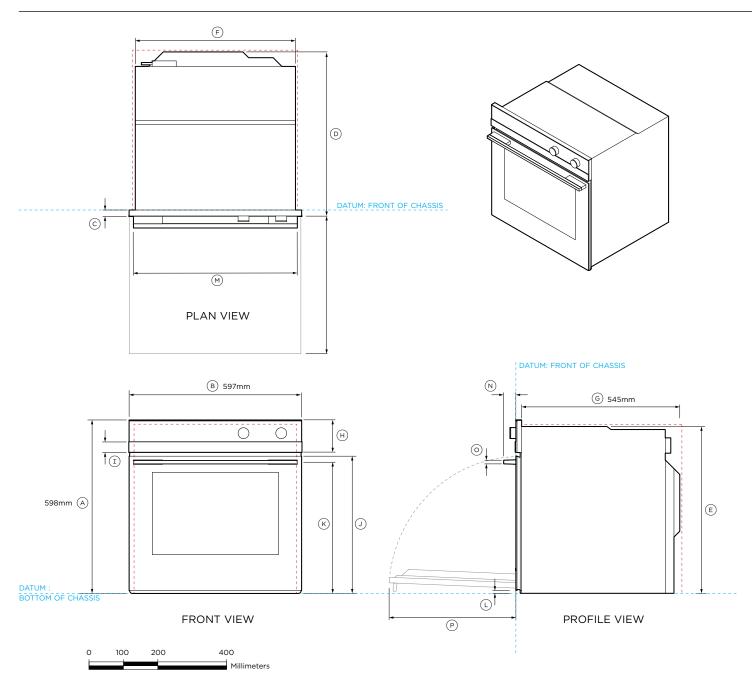

Model no:

Oven, 60cm - OB60SC7CEX3

Product Dimensions	mm
Overall height of product	598
Overall width of product	597
© Depth of control panel	20
(excludes handle, front trim and dial)	20
Depth of chassis and control panel	562
(excludes handle, front trim and dial)	302
E Height of chassis	575
Width of chassis	556
Depth of chassis	545
Height of control panel	112
① Height of trim on control panel	38
Height from bottom datum to top of oven door	473
Height from bottom datum to centerline of handle	453
① Height from bottom datum to bottom of door	10
® Width of handle	565
® Depth of handle	42
Thickness of handle	16
Depth of door when open (measured from front of door)	466
Minimum Clearances - Flush Installation	mm
Minimum inside height of cavity	580
Minimum inside width of cavity	560
Minimum inside depth of cavity*	550
Minimum clearance above oven control panel to upper cabinetry front	2

cabinetry front panel or appliance
*Measured from front of control panel.

panel or appliance

Note: For full installation and clearance details please refer to our installation manual.

INDICATES PRODUCT DATUM ------INDICATES CABINETRY CLEARANCES ------

Minimum clearance between bottom of oven chassis to lower

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ± 2 mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit fisherpaykel.com

FISHER & PAYKEL

90004831A

PLANNING GUIDE COOKING - VERSION A - MAY 2025

© FISHER & PAYKEL APPLIANCES LTD 2025