

**INTEGRATED FRENCH DOOR REFRIGERATOR
FREEZER**

PLANNING GUIDE

SERIES 7 | RS90A | RS90AU | RS80A | RS80AU

FISHER & PAYKEL

INTRODUCTION

This comprehensive planning guide provides you with the framework and tools to achieve your desired design outcome with Fisher & Paykel appliances. In this guide, you will find a range of conceptual, detailed, and dimensional product information to bring your ideas to life and create spaces that truly reflect your vision.

SUPPORT

For additional design planning and installation support please contact the Fisher & Paykel design support team.
designsupport@fisherpaykel.com

NOTES

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Refer to our website fisherpaykel.com for the latest document version. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Specific installation guidance will be available with the product on delivery and on our website.

CONTENTS

CONCEPT DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE
Specification guide		Data sheets		Custom Door Panel Preparation	
RS90A, RS80A	4	RS90A	11	RS90A Models	22
RS90AU, RS80AU	5	RS90AU	12	RS80A Models	23
		RS80A	13		
Design choices		RS80AU	14	Services	
Product options	7			RS90A	25
Handle accessories	8	Planning Considerations		RS90AU	26
Stainless steel panel accessories	9	Cavity specifications	16	RS80A	27
		Service specifications	17	RS80AU	28
		Custom panel extension	18		
		Hinge articulation	19	Handles - data sheets	
		Door opening clearance	20	RS90 Contemporary square fine handle	30
				RS90 Contemporary Round	31
				RS90 Classic handle	32
				RS90 Professional round flush	33
				RS80 Contemporary square fine handle	34
				RS80 Contemporary Round	35
				RS80 Classic handle	36
				RS80 Professional round flush	37

SPECIFICATION GUIDE



OVERVIEW

This roomy refrigerator with bottom freezer seamlessly integrates into the kitchen, fitting flush into the cabinetry. Customise with kitchen cabinetry or our stainless steel door panel accessory. Select one of our handle options or go custom to match any kitchen style.

PRODUCTS*

RS90A
Integrated French Door Refrigerator Freezer, 90cm wide

RS80A
Integrated French Door Refrigerator Freezer, 80cm wide

*Some models may not be available in all markets, please check fisherpaykel.com for more information.

OPTIONS

Integrated Custom Panels
Customise with your own kitchen cabinetry

Stainless Steel Panels
RD90A, RD80A

Handle kits
Contemporary square fine, Contemporary round, Classic, Professional round

FEATURES

- ① Seamless flush fit with 4mm gaps.
- ② Customise with kitchen cabinetry or a stainless steel door panel accessory
- ③ Select Fisher & Paykel handles or customise handles to match any kitchen style.
- ④ ActiveSmart™ technology helps keep food fresher for longer by constantly maintaining the ideal temperature
- ⑤ Flexible storage makes it simple to store, access and remove food.
- ⑥ LED lighting illuminates the interior with a crisp, clean glow for enhanced visibility

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com



OVERVIEW

This roomy refrigerator with bottom freezer seamlessly integrates into the kitchen, fitting flush into the cabinetry.

Pair with our stainless steel door panel accessory (sold separately) for a sleek and modern finish.

External slimline water dispenser and internal ice maker provide filtered ice and water.

PRODUCTS*

RS90AU

Integrated French Door Refrigerator Freezer with chilled water and ice, 90cm wide

RS80AU

Integrated French Door Refrigerator Freezer with chilled water and ice, 80cm wide

*Some models may not be available in all markets, please check fisherpaykel.com for more information.

OPTIONS

Stainless Steel Panels

RD90AU, RD80AU

Handle kits

Contemporary square fine, Contemporary round, Classic, Professional round


FEATURES

- ① Seamless flush fit with 4mm gaps
- ② Pair with our stainless steel door panels (sold separately) for a sleek modern finish.
- ③ ActiveSmart™ technology helps keep food fresher for longer by constantly maintaining the ideal temperature.
- ④ Flexible storage makes it simple to store, access and remove food.
- ⑤ LED lighting illuminates the interior with a crisp, clean glow for enhanced visibility.
- ⑥ Slimline external water dispenser makes it easy to fill almost any sized jug or vessel.
- ⑦ Internal ice maker means ice is always available in a dedicated freezer bin.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

DESIGN CHOICES


INTEGRATED FRENCH DOOR 90CM

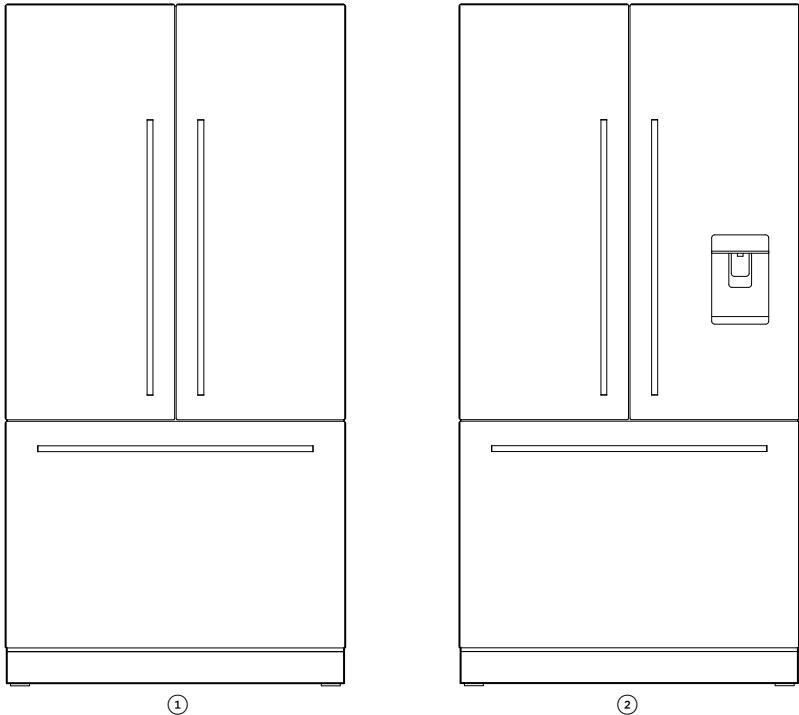

OPTIONS


① 90cm Refrigerator Freezer Large capacity	RS90A Models
Integrated custom panels	
Stainless steel door panels	RD90A
② 90cm Refrigerator Freezer Large capacity	RS90AU Models
Stainless steel panels	RD90AU
Handle kits all models - Contemporary Square Fine, Contemporary Round, Classic, Professional Round	

INTEGRATED FRENCH DOOR 80CM

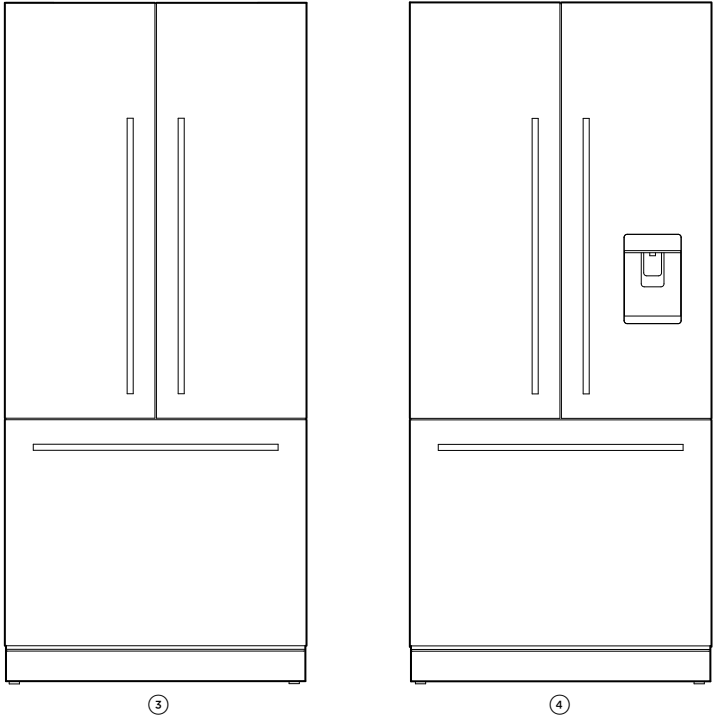

③ 80cm Refrigerator Freezer Large capacity	RS80A Models
Integrated custom panels	
Stainless steel door panels	RD80A
④ 80cm Refrigerator Freezer Large capacity	RS80AU Models
Stainless steel panels	RD80AU

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

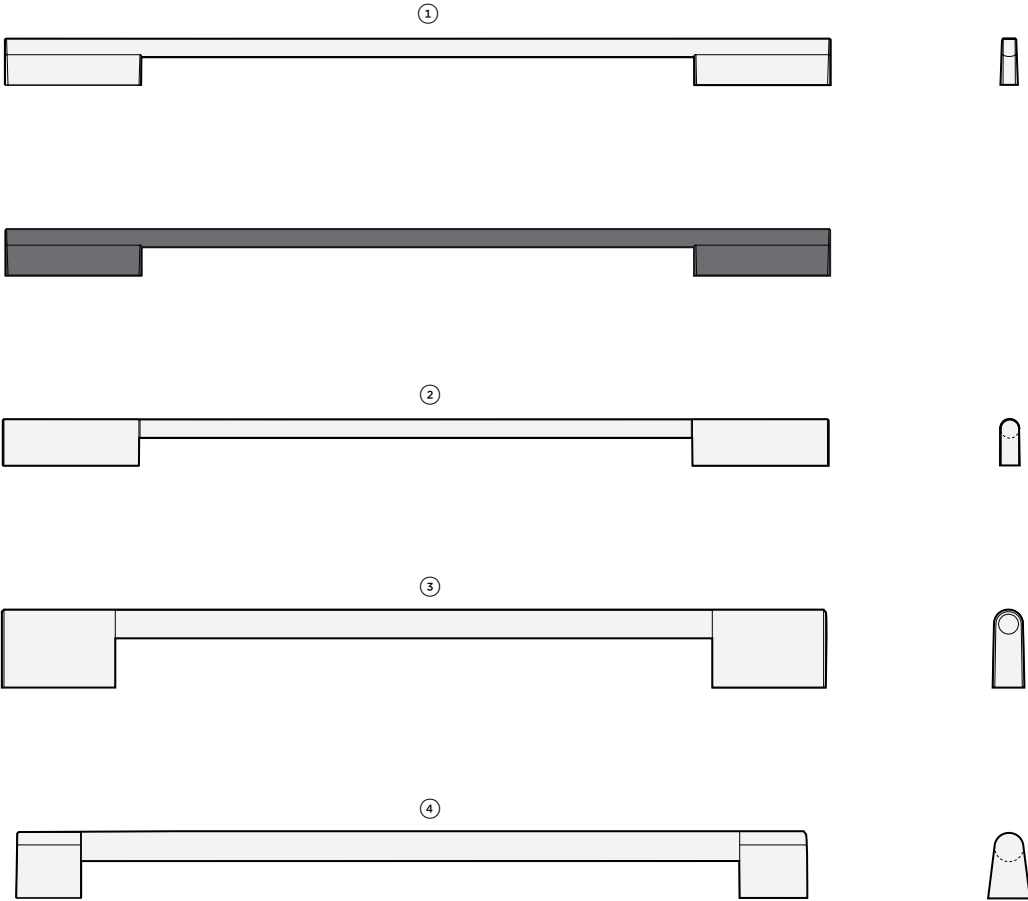

HANDLE KITS	FINISH	90CM REFRIGERATOR FREEZER MODELS	80CM REFRIGERATOR FREEZER MODELS
① Contemporary Square Fine	Aluminium	AHD5RD90A	AHD5RD80A
	Black	AHD5RD90AB	AHD5RD80AB
② Contemporary Round	Aluminium	AHS-ASBI-A	AHSRS80A
③ Classic Handle	Stainless Steel	AHCLRD90A	AHCLRD80A
④ Professional Round Flush	Aluminium	AHP3RD90A	AHP3RD80A


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com



REFRIGERATOR FREEZER MODELS	FINISH	PANEL MODELS
① RS90A	Brushed stainless steel	RD90A
② RS90AU	Brushed stainless steel	RD90AU
③ RS80A	Brushed stainless steel	RD80A
④ RS80AU	Brushed stainless steel	RD80AU

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

DATA SHEETS

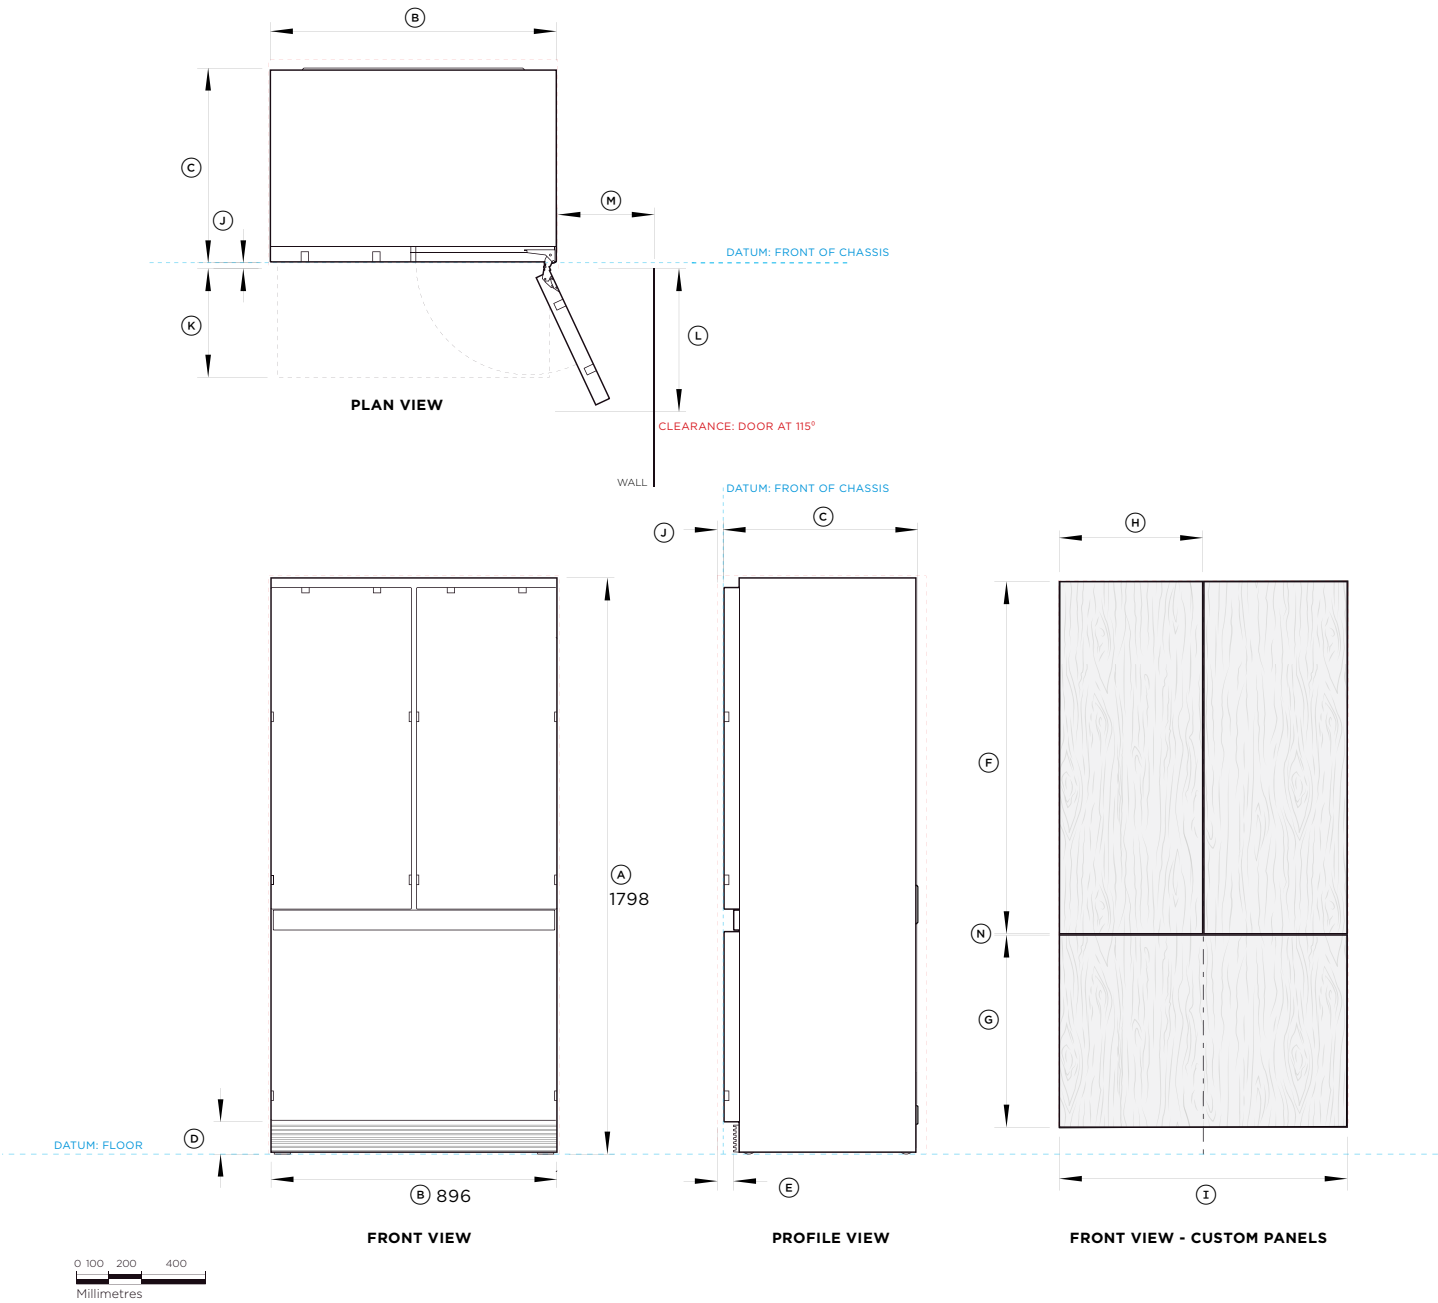

Model no:
RS90A models Integrated French Door Refrigerator Freezer

Shown with:
Custom Door Panel*
Stainless steel door panels optional (RD90A)


Product Dimensions		mm
(A)	Overall height of product	1798
(B)	Overall width of chassis	896
(C)	Depth of chassis (without handle and door panel)	604
(D)	Height of toe kick	100
(E)	Depth of toe kick - from front of door panels to grill*	50
Custom Door Panel Minimum Dimensions		mm
(F)	Height of top door panel	1096
(G)	Height of bottom drawer panel	598
(H)	Width of top door panels	446
(I)	Width of bottom drawer panel	896
(J)	Depth of fridge front panels (excl. handles)	18-24
Door/Drawer Opening Dimensions*		mm
(K)	Depth of drawer (open) from front of panel	360
(L)	Depth of door (widest opening) from front of panel**	445
(M)	Minimum door clearance** to wall (widest opening)**	300
(N)	Minimum panel gap clearance	4

Minimum Clearances		mm
Cavity overall height		1800 - 1802
Overall width of cavity		900-904
Minimum overall depth of cavity		650

* Custom panels to be manufactured & fitted by cabinet maker.
**Assumes 19mm door panels on adjacent cabinetry

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

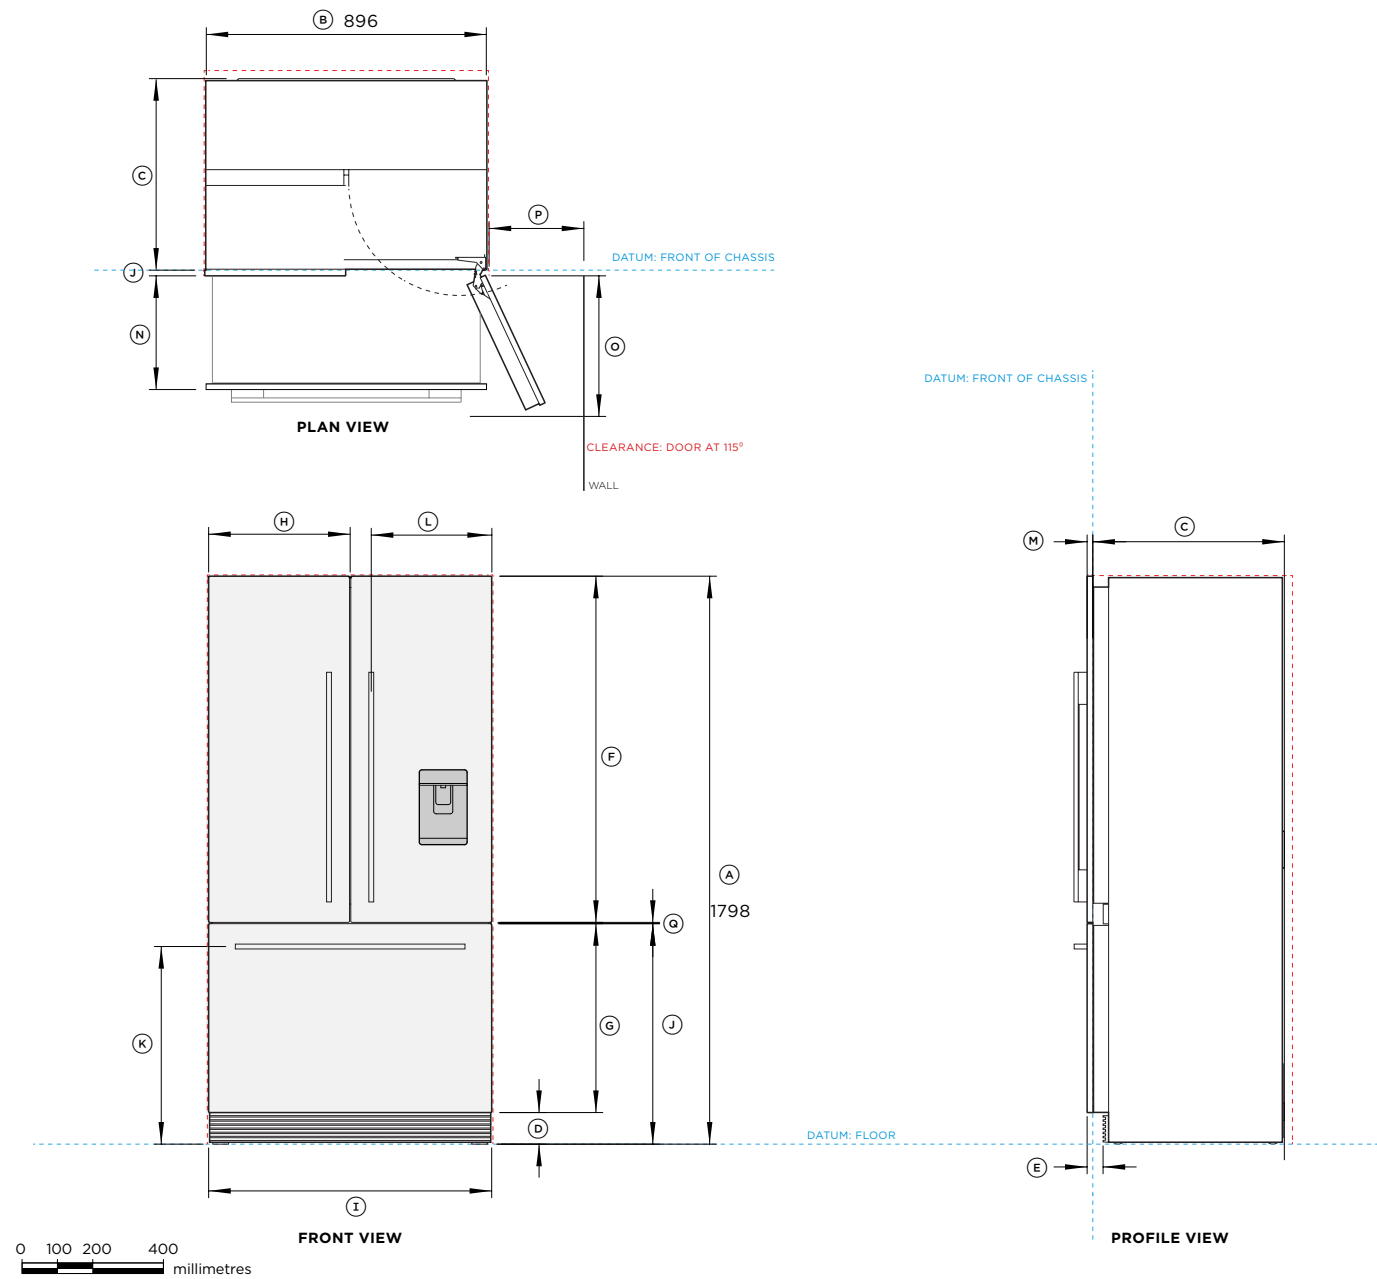

Model no:
RS90AU models Integrated French Door Refrigerator Freezer

Shown with:
RD90AU Stainless steel door panels

Product Dimensions		mm
A Overall height of product		1798
B Overall width of chassis		896
C Depth of chassis (without handle and door panel)		604
D Height of toe kick		100
E Depth of toe kick - from front of door panels*		50

Door Panel Dimensions		mm
F Height of top door panel		1096
G Height of bottom drawer panel		598
H Width of top door panels		446
I Width of bottom drawer panel		896
J Height from floor to top of drawer		698
K Height from floor to centre of handle		626
L Distance to centre of top handles		381
M Panel depth		19

Door/Drawer Opening Dimensions*		mm
N Depth of drawer (open) from front of panel		360
O Depth of door (widest opening) from front of panel		445
P Minimum door clearance** to wall (widest opening)		300
Q Minimum panel gap clearance		4


Minimum Clearances		mm
Cavity overall height		1800
Overall width of cavity		900-904
Minimum overall depth of cavity		650

Custom panels covering water dispenser (internal ice only):
A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.

Custom panels including water dispenser:
The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD90AU). Alternatively to use the dispenser with custom door panels, please contact designsupport@fisherpaykel.com for guidance and support.

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

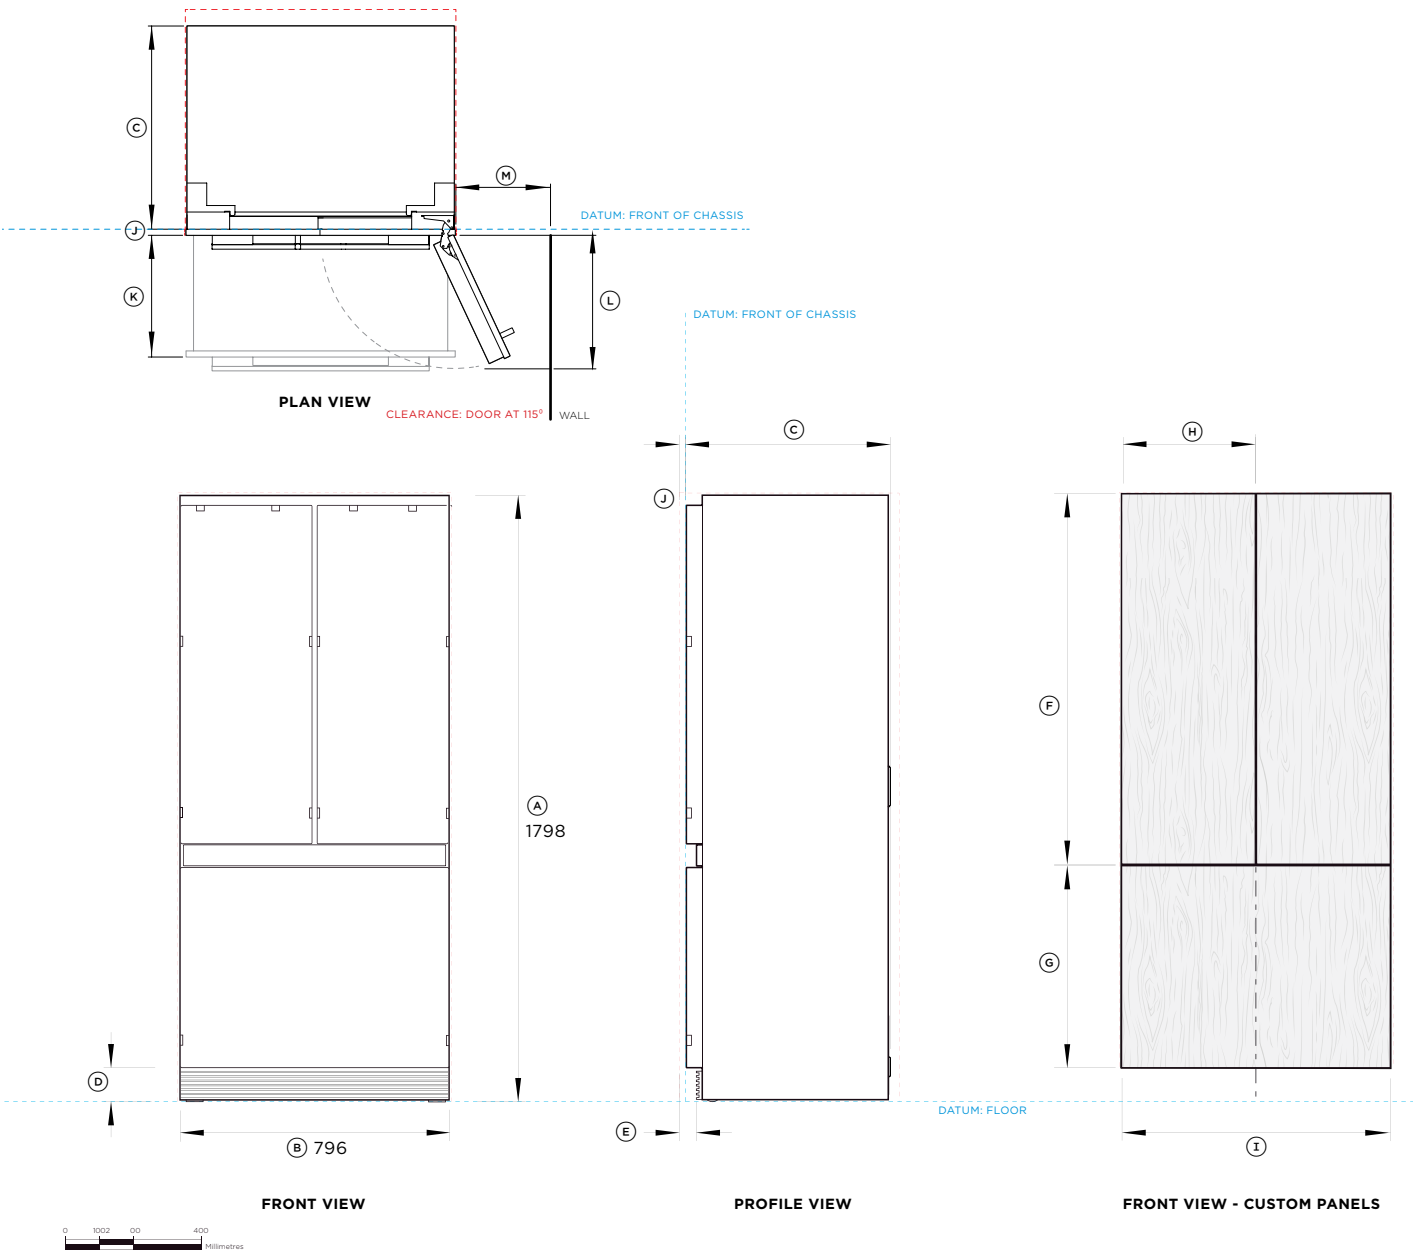

Model no:
RS80A1 Integrated French Door Refrigerator Freezer

Shown with:
Custom Door Panel*
Stainless steel door panels optional


Product Dimensions		mm
Ⓐ Overall height of product		1798
Ⓑ Overall width of chassis		796
Ⓒ Depth of chassis (without handle and door panel)		604
Ⓓ Height of toe kick		100
Ⓔ Depth of toe kick - from front of door panels*		50
Custom Door Panel Minimum Dimensions		mm
Ⓕ Minimum height of top door panel		1096
Ⓖ Minimum height of bottom drawer panel		598
Ⓗ Width of top door panels		396
Ⓘ Width of bottom drawer panel		796
Ⓙ Depth of fridge front panels (excl. handles)		18-24
Door/Drawer Opening Dimensions*		mm
Ⓚ Depth of drawer (open) from front of panel		360
Ⓛ Depth of door (widest opening) from front of panel**		395
Ⓜ Minimum door clearance** to wall (widest opening)**		280

Minimum Clearances		mm
Minimum panel gap clearance		4
Cavity overall height		1800
Overall width of cavity		800-804
Minimum overall depth of cavity		650

* Custom panels to be manufactured & fitted by cabinet maker.
**Assumes 19mm door panels on adjacent cabinetry

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

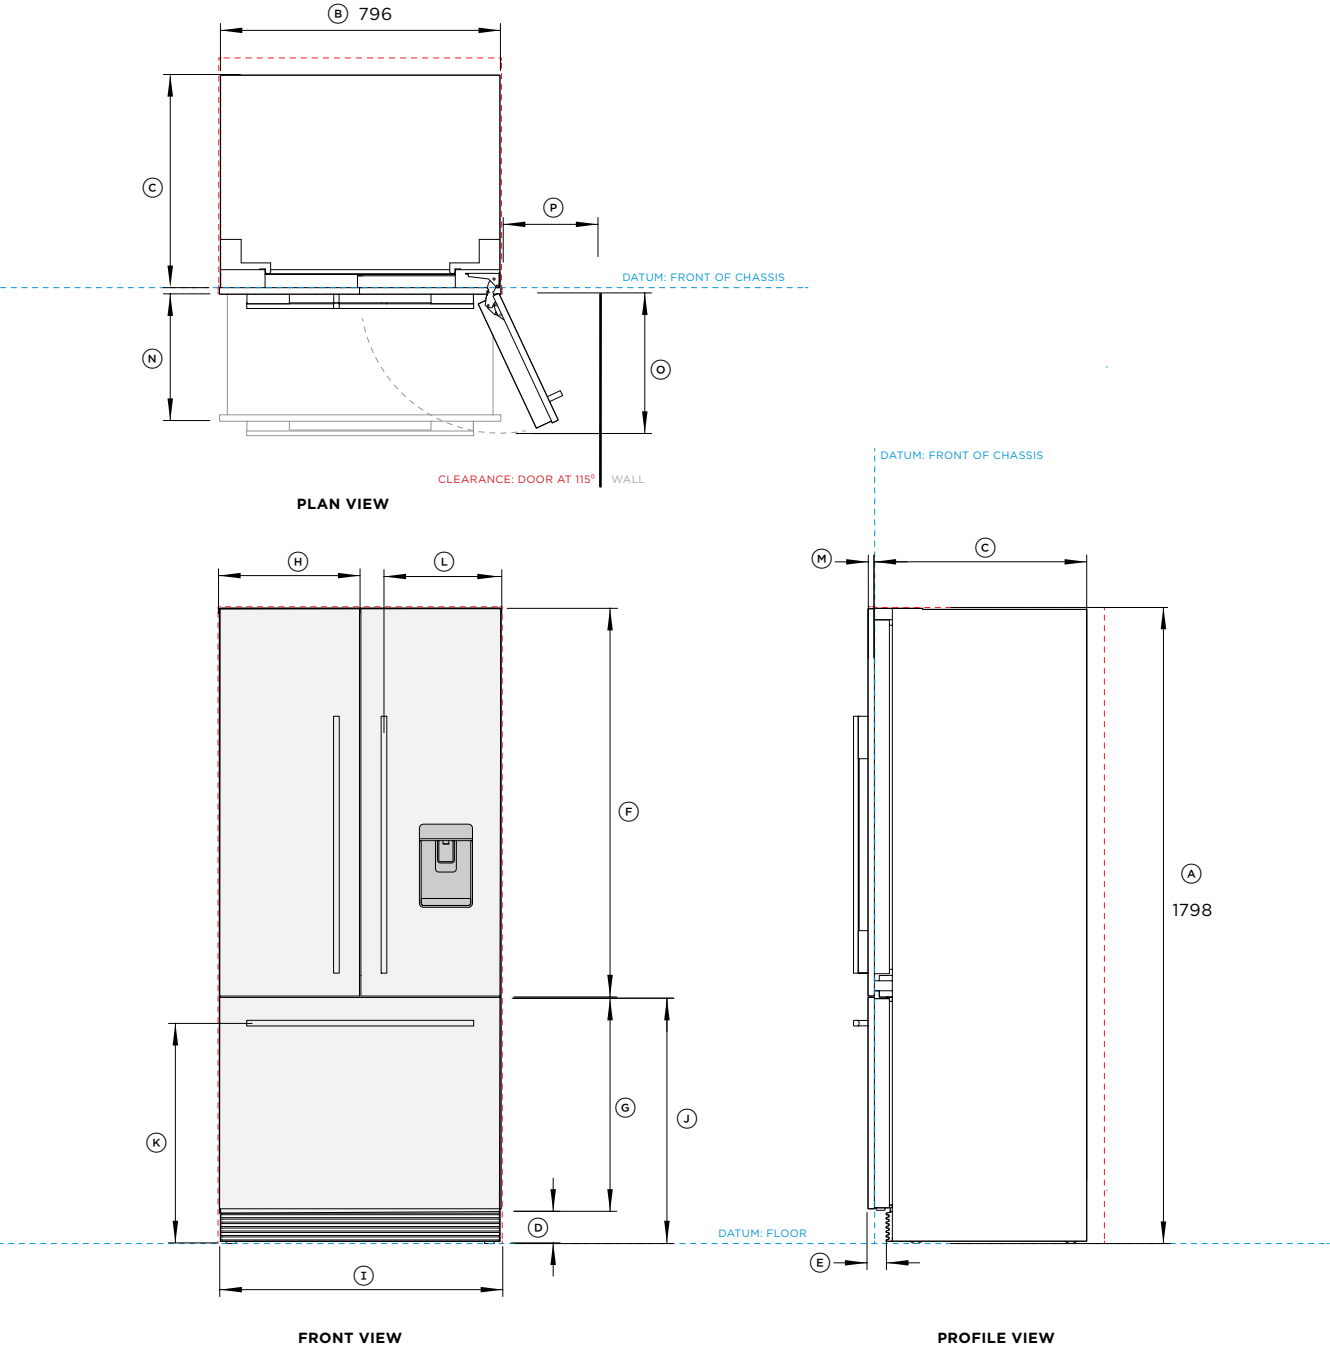

Model no:
RS80AU models Integrated French Door Refrigerator Freezer

Shown with:
RD80AU Stainless steel door panels

Product Dimensions		mm
(A)	Overall height of product	1798
(B)	Overall width of chassis	796
(C)	Depth of chassis (without handle and door panel)	604
(D)	Height of toe kick	100
(E)	Depth of toe kick - from front of door panels*	50

Door Panel Dimensions		mm
(F)	Height of top door panel	1096
(G)	Height of bottom drawer panel	598
(H)	Width of top door panels	396
(I)	Width of bottom drawer panel	796
(J)	Height from floor to top of drawer	698
(K)	Height from floor to centre of handle	626
(L)	Distance to centre of top handles	381
(M)	Panel depth	19

Door/Drawer Opening Dimensions*		mm
(N)	Depth of drawer (open) from front of panel	360
(O)	Depth of door (widest opening) from front of panel	445
(P)	Minimum door clearance** to wall (widest opening)	300

Minimum Clearances		mm
Minimum panel gap clearance		4
Cavity overall height		1800
Overall width of cavity		900-904
Minimum overall depth of cavity		650

Custom panels covering water dispenser (internal ice only):
A custom door panel can be fitted in front of the water dispenser panel.
The water dispenser will be automatically disabled.

Custom panels including water dispenser:
The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD80AU).
Alternatively to use the dispenser with custom door panels, please contact designsupport@fisherpaykel.com for guidance and support.

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT


IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

PLANNING CONSIDERATIONS

CAVITY SPECIFICATIONS


Dimensions	mm
A Cavity height*	1800 - 1802
B RS90 Overall cavity width RS80 Overall cavity width	900 - 904 800 - 804
C Minimum internal depth**	650
D Toe kick height	100
E Product height	1798
F Chassis width	896
G Chassis depth (excluding panels)	606
H Minimum gap from edge of door panel to cabinetry	4
I Minimum required finished return	120

*The minimum cabinet gap above door panels is 4mm
**Water and electrical connections must not protrude from the wall if located behind the refrigerator.

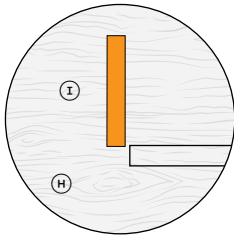


UNFRAMED CABINETRY

Ensure cabinetry extends minimum 120mm.

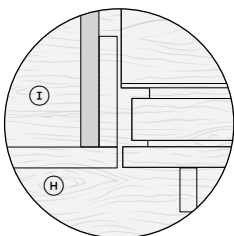

FRAMED CABINETRY

Ensure that there is a finished return of minimum 120mm added to the cavity.

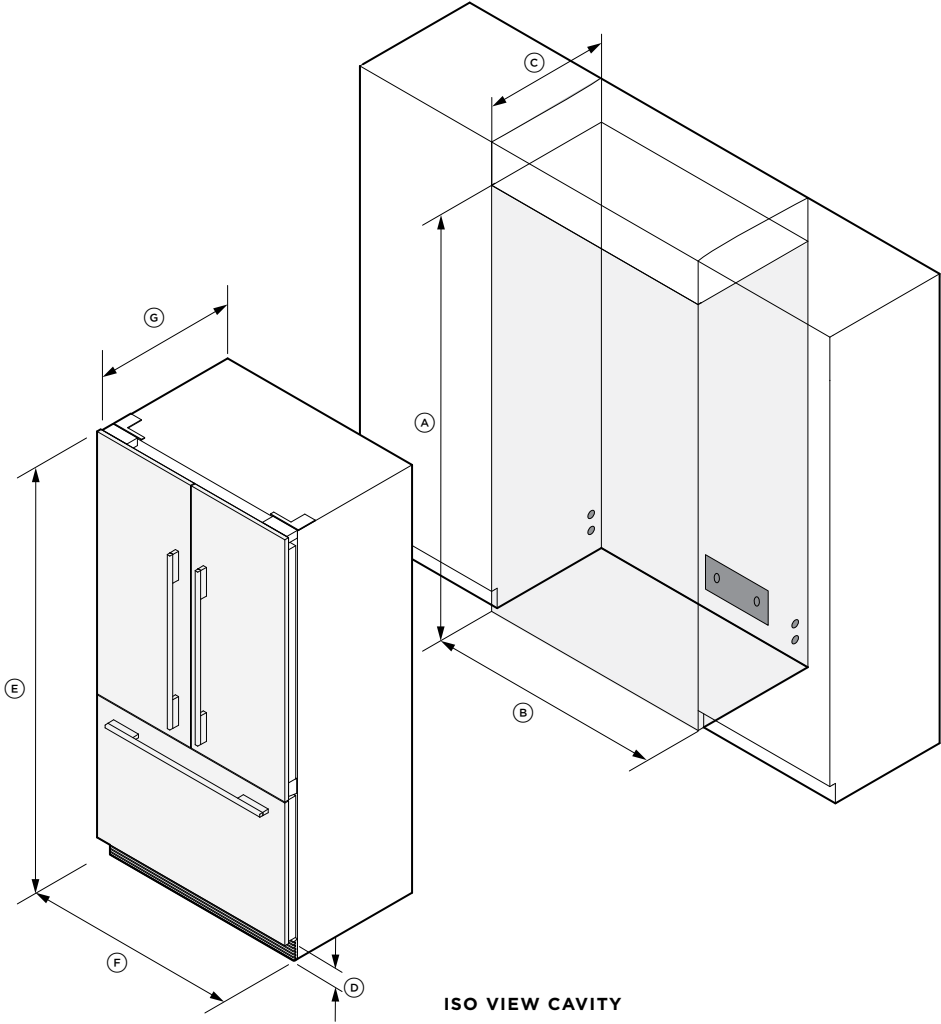


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

SERVICE SPECIFICATIONS


Electrical connection should be located in an adjacent cabinet to either side, or above the refrigerator cavity.

Ensure that the power connection is accessible after installation.

Cavity Dimensions	mm
Ⓐ Height of supply area	130
Ⓑ RS90 Width of supply area RS80 Width of supply area	355 275
Ⓒ Supply area - distance from left side of cavity	145
Ⓓ Supply area - distance from floor	72

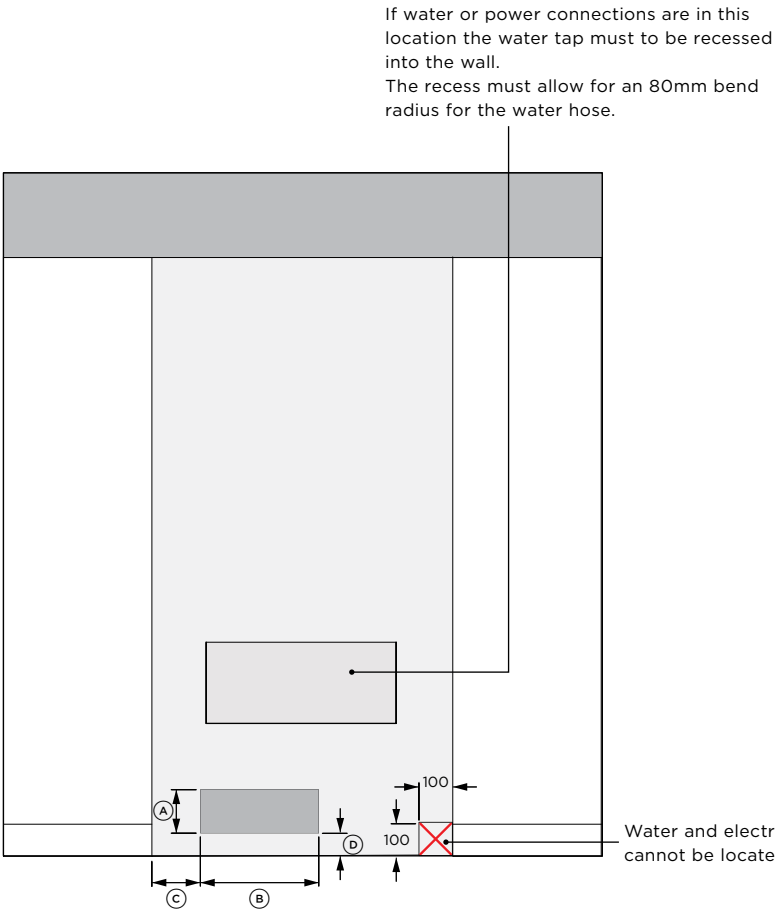


FRONT VIEW - CAVITY SUPPLY POSITION

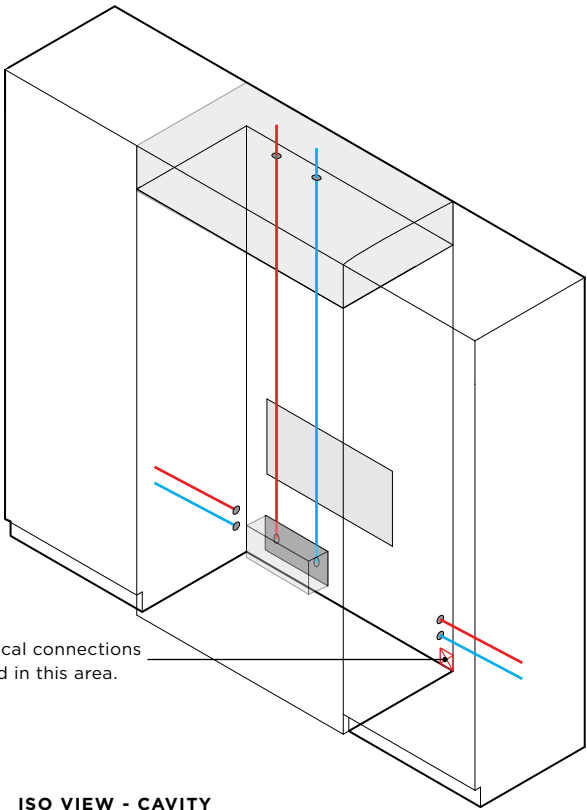

ISO VIEW - CAVITY
HOSE & ELECTRICAL ROUTING OPTIONS

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

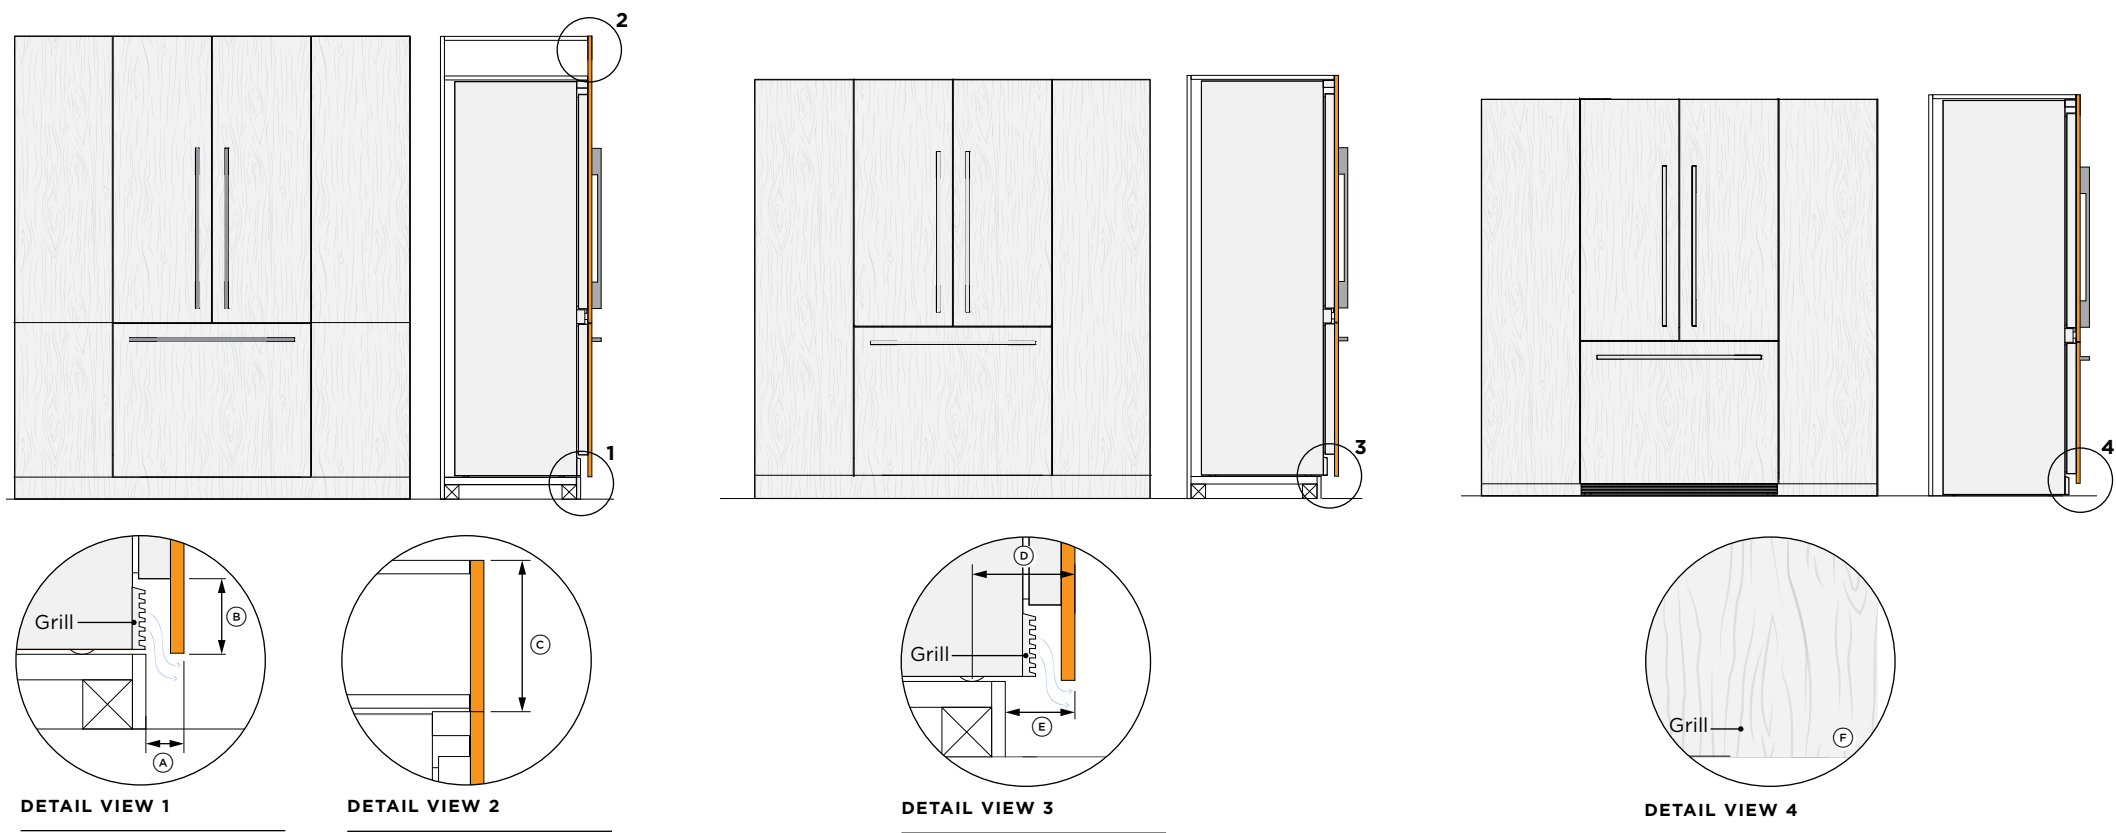

INSTALL WITH PLINTH AND EXTENDED PANELS

The drawer panel can extend downward to hide the airflow grill. Door panels can be extended upwards to align with the surrounding cabinets.

Dimensions	mm
Ⓐ Airflow gap	51
Ⓑ Minimum lower panel extension to cover grill	93
Ⓒ Maximum upper panel extension	200

PLINTH AND INCREASED TOE KICK DEPTH

The plinth can be set back to allow a deeper toe kick. The door panels can extend to cover the cavity top.

Dimensions	mm
Ⓓ Center of front wheels to front of door panel	136
Ⓔ Maximum toe kick depth	100

EXTENDED DRAWER PANEL TO FLOOR

The drawer panel can be extended down to the minimum distance from the floor (50mm) for a lower toe kick.

Dimensions	mm
Ⓕ Minimum distance panel to floor	50

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

PANEL DETAILS


Custom panels require a minimum radius of 2mm on panel edges to prevent clashing with adjacent cabinetry.

Panels thicker than 19mm require a larger gap between adjacent cabinetry and a larger radius to prevent clashing.


Custom Panel Dimensions		mm
Ⓐ	Front panel thickness	16mm-19mm
Ⓑ	Gap between custom panel and adjacent panels	4

Custom Panel Maximum Weight		
	RS90 Each door panel	Max 10kg
	RS90 Drawer panel	Max 9.5kg
	RS80 Each door panel	Max 10kg
	RS80 Drawer panel	Max 9.5kg


Weights includes handle.
Left-hand hinge models are a mirror of version shown.

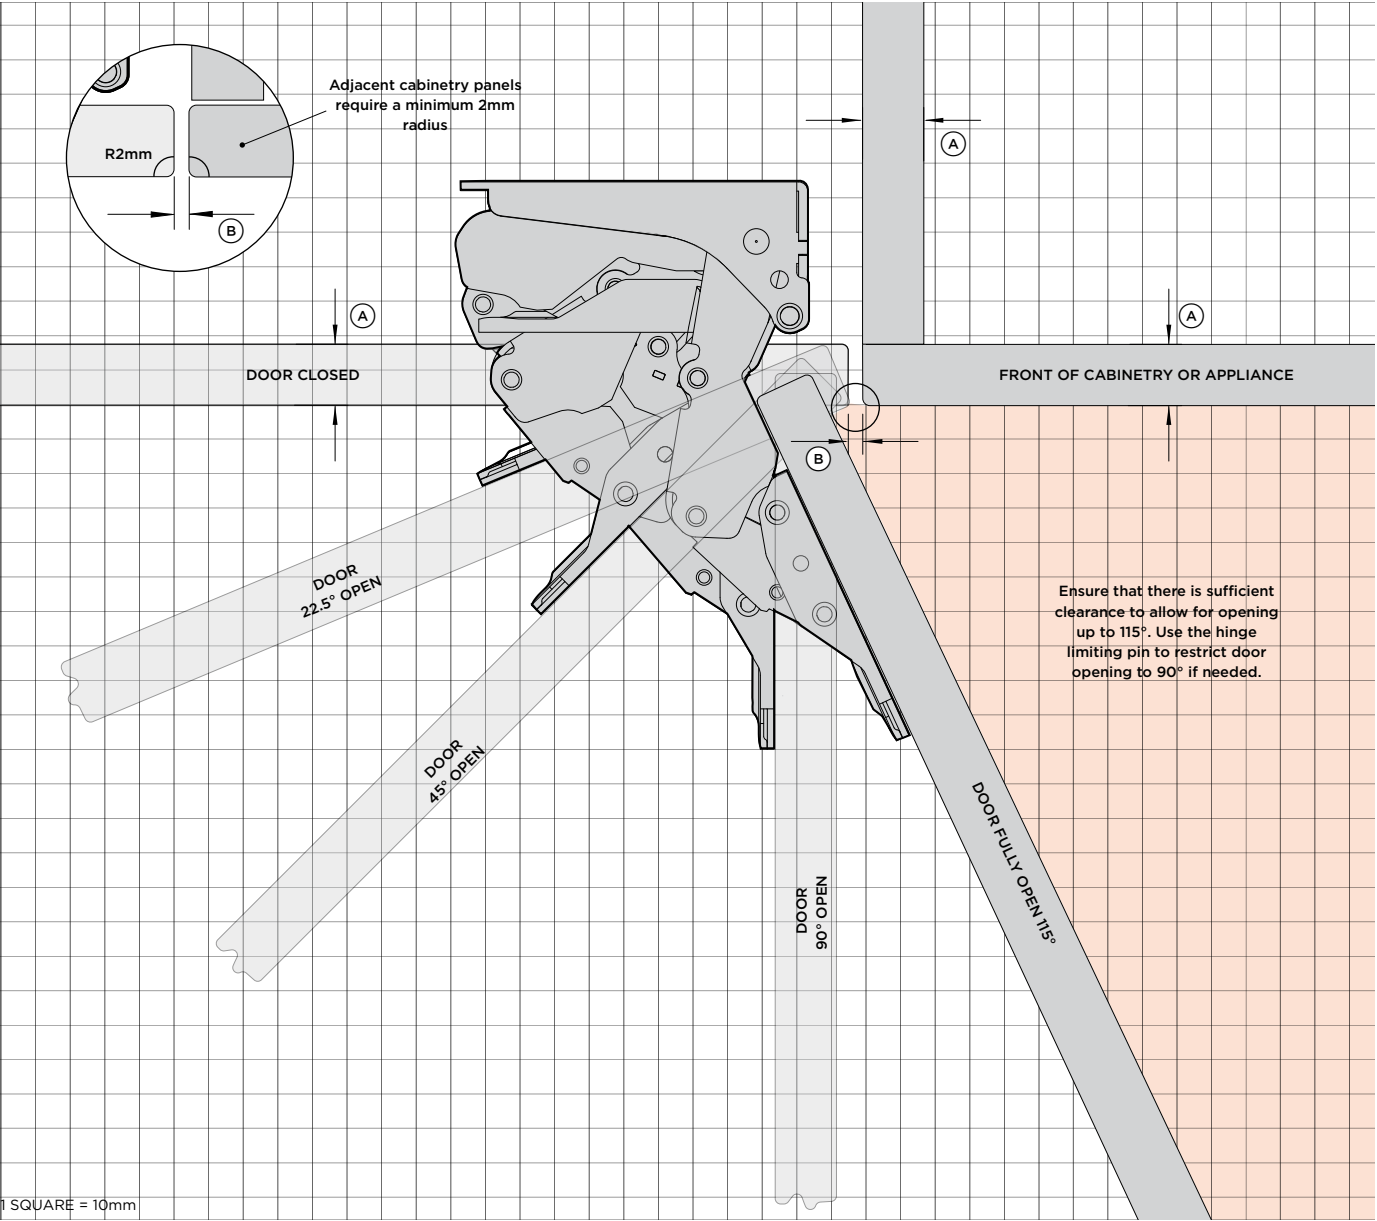

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

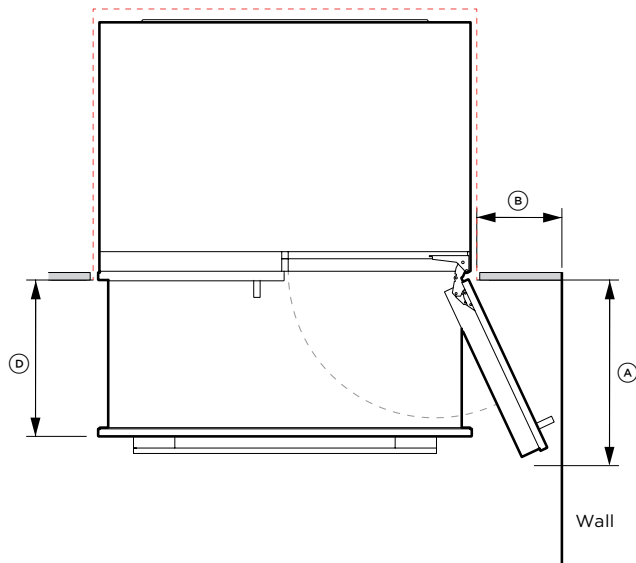

FULL INTERNAL ACCESS 115°

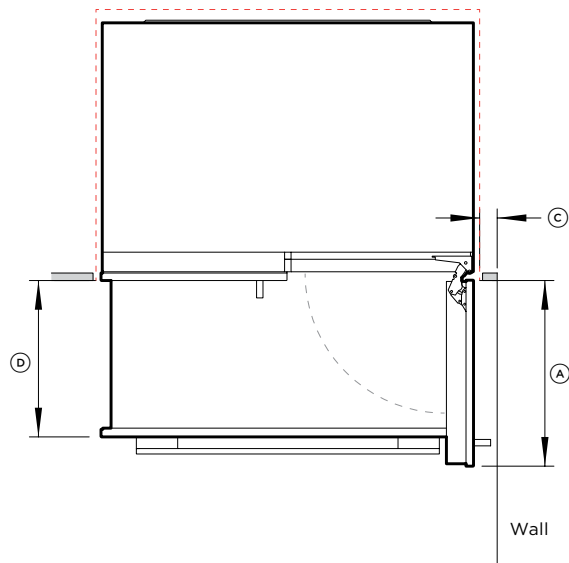

REDUCED INTERNAL ACCESS 90°

Hinge limiting pins restrict the door opening to 90°.

MINIMUM DOOR CLEARANCES	90cm MODELS		80cm MODELS	
	in	mm	in	mm
A Door swing depth	min 17 1/2	min 445	min 15 9/16	min 395
B Clearance for handle (at 115°)*	11 13/16	min 300	11 13/16	min 280
C Clearance for handle (at 90°)*	3 15/16	min 100	3 15/16	min 100
D Drawer open depth	14 13/16	min 360	14 13/16	min 360

* Limiting pins are required for a 90° door swing.
Dimensions assume a panel depth of 19mm (3/4"). Thicker panels will require a wider gap between panels.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

CUSTOM DOOR PANEL PREPARATION

Models

RS80A

Integrated French Door Refrigerator Freezer

Custom Panel Dimensions*	
(A) Height of door panels	1096
(B) Width of door panels	396
(C) Height of drawer panel (Do not extend more than 50mm from floor)	598
(D) Width of drawer single panel	796
Panel thickness	16 - 19

Clearance Dimensions*	
Minimum cabinetry gap clearance from edge of door panel	4

* Custom panels to be manufactured & fitted by cabinet maker.

Dimensions apply for the preparation and installation of Custom door panels.

Dwg and Dxf files of the panel preparation can be downloaded from www.fisherpaykel.com

The thickness of the custom door panel can vary provided that the screws do not penetrate beyond the full depth of the door panel.

RS80AU MODELS

Custom panels covering water dispenser (internal ice only):

A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.

Custom panels including water dispenser:

The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD90AU). Alternatively to use the dispenser with custom door panels, please contact designsupport@fisherpaykel.com for guidance and support.

CUSTOM PANEL

MOUNTING HOLES

Dimensions given in millimetres, do not fix handles through mounting holes.

PILOT HOLES

8x Pilot holes recommended for bracket attachment. (Do not penetrate front surface).

Do not place pilot holes for handle attachment in marked areas to avoid clashing with panel attachment brackets.

Models

RS90AIntegrated French Door Refrigerator Freezer

Custom Panel Dimensions*	mm
A Height of door panels	1096
B Width of door panels	446
C Height of drawer panel (do not extend more than 50mm from floor)	598
D Width of drawer panel	896
Panel thickness	16 - 19

Clearance Dimensions*	mm
Minimum cabinetry gap clearance from edge of door panel	4

* Custom panels to be manufactured & fitted by cabinet maker.

Dimensions apply for the preparation and installation of Custom door panels.

Dwg and Dxf files of the panel preparation can be downloaded from www.fisherpaykel.com

The thickness of the custom door panel can vary provided that the screws do not penetrate beyond the full depth of the door panel.


RS90AU MODELS

Custom panels covering water dispenser (internal ice only):

A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.

Custom panels including water dispenser:


The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD80AU). Alternatively to use the dispenser with custom door panels, please contact designsupport@fisherpaykel.com for guidance and support.

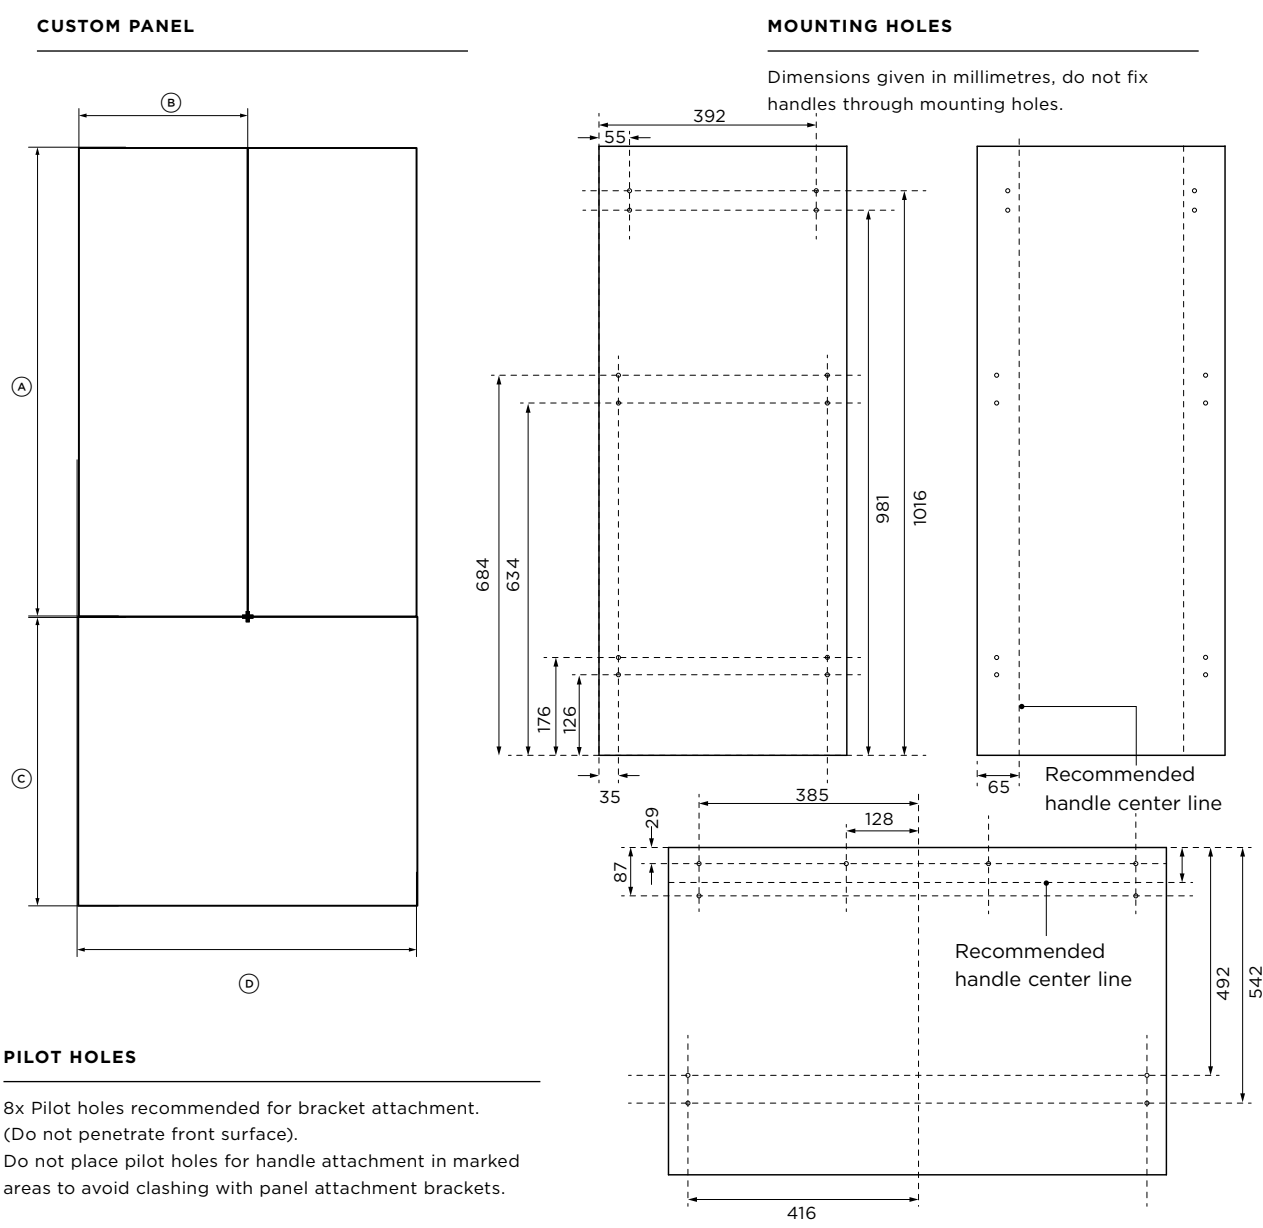

SERVICES

Electrical / Plumbing Specifications	
RS90A	Integrated French Door Refrigerator Freezer
Specifications	mm
Electrical	
Supply	230 V, 50 Hz
Service	10 A circuit

Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

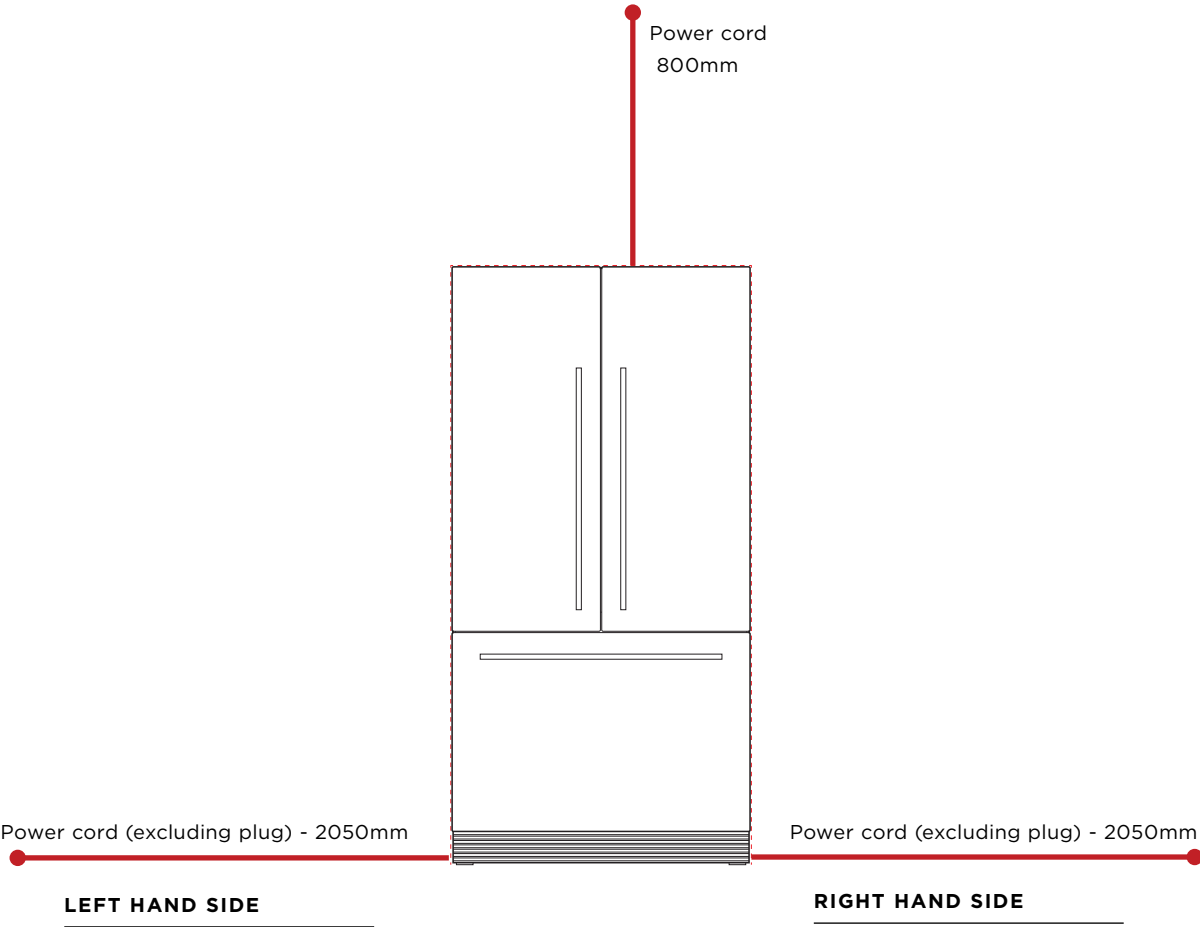


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

Electrical / Plumbing Specifications	
RS90AU	Integrated French Door Refrigerator Freezer
Specifications	mm
Electrical	
Supply	230 V, 50 Hz
Service	10 A circuit
Plumbing	
Water Supply	13mm (1/2") or 19mm (3/4") BSP threaded water connection 6.35mm LLDPE tubing
Pressure	min 150 kPa (22 psi) max 827 kPa (120 psi) @ 20°C (68°F)

* Water inlet hose dimensions apply to ice and water models only.


Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

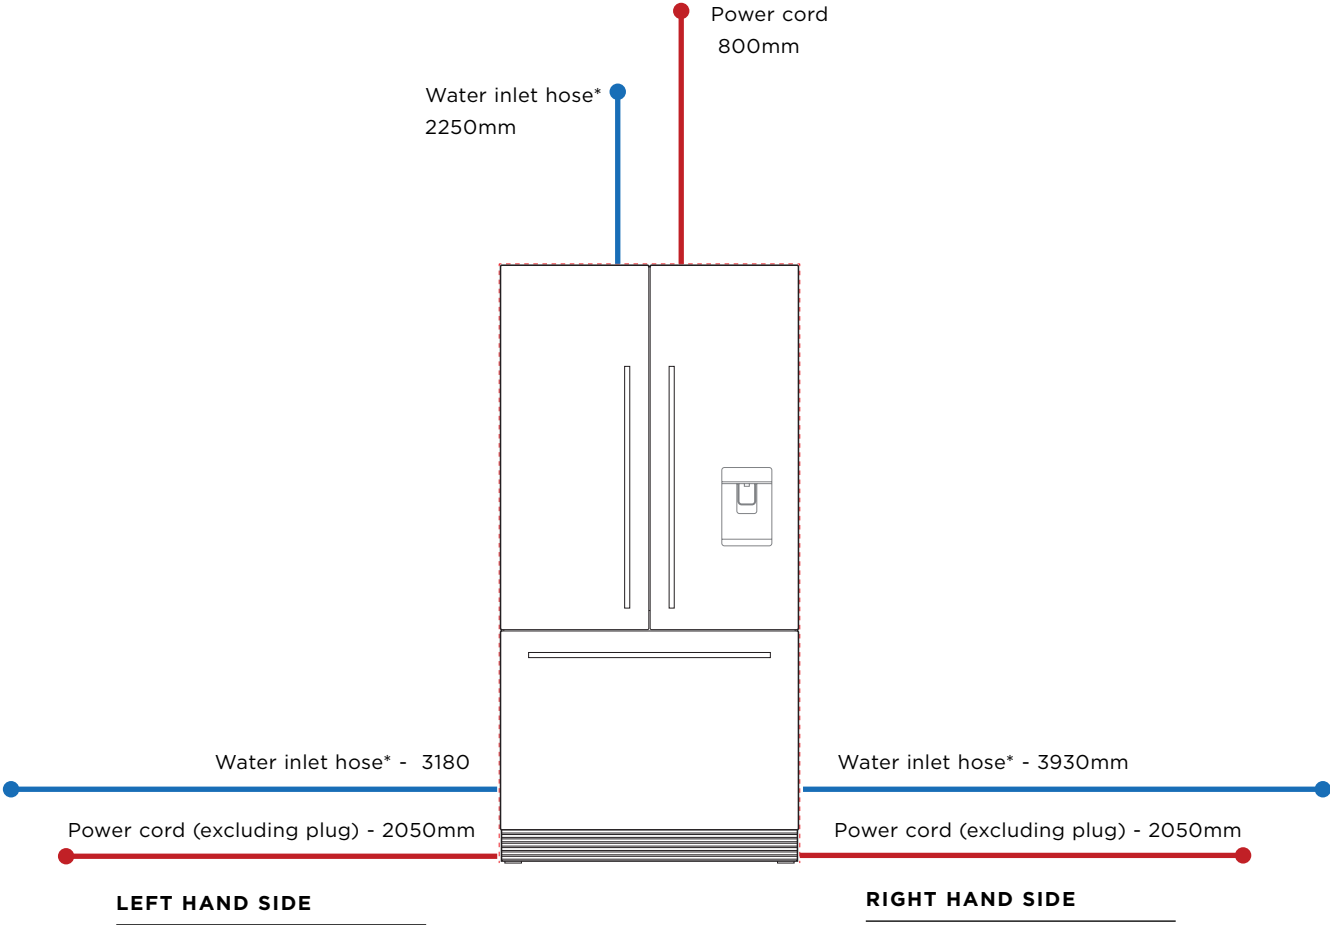

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

Electrical / Plumbing Specifications	
RS80A	Integrated French Door Refrigerator Freezer
Specifications	mm
Electrical	
Supply	230 V, 50 Hz
Service	10 A circuit

Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

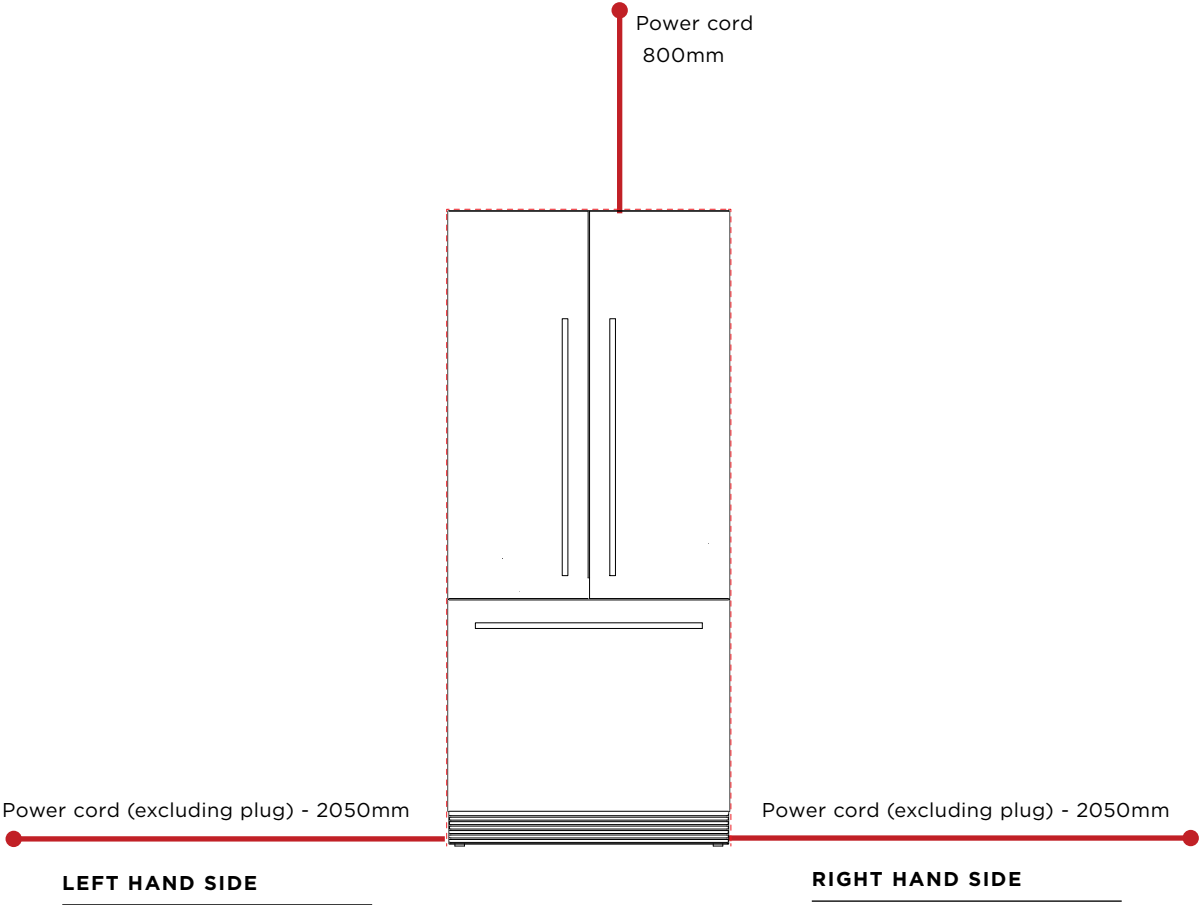


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

Electrical / Plumbing Specifications	
RS80AU	Integrated French Door Refrigerator Freezer
Specifications	mm
Electrical	
Supply	230 V, 50 Hz
Service	10 A circuit
Plumbing	
Water Supply	13mm (1/2") or 19mm (3/4") BSP threaded water connection 6.35mm LLDPE tubing
Pressure	Minimum 22 psi (150 kPa) Maximum 120 psi (827 kPa) @ 20°C


* Water inlet hose dimensions apply to ice and water models only.

Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

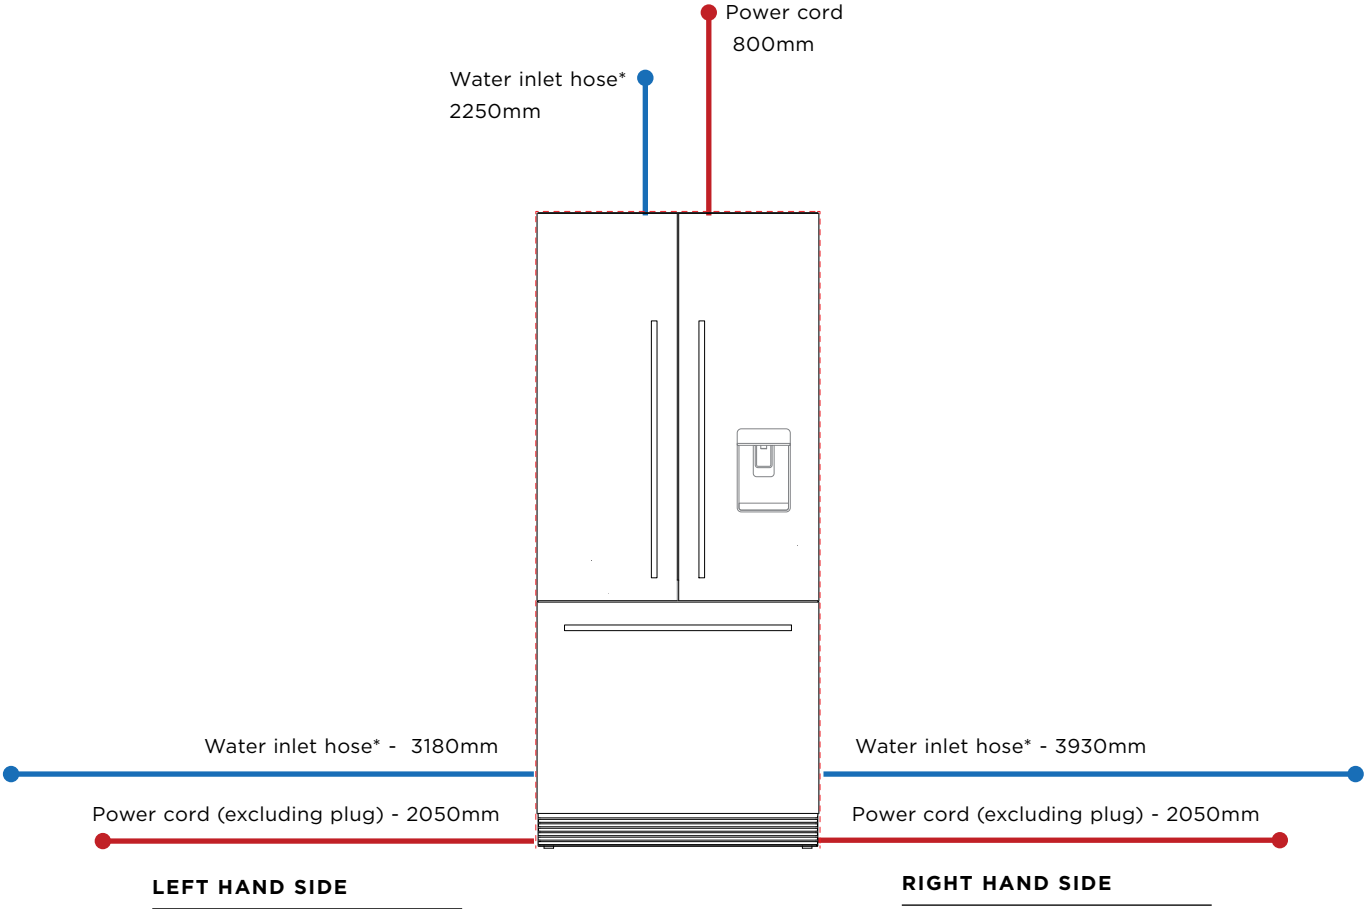

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

HANDLES - DATA SHEETS

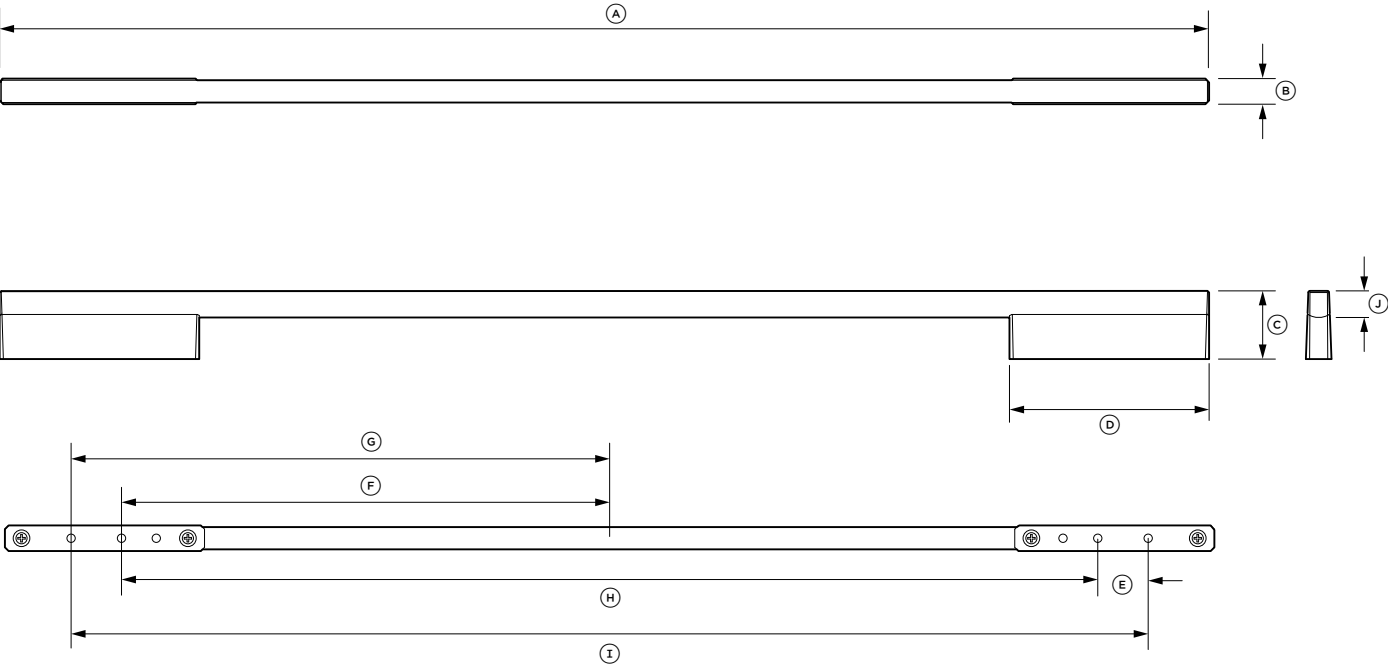

Model no:

Square Fine Handle Aluminium- AHD5RD90A
Black Square Fine Handle - AHD5RD90AB

For models


RS90 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of handle	727
Ⓑ Overall depth of handle	15
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	293
Ⓖ Distance from centreline to outer attachment holes	324
Ⓗ Distance between inner attachment holes	587
Ⓘ Distance between outer attachment holes	647
⓵ Thickness of handle rail	16

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

- INDICATES CABINETRY / PRODUCT DATUM
- INDICATES CABINETRY CLEARANCES
- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

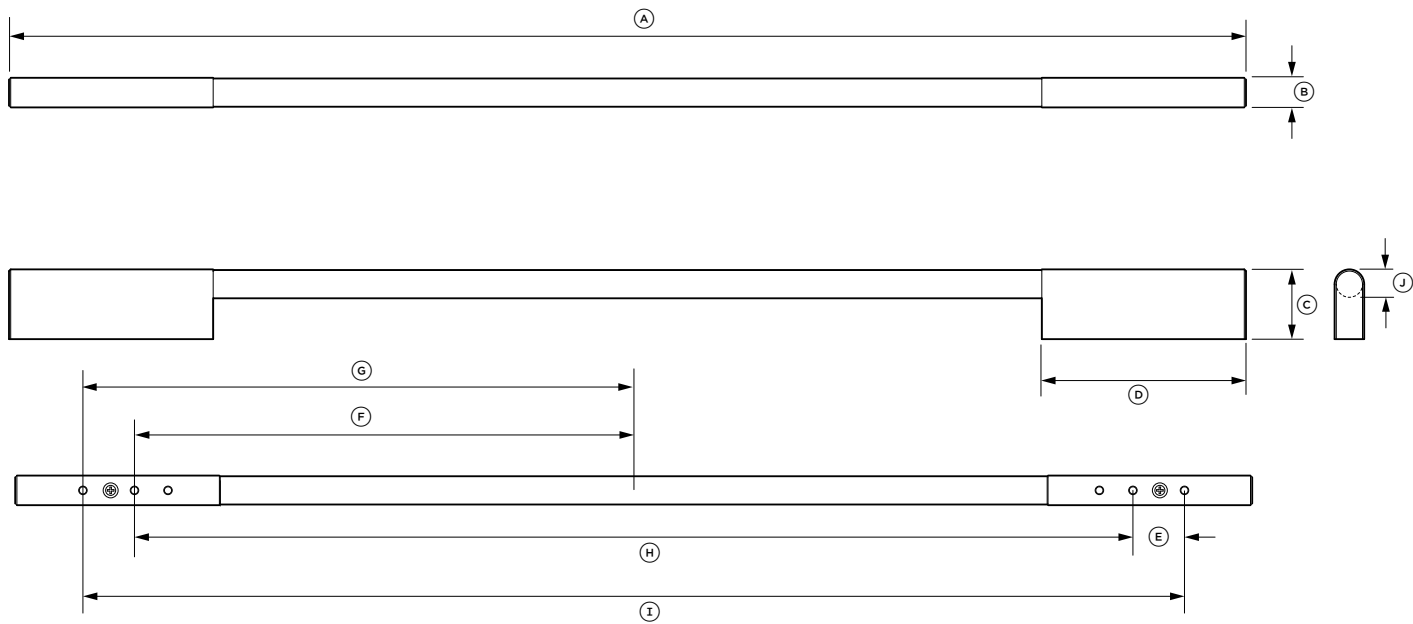

Model no:
AHS-ASBI-A


For models
RS90
Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of handle	727
Ⓑ Overall depth of handle	17
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	293
Ⓖ Distance from centreline to outer attachment holes	324
Ⓗ Distance between inner attachment holes	587
Ⓘ Distance between outer attachment holes	647
Ⓙ Thickness of handle rail	17

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

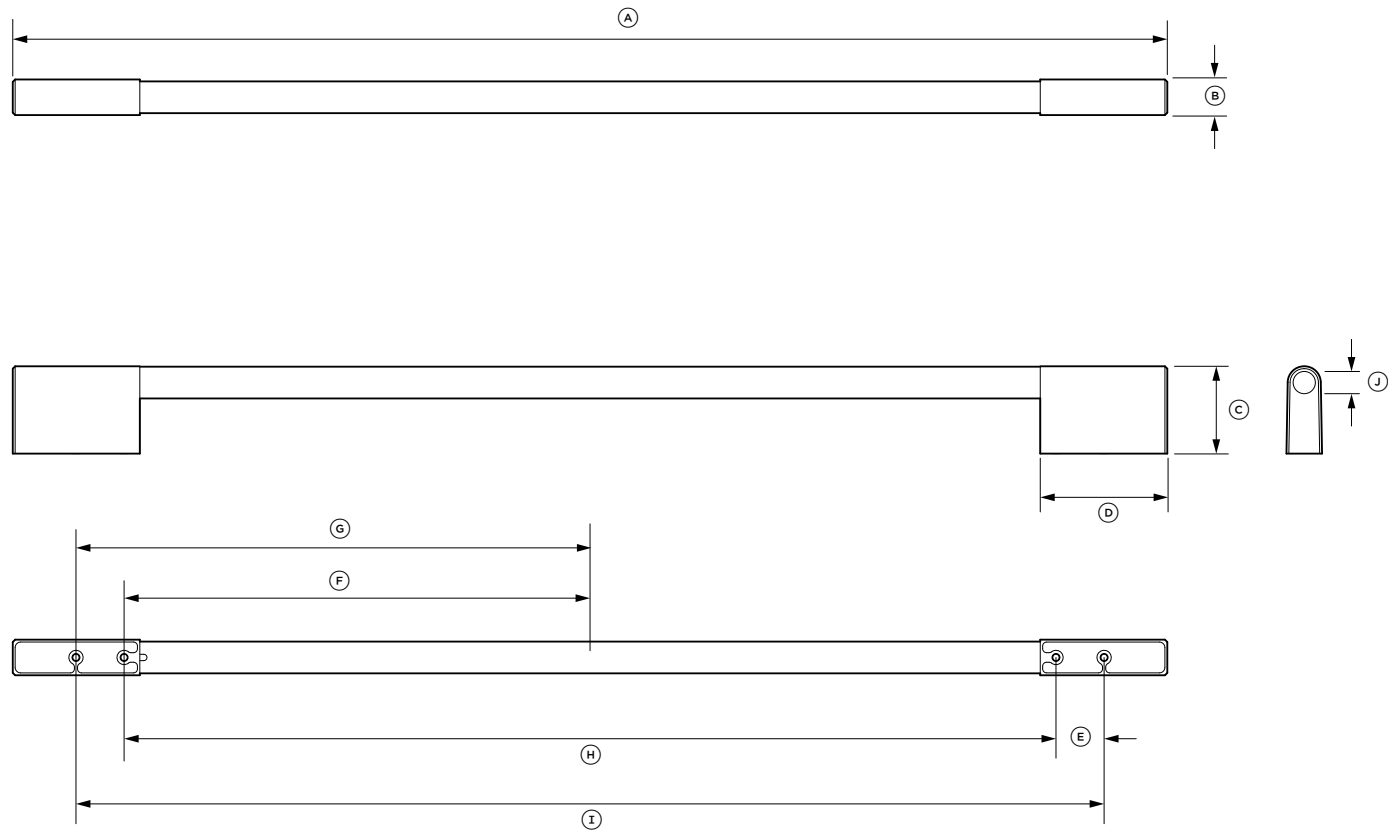

Model no:
AHCLRD90A


For models
RS90 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of handle	727
Ⓑ Overall depth of handle	22
Ⓒ Overall height of handle	56
Ⓓ Length of off-stand	80
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	329
Ⓖ Distance from centreline to outer attachment holes	359
Ⓗ Distance between inner attachment holes	658
Ⓘ Distance between outer attachment holes	719
⓵ Thickness of handle rail	20

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETY / PRODUCT DATUM
----- INDICATES CABINETY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

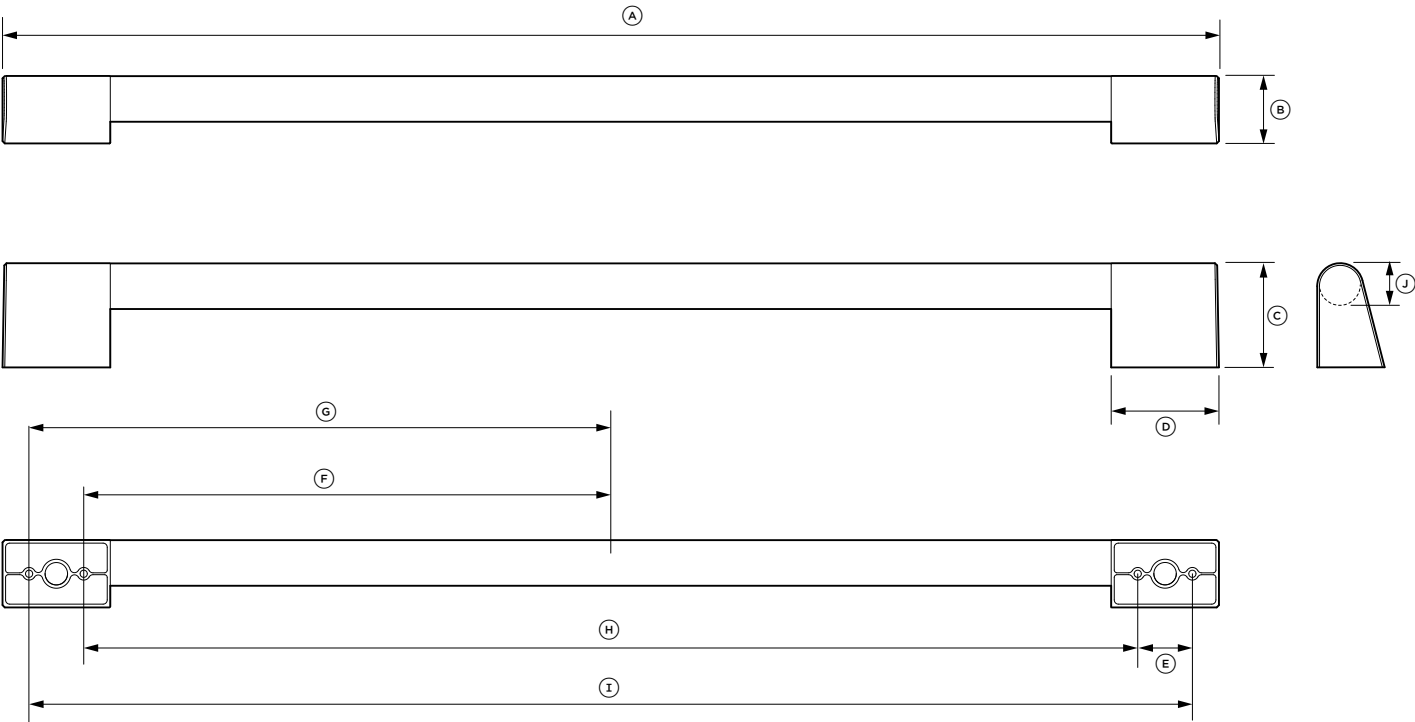

Model no:
AHP3RD90A


For models
RS90A
Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of handle	677
Ⓑ Overall depth of handle	37
Ⓒ Overall height of handle	58
Ⓓ Length of off-stand	60
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	293
Ⓖ Distance from centreline to outer attachment holes	323
Ⓗ Distance between inner attachment holes	586
Ⓘ Distance between outer attachment holes	647
⓵ Thickness of handle rail	25

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

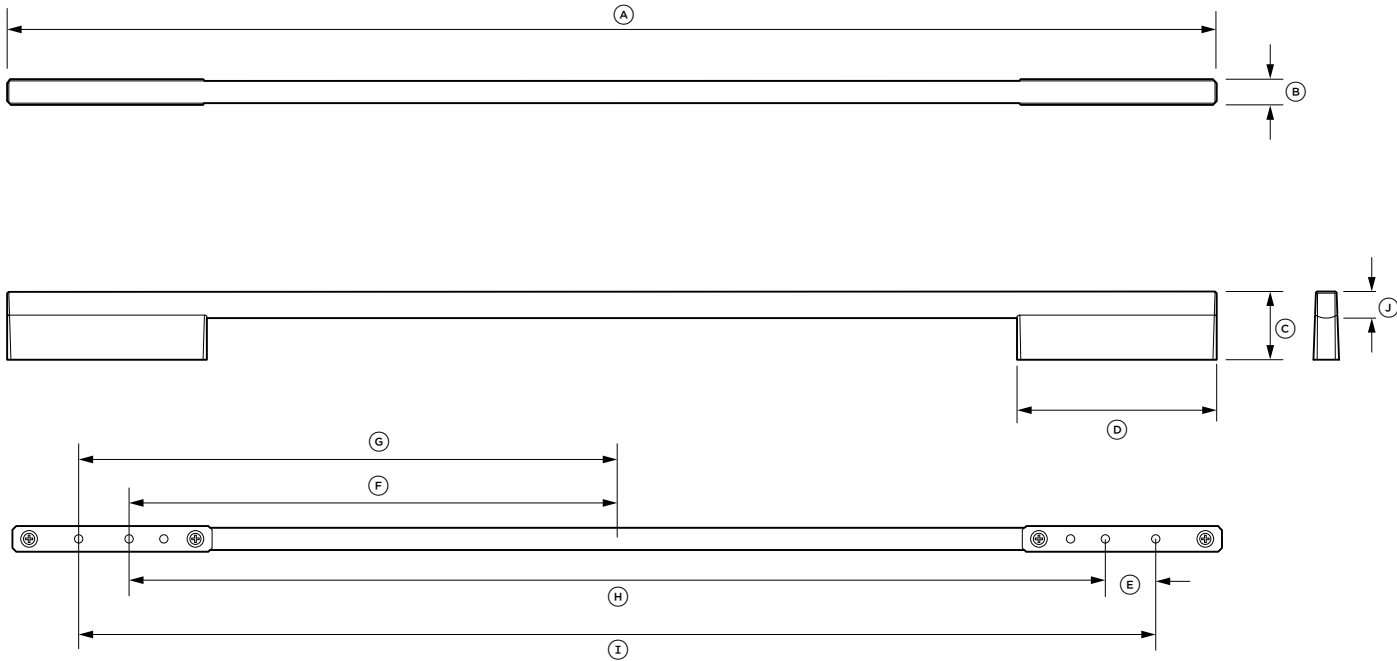

Model no:
Square Fine Handle Aluminium- AHD5RD80A
Black Square Fine Handle - AHD5RD80AB


For models
RS80 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles Overall length of drawer handles	727 679
Ⓑ Overall depth of handle	15
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes Drawer handle distance from centreline to inner attachment holes	293 269
Ⓖ Door handle distance from centreline to outer attachment holes Drawer handle distance from centreline to outer attachment holes	324 299
Ⓗ Door handle distance between inner attachment holes Drawer handle distance between inner attachment holes	587 538
Ⓘ Door handle distance between outer attachment holes Drawer handle distance between outer attachment holes	647 599
Ⓣ Thickness of handle rail	16

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

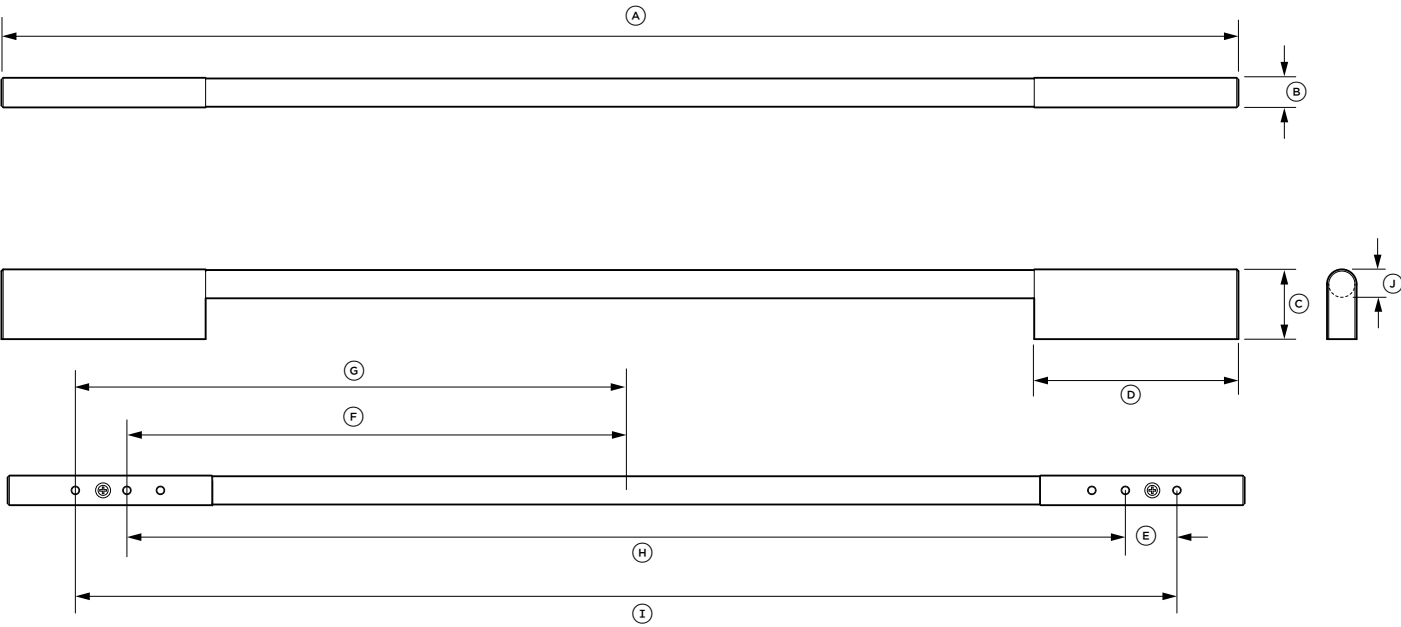

Model no:
AHSRS80A


For models
RS80
Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles	727
Overall length of drawer handles	679
Ⓑ Overall depth of handle	17
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes	293
Drawer handle distance from centreline to inner attachment holes	269
Ⓖ Door handle distance from centreline to outer attachment holes	324
Drawer handle distance from centreline to outer attachment holes	300
Ⓗ Door handle distance between inner attachment holes	587
Drawer handle distance between inner attachment holes	539
Ⓘ Door handle distance between outer attachment holes	647
Drawer handle distance between outer attachment holes	599
Ⓙ Thickness of handle rail	17

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

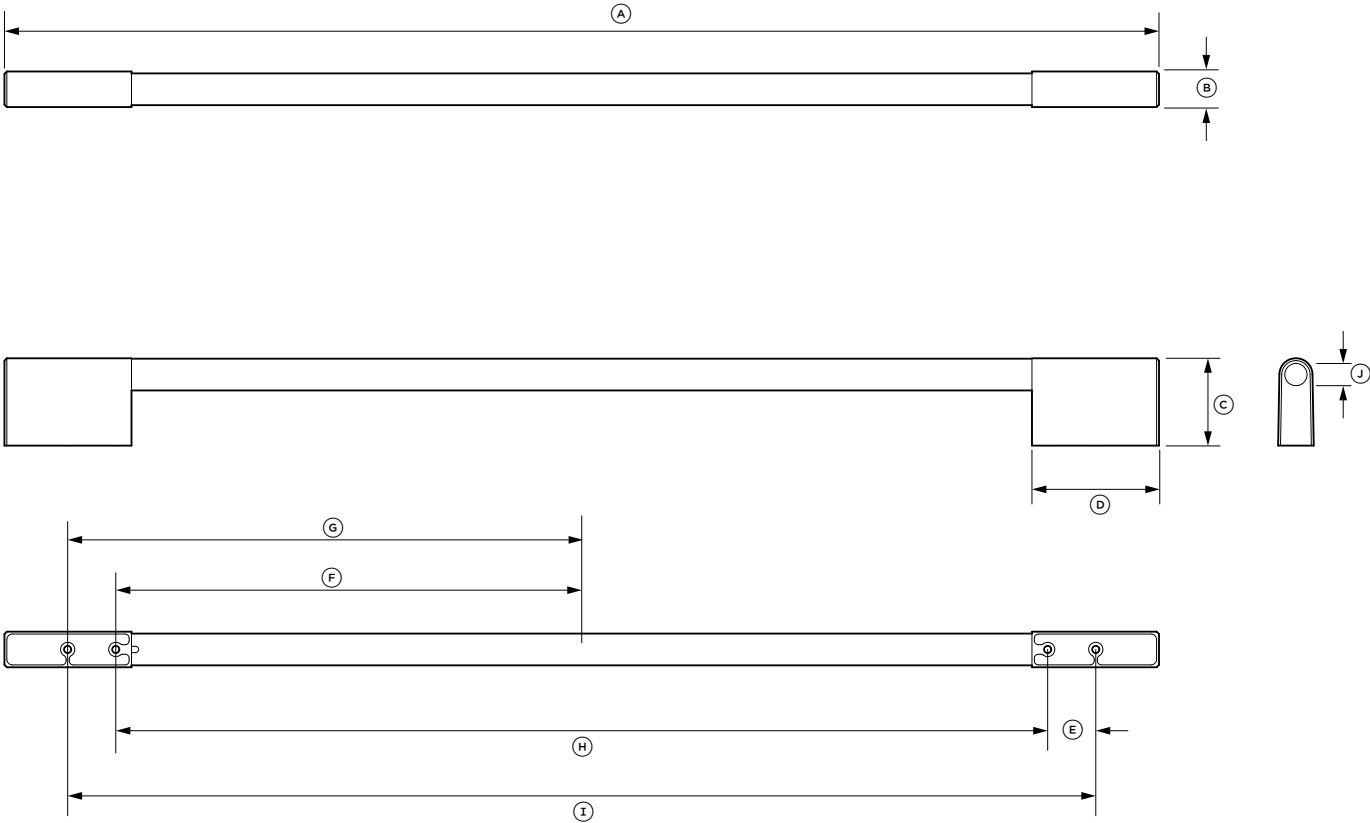

Model no:
AHCLRD80A


For models
RS80
Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles Overall length of drawer handles	727 679
Ⓑ Overall depth of handle	22
Ⓒ Overall height of handle	56
Ⓓ Length of off-stand	80
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes Drawer handle distance from centreline to inner attachment holes	329 269
Ⓖ Door handle distance from centreline to outer attachment holes Drawer handle distance from centreline to outer attachment holes	359 300
Ⓗ Door handle distance between inner attachment holes Drawer handle distance between inner attachment holes	658 539
Ⓘ Door handle distance between outer attachment holes Drawer handle distance between outer attachment holes	719 599
⓵ Thickness of handle rail	20

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

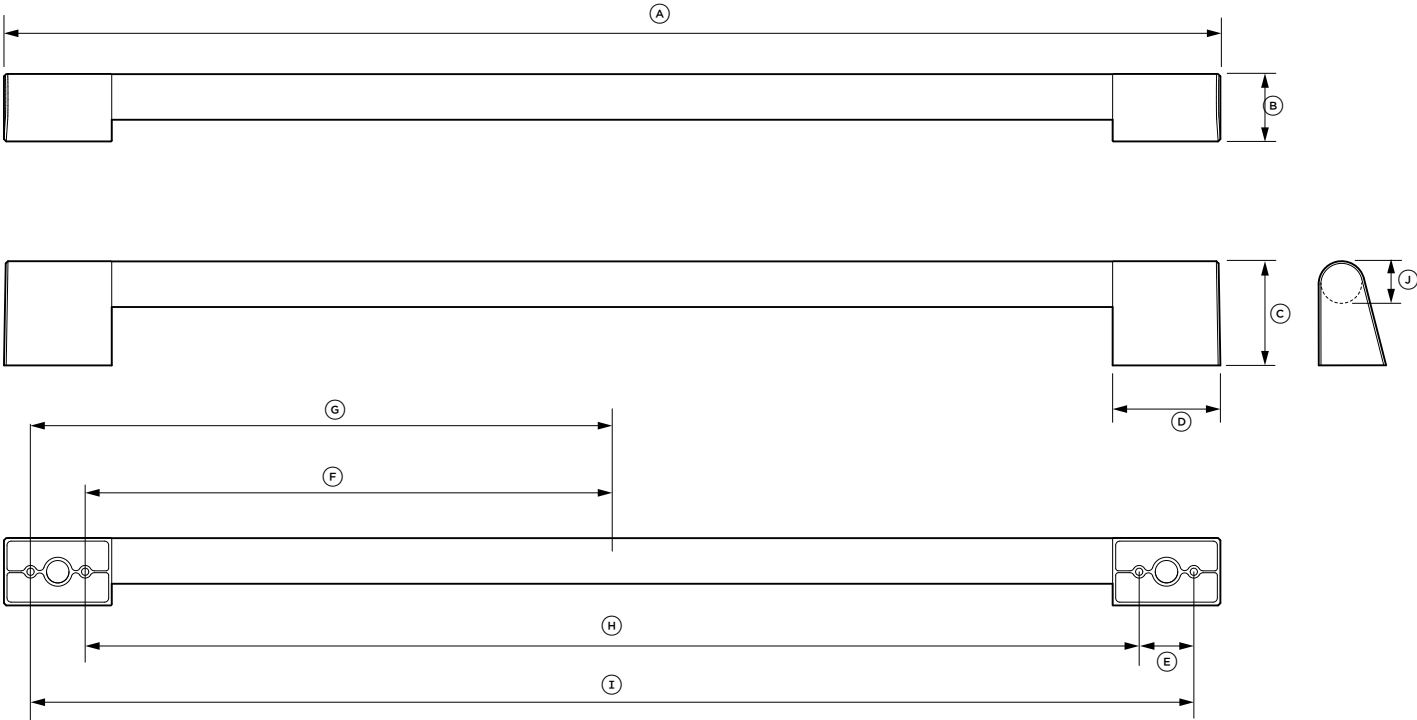

Model no:
AHP3RD80A

For models
RS80
Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles Overall length of drawer handles	677 629
Ⓑ Overall depth of handle	37
Ⓒ Overall height of handle	58
Ⓓ Length of off-stand	60
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes Drawer handle distance from centreline to inner attachment holes	293 269
Ⓖ Door handle distance from centreline to outer attachment holes Drawer handle distance from centreline to outer attachment holes	323 300
Ⓗ Door handle distance between inner attachment holes Drawer handle distance between inner attachment holes	586 538
Ⓙ Door handle distance between outer attachment holes Drawer handle distance between outer attachment holes	647 599
⓵ Thickness of handle rail	25

Assumes 19mm door panels on adjacent cabinetry
Handle kit contains 2 door and 1 drawer handle.
M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM
----- INDICATES CABINETRY CLEARANCES
----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

