

## 60CM MINIMAL OVENS AND COMPANIONS

---

# PLANNING GUIDE

---

**SERIES 9 PYROLYTIC OVEN** | OB60SAMPUB5, OB60SAMPUG5

**SERIES 11 COMBI-STEAM OVEN** | OS60SAMHUB5, OS60SAMHUG5

**SERIES 9 COMBI-STEAM OVEN** | OS60SAMVUB5, OS60SAMVUG5

**SERIES 11 COMPACT COMBI-STEAM OVEN** | OS60NAMHUB5, OS60NAMHUG5

**SERIES 9 COMPACT COMBI-STEAM OVEN** | OS60NAMVUB5, OS60NAMVUG5

**SERIES 9 BUILT-IN COFFEE MAKER** | EB60MSB3, EB60MSG3

**SERIES 9 WARMING DRAWER** | WB60SMB3, WB60SMG3

**SERIES 9 INTEGRATED WARMING DRAWER** | WB60SDEI3

**SERIES 9 VACUUM SEAL DRAWER** | VB60SMB3, VB60SMG3

**SERIES 9 INTEGRATED VACUUM SEAL DRAWER** | VB60SDEI3

**INTRODUCTION**

This comprehensive planning guide provides you with the framework and tools to achieve your desired design outcome with Fisher & Paykel appliances. In this guide, you will find a range of conceptual, detailed, and dimensional product information to bring your ideas to life and create spaces that truly reflect your vision.

**SUPPORT**

For additional design planning and installation support please contact the Fisher & Paykel design support team.  
**designsupport@fisherpaykel.com**

**NOTES**

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Refer to our website [fisherpaykel.com](http://fisherpaykel.com) for the latest document version. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Specific installation guidance will be available with the product on delivery and on our website.

CONCEPT DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE
<b>DESIGN CHOICE</b>					
Styles	4				
Minimal Style	5				
Installation Options	6				
Overview	7				
<b>SPECIFICATION GUIDE</b>					
Pyrolytic Oven	9				
Combi-Steam Oven	10				
Combi-Steam Oven	11				
Compact Combi-Steam Oven	12				
Compact Combi-Steam Oven	13				
Built-in Coffee Maker	14				
Warming Drawer	15				
Integrated Warming Drawer	16				
Vacuum Seal Drawer	17				
Integrated Vacuum Seal Drawer	18				
Dimensions - Ovens	19				
Dimensions - Compact Ovens and Built-in Coffee Maker	20				
Dimensions - Drawers	21				
Services	22				

## DESIGN CHOICE



**MINIMAL STYLE - HANDLELESS**



**MINIMAL STYLE**



**CONTEMPORARY STYLE**

Celebrating a singular aesthetic to blend seamlessly into the kitchen, Minimal style ovens feature subtle textural and tonal contrasts for a sense of refinement and purity.

Defined by clean lines and timeless design cues, Contemporary style ovens bring a sense of balance and refinement. A versatile aesthetic that complements a range of kitchen styles.

This Planning Guide is for the Minimal Style featuring 60cm Ovens and Companions. For information on other styles, please visit the Fisher and Paykel website. To see what models are available, head to the 'Overview' section in this Planning Guide.


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

FINISH



OVENS

PYROLYTIC COMBI-STEAM

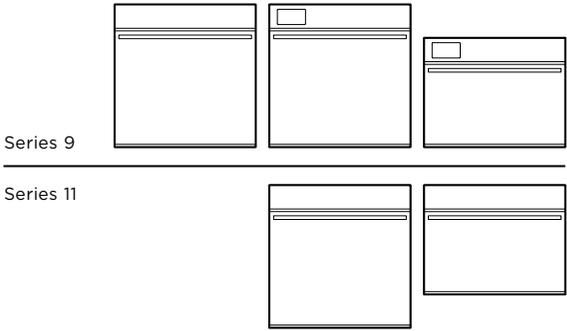


Series 9  
Series 11

**SERIES 11 - COMBI-STEAM OVENS**

The Series 11 Combi-Steam Ovens have an internal water tank in the control panel.


COMPANIONS

BUILT-IN COFFEE MAKER WARMING DRAWER VACUUM SEAL DRAWER




\*Integrated model, panel ready for a custom front panel.

INSTALLATION OPTIONS

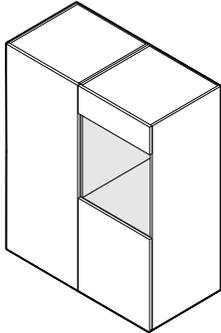

Installation in wall

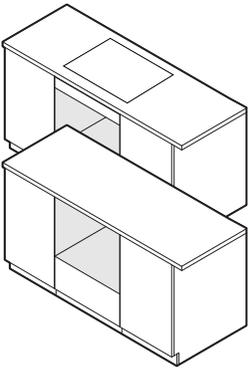

Installation under-bench

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

**CONSIDERATIONS**

Different configurations possible, consider heights for grid and row installations.

**STACK HEIGHT**


Stack Height is overall product height with minimum clearance above appliance front panel to upper cabinetry front panel or appliance.

**STACKED INSTALLATION**


**GRID INSTALLATION**

**ROW INSTALLATION**


Stack Height  
600mm

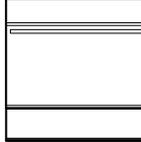


Stack Height  
600mm

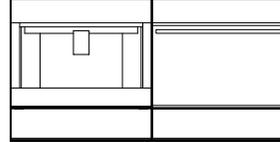


Stack Height  
600mm

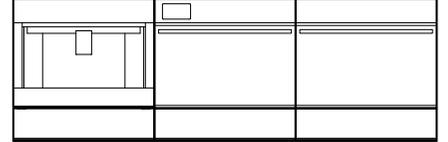


Stack Height  
920mm

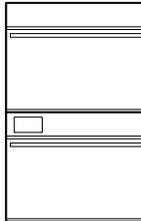


Stack Height  
600mm

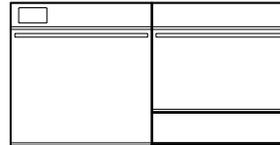


Stack Height  
600mm

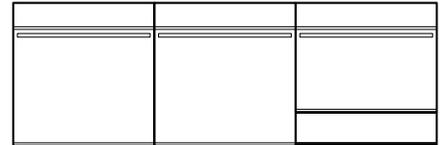


Stack Height  
1200mm

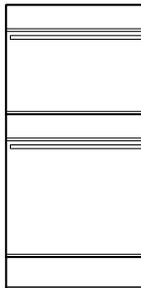

Stack Height  
1200mm

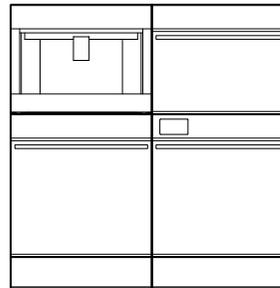

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

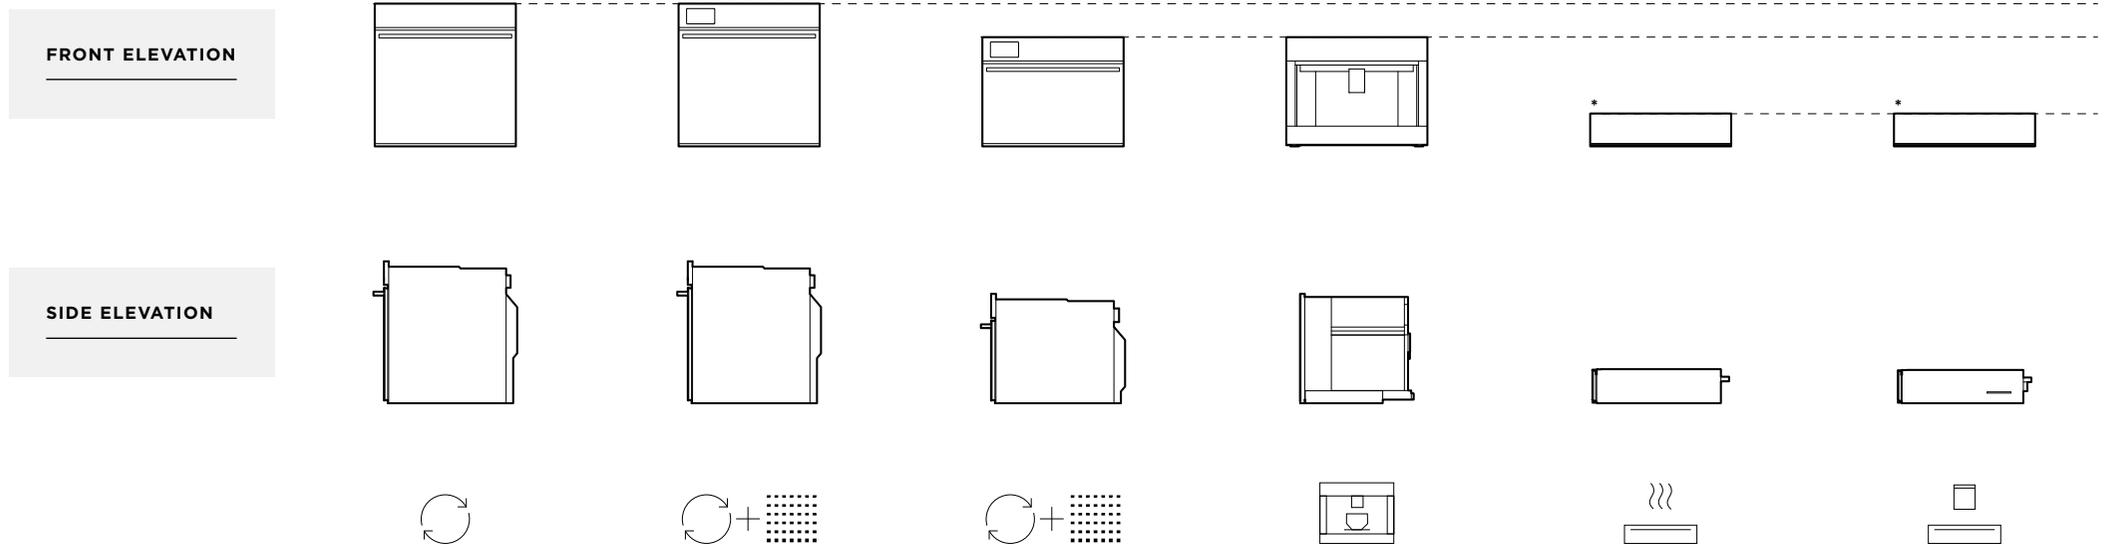

	PYROLYTIC OVEN	COMBI-STEAM OVEN	COMPACT COMBI-STEAM OVEN	BUILT-IN COFFEE	WARMING DRAWER	VACUUM SEAL DRAWER
Black Models	Series 9 OB60SAMPUB5	Series 11 OS60SAMHUB5 Series 9 OS60SAMVUB5	Series 11 OS60NAMHUB5 Series 9 OS60NAMVUB5	Series 9 EB60MSB3	Series 9 WB60SMB3	Series 9 VB60SMB3
Grey Models	Series 9 OB60SAMPUG5	Series 11 OS60SAMHUG5 Series 9 OS60SAMVUG5	Series 11 OS60NAMHUG5 Series 9 OS60NAMVUG5	Series 9 EB60MSG3	Series 9 WB60SMG3	Series 9 VB60SMG3
Integrated Models	-	-	-	-	Series 9 WB60SDEI3	Series 9 VB60SDEI3
Interface	6.8" Touchscreen	6.8" Touchscreen	6.8" Touchscreen	4.3" Touchscreen	-	-
Overall Height	598mm	598mm	458mm	458mm	140mm	140mm
Overall Width	596mm	596mm	596mm	596mm	596mm	596mm
Control Panel/Front Panel Thickness	20mm	20mm	20mm	20mm	20mm	20mm

\*Integrated models available.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

# **SPECIFICATION GUIDE**

## SERIES 9 & 11



Black Pyrolytic Oven



Grey Pyrolytic Oven

**OVERVIEW**

Designed to complement Minimal style appliances, this oven delivers a seamless, flush finish – ideal for modern kitchen designs. The pyrolytic self-cleaning function breaks down food residue for an easy clean, while precise cooking methods with temperature and heat type recommendations for a wide range of food types are easily accessed via the large touch screen.

**PRODUCTS**

**OB60SAMPUB5 - Black**  
60cm Series 9 Minimal Pyrolytic Oven

**OB60SAMPUG5 - Grey**  
60cm Series 9 Minimal Pyrolytic Oven

**SERIES & STYLE**

Series 9  
Minimal

**ACCESSORIES**

- ① Pyro-proof Side Ladders
- ② Full Extension Sliding Shelf (x2)
- ③ Multi-functional Air Fry Tray

**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Self-cleaning pyrolytic function breaks down food residue for an easy clean
- ③ Premium soft open and close door
- ④ Generous 72L useable capacity
- ⑤ Large 6.8" touchscreen is intuitive and easy to use
- ⑥ Create perfect results with precise cooking methods, with temperature and heat type recommendations for your food type
- ⑦ Moisture control and even heat distribution thanks to ActiveVent™ and AeroTech™ technology
- ⑧ Includes a wired temperature sensor for real-time monitoring of cooking temperatures

**ACCESSORIES**

- ④ Roasting Dish
- ⑤ Flat Brushed Baking Tray
- ⑥ Wired Temperature Sensor

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)



Black Combi-Steam Oven



Grey Combi-Steam Oven

**OVERVIEW**

Designed to complement Minimal style appliances, this Combi-Steam oven delivers a seamless, flush finish - ideal for modern kitchen designs. With versatile cooking options including steam or convection, plus a Steam Clean function for easy maintenance. Precise cooking methods with temperature and heat type recommendations for a wide range of food types are easily accessed via the large touch screen.

**PRODUCTS**

**OS60SAMHUB5 - Black**  
60cm Series 11 Minimal Combi-Steam Oven

**OS60SAMHUG5 - Grey**  
60cm Series 11 Minimal Combi-Steam Oven

**SERIES & STYLE**

Series 11  
Minimal

**ACCESSORIES**

- ① Chrome Side Ladders
- ② Full Extension Sliding Shelf (x2)
- ③ Multi-functional Air Fry Tray
- ④ Roasting Dish
- ⑤ Flat Brushed Baking Tray
- ⑥ Large Perforated Steam Dish

**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Versatile cooking options with steam or convection heat for optimal results
- ③ Premium soft open and close door
- ④ Generous 72L useable capacity
- ⑤ Large 6.8" touchscreen is intuitive and easy to use
- ⑥ Create perfect results with precise cooking methods, with temperature and heat type recommendations for your food type
- ⑦ Moisture control and even heat distribution thanks to ActiveVent™ and AeroTech™ technology
- ⑧ Steam Clean function ensures a spotless oven with minimal effort
- ⑨ Includes a wired temperature sensor for real-time monitoring of cooking temperatures

**ACCESSORIES**

- ⑦ Small Perforated Steam Dish
- ⑧ Large Steam Dish
- ⑨ Wired Temperature Sensor
- ⑩ Descale Solution x2 sachets (Part 580295)

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)



**OVERVIEW**

Designed to complement Minimal style appliances, this Combi-Steam oven delivers a seamless, flush finish - ideal for modern kitchen designs. With versatile cooking options including steam or convection, plus a Steam Clean function for easy maintenance. Precise cooking methods with temperature and heat type recommendations for a wide range of food types are easily accessed via the large touch screen.

**PRODUCTS**

**OS60SAMVUB5 - Black**  
60cm Series 9 Minimal Combi-Steam Oven

**OS60SAMVUG5 - Grey**  
60cm Series 9 Minimal Combi-Steam Oven

**SERIES & STYLE**

Series 9  
Minimal

**ACCESSORIES**

- ① Chrome Side Ladders
- ② Telescopic Sliding Runners
- ③ Wire Shelf
- ④ Multi-functional Air Fry Tray
- ⑤ Roasting Dish
- ⑥ Flat Brushed Baking Tray

**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Versatile cooking options with steam or convection heat for optimal results
- ③ Premium soft open and close door
- ④ Generous 72L useable capacity
- ⑤ Large 6.8" touchscreen is intuitive and easy to use
- ⑥ Create perfect results with precise cooking methods, with temperature and heat type recommendations for your food type
- ⑦ Moisture control and even heat distribution thanks to ActiveVent™ and AeroTech™ technology
- ⑧ Steam Clean function ensures a spotless oven with minimal effort
- ⑨ Includes a wired temperature sensor for real-time monitoring of cooking temperatures

**ACCESSORIES**

- ⑦ Large Perforated Steam Dish
- ⑧ Small Perforated Steam Dish
- ⑨ Large Steam Dish
- ⑩ Wired Temperature Sensor
- ⑪ Descale Solution x2 sachets (Part 580295)



Grey Combi-Steam Oven

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)



**OVERVIEW**

Designed to complement Minimal style appliances, this Combi-Steam oven delivers a seamless, flush finish - ideal for modern kitchen designs. With versatile cooking options including steam or convection, plus a Steam Clean function for easy maintenance. Precise cooking methods with temperature and heat type recommendations for a wide range of food types are easily accessed via the large touch screen.

**PRODUCTS**

**OS60NAMHUB5 - Black**  
60cm Series 11 Minimal Compact Combi-Steam Oven

**OS60NAMHUG5 - Grey**  
60cm Series 11 Minimal Compact Combi-Steam Oven

**SERIES & STYLE**

Series 11  
Minimal

**ACCESSORIES**

- ① Chrome Side Ladders
- ② Full Extension Sliding Shelf
- ③ Telescopic Sliding Runners
- ④ Wire Shelf
- ⑤ Multi-functional Air Fry Tray
- ⑥ Roasting Dish
- ⑦ Flat Brushed Baking Tray
- ⑧ Large Perforated Steam Dish

**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Versatile cooking options with steam or convection heat for optimal results
- ③ Premium soft open and close door
- ④ Compact 45L useable capacity
- ⑤ Large 6.8" touchscreen is intuitive and easy to use
- ⑥ Create perfect results with precise cooking methods, with temperature and heat type recommendations for your food type
- ⑦ Moisture control and even heat distribution thanks to ActiveVent™ and AeroTech™ technology
- ⑧ Steam Clean function ensures a spotless oven with minimal effort
- ⑨ Includes a wired temperature sensor for real-time monitoring of cooking temperatures

**ACCESSORIES**

- ⑨ Small Perforated Steam Dish
- ⑩ Large Steam Dish
- ⑪ Wired Temperature Sensor
- ⑫ Descale Solution x2 sachets (Part 580295)



The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)



**OVERVIEW**

Designed to complement Minimal style appliances, this Combi-Steam oven delivers a seamless, flush finish - ideal for modern kitchen designs. With versatile cooking options including steam or convection, plus a Steam Clean function for easy maintenance. Precise cooking methods with temperature and heat type recommendations for a wide range of food types are easily accessed via the large touch screen.

**PRODUCTS**

**OS60NAMVUB5- Black**  
60cm Series 9 Minimal Compact Combi-Steam Oven

**OS60NAMVUG5 - Grey**  
60cm Series 9 Minimal Compact Combi-Steam Oven

**SERIES & STYLE**

Series 9  
Minimal

**ACCESSORIES**

- ① Chrome Side Ladders
- ② Telescopic Sliding Runners
- ③ Wire Shelf
- ④ Multi-functional Air Fry Tray
- ⑤ Roasting Dish

**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Versatile cooking options with steam or convection heat for optimal results
- ③ Premium soft open and close door
- ④ Compact 45L useable capacity
- ⑤ Large 6.8" touchscreen is intuitive and easy to use
- ⑥ Create perfect results with precise cooking methods, with temperature and heat type recommendations for your food type
- ⑦ Moisture control and even heat distribution thanks to ActiveVent™ and AeroTech™ technology
- ⑧ Steam Clean function ensures a spotless oven with minimal effort
- ⑨ Includes a wired temperature sensor for real-time monitoring of cooking temperatures

**ACCESSORIES**

- ⑥ Large Perforated Steam Dish
- ⑦ Small Perforated Steam Dish
- ⑧ Large Steam Dish
- ⑩ Wired Temperature Sensor
- ⑪ Descale Solution x2 sachets (Part 580295)



The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com



Black Built-in Coffee Maker



Grey Built-in Coffee Maker

**OVERVIEW**

Designed to complement Minimal style appliances, this Coffee Maker delivers a seamless, flush finish – ideal for modern kitchen designs. It learns your preferences over time, offering personalised coffee at the touch of a button. With precise grinding, creamy milk frothing, and effortless self-cleaning, it brings barista-quality coffee home.

**PRODUCTS****EB60MSB3 - Black**

60cm Series 9 Minimal Built-in Coffee Maker

**EB60MSG3 - Grey**

60cm Series 9 Minimal Built-in Coffee Maker

**SERIES & STYLE**

Series 9

Minimal


**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Intuitive touch display brews a perfect cup of coffee at the touch of a button
- ③ Programmable timer turns on the Coffee Maker at the ideal time each day
- ④ Personalised coffee and smart self-learning menu preferences with 13 functions to suit any taste
- ⑤ Allows you to prepare hot milk or creamy froth in seconds
- ⑥ Stainless steel conical burr grinder with 13 coarseness positions
- ⑦ 15 bar pump pressure
- ⑧ Self-cleaning function and easy-to-empty coffee grounds container and drip tray
- ⑨ 2.4L water tank capacity

**ACCESSORIES**

- ① Milk Container (Auto-Froth)
- ② Steam Wand
- ③ Coffee Spoon
- ④ Cleaning Brush
- ⑤ Descaler Solution - 1 bottle
- ⑥ Water Hardness Indicator Paper
- ⑦ Water Filter

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

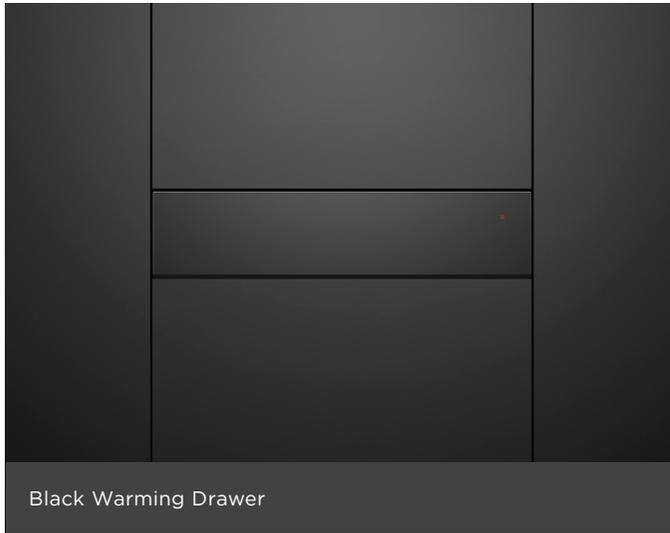**OVERVIEW**

Designed to complement Minimal style appliances, this Warming Drawer delivers a seamless, flush finish – ideal for modern kitchen designs. Featuring a push-to-open mechanism, intuitive touch controls, and a smooth glass base for easy cleaning. With six tailored programmes and space for 6 place settings, it keeps meals ready to serve.

**PRODUCTS****WB60SMB3 - Black**

60cm Series 9 Minimal Warming Drawer

**WB60SMG3 - Grey**

60cm Series 9 Minimal Warming Drawer

**SERIES & STYLE**


Series 9

Minimal

**FEATURES**

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Push-to-open drawer, designed for added convenience
- ③ Simple and intuitive touch controls for effortless operation
- ④ Easy-to-clean glass base
- ⑤ Automatic switch-off and delayed start functionality to help keep dishes warm until it is time to serve
- ⑥ Room for 6 standard-sized place settings
- ⑦ Six tailored programmes including Warming, Proofing, Dehydrating, and Slow Cooking offer convenience and flexibility

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](https://fisherpaykel.com)

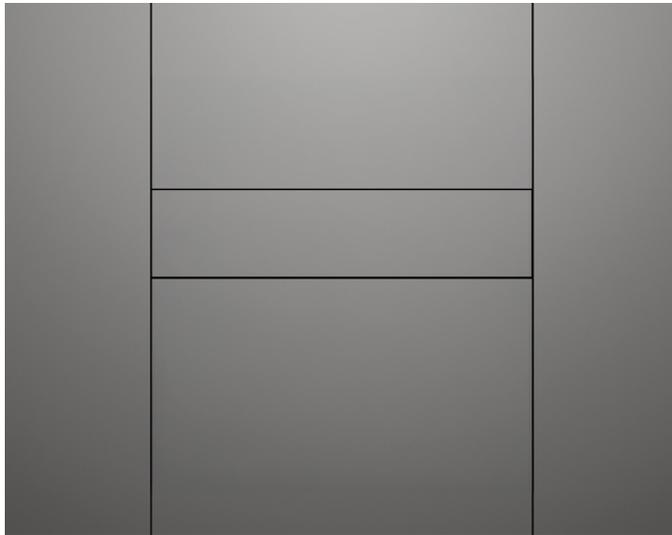**OVERVIEW**

Panel ready design allows for seamless integration and customisation of this Warming Drawer with kitchen cabinetry for a cohesive kitchen look. Featuring a push-to-open mechanism, intuitive touch controls, and a smooth glass base for easy cleaning. With six tailored programmes and space for 6 place settings, it keeps meals ready to serve.

**PRODUCTS**

**WB60SDEI3**  
60cm Series 9 Integrated Warming Drawer


**SERIES & STYLE**

Series 9  
Integrated

**FEATURES**

- ① Panel ready design allows for seamless integration and customisation with kitchen cabinetry for a cohesive kitchen look
- ② Push-to-open drawer, designed for added convenience
- ③ Simple and intuitive touch controls for effortless operation
- ④ Easy-to-clean glass base
- ⑤ Automatic switch-off and delayed start functionality to help keep dishes warm until it is time to serve
- ⑥ Room for 6 standard-sized place settings
- ⑦ Six tailored programmes including Warming, Proofing, Dehydrating, and Slow Cooking offer convenience and flexibility

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](https://fisherpaykel.com)

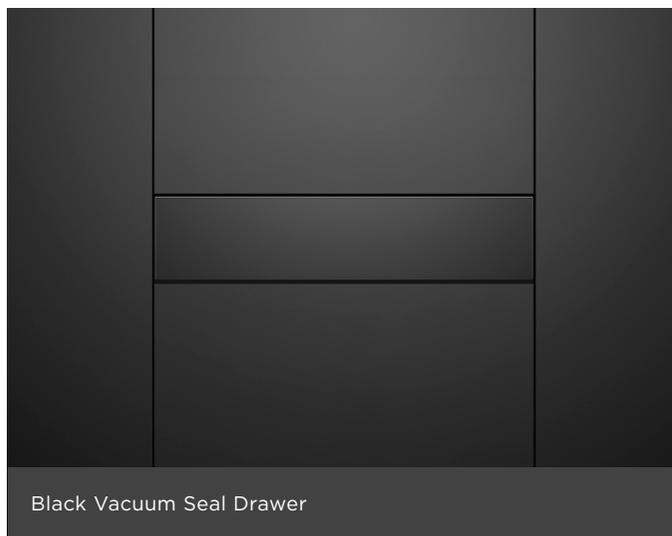

### OVERVIEW

Designed to complement Minimal style appliances, this Vacuum Seal Drawer delivers a seamless, flush finish – ideal for modern kitchen designs. A push-to-open mechanism and intuitive touch controls offer effortless use, while three vacuum and heat sealing levels support sous vide preparation, marinating, and food storage, using reusable and BPA-free food-grade bags.

### PRODUCTS

#### VB60SMB3 - Black

60cm Series 9 Minimal Vacuum Seal Drawer


#### VB60SMG3 - Grey

60cm Series 9 Minimal Vacuum Seal Drawer

### SERIES & STYLE

Series 9

Minimal

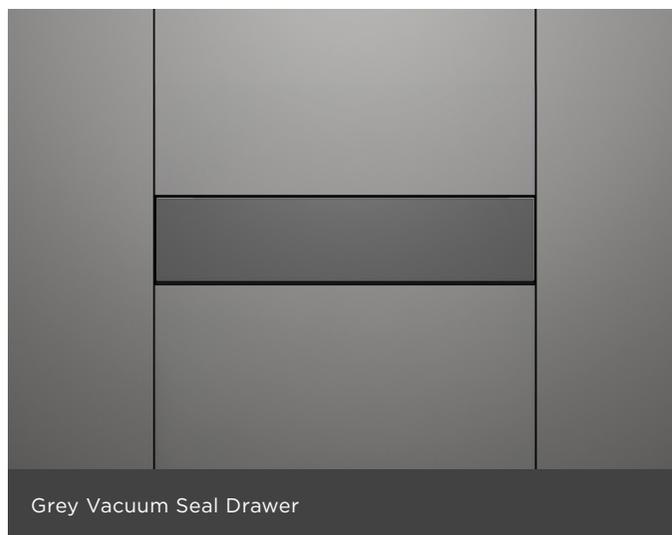


### FEATURES

- ① Minimal style is designed to fit flush with cabinetry. Matches our Minimal style family of appliances
- ② Push-to-open drawer, designed for added convenience
- ③ Simple and intuitive touch controls for effortless operation
- ④ Easy-to-clean glass base
- ⑤ Three levels of vacuum and heat sealing - for easy re-sealing, food portioning, marinating, storage and extending shelf life
- ⑥ Allows effortless preparation for sous vide cooking
- ⑦ Our food-grade, BPA-free bags are an excellent storage option – these can be re-used if sealed and cut appropriately

### ACCESSORIES

- ① External Vacuuming Accessory Kit
- ② Large BPA-free Vacuum Seal Bags - 50 bags (Part 793034)
- ③ Small size BPA-free Vacuum Seal Bags - 50 bags (Part 793033)

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

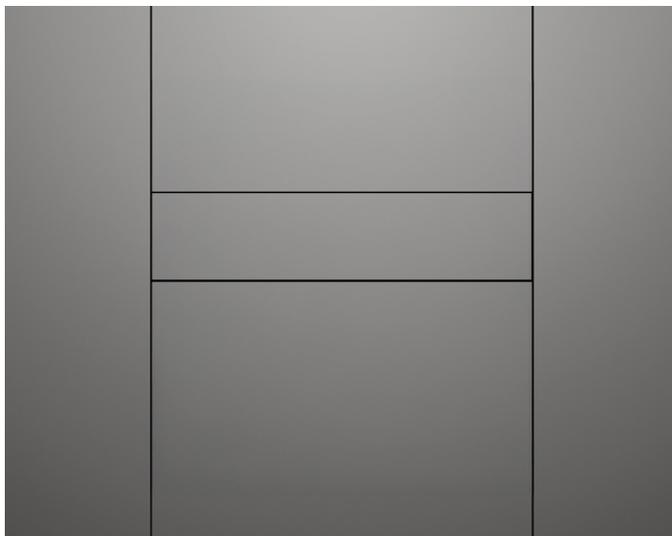**OVERVIEW**

Panel ready design allows for seamless integration and customisation of this Vacuum Seal Drawer with kitchen cabinetry for a cohesive kitchen look. A push-to-open mechanism and intuitive touch controls offer effortless use, while three vacuum and heat sealing levels support sous vide preparation, marinating, and food storage, using reusable and BPA-free food-grade bags.

**PRODUCTS****VB60SDEI3**

60cm Series 9 Integrated Vacuum Seal Drawer

**SERIES & STYLE**

Series 9  
Integrated

**FEATURES**

- ① Panel ready design allows for seamless integration and customisation with kitchen cabinetry for a cohesive kitchen look
- ② Push-to-open drawer, designed for added convenience
- ③ Simple and intuitive touch controls for effortless operation
- ④ Easy-to-clean glass base
- ⑤ Three levels of vacuum and heat sealing - for easy re-sealing, food portioning, marinating, storage and extending shelf life
- ⑥ Allows effortless preparation for sous vide cooking
- ⑦ Our food-grade, BPA-free bags are an excellent storage option – these can be re-used if sealed and cut appropriately





**ACCESSORIES**

- ① External Vacuuming Accessory Kit
- ② Large BPA-free Vacuum Seal Bags - 50 bags (Part 793034)
- ③ Small size BPA-free Vacuum Seal Bags - 50 bags (Part 793033)

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

**PRODUCT DIMENSIONS**

**CAVITY DIMENSIONS**

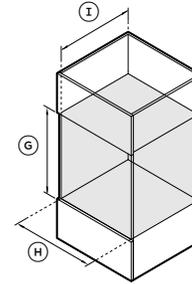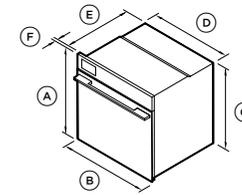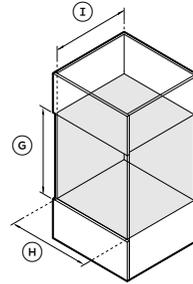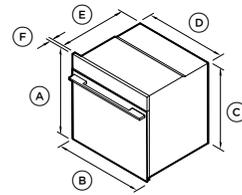

PRODUCT DIMENSIONS	
(A) Overall height	598
(B) Overall width	596
(C) Chassis height	575
(D) Chassis width	556
(E) Chassis depth	545
(F) Control panel thickness	20
Depth with door fully open*	463

\*Measured from front of control panel.

CAVITY DIMENSIONS	
(G) Minimum inside height of cavity	580
(H) Minimum inside width of cavity	560
(I) Minimum inside depth of cavity*	550
Recommended cabinet height	600
Recommended cabinet width	600

\*Measured from front of chassis.

PYROLYTIC OVEN	
OB60SAMPUB5, OB60SAMPUG5	
	mm
	598
	596
	575
	556
	545
	20
	463

PYROLYTIC OVEN	
OB60SAMPUB5, OB60SAMPUG5	
	mm
	580
	560
	550
	600
	600





COMBI-STEAM OVEN	
OS60SAMHUB5, OS60SAMHUG5, OS60SAMVUB5, OS60SAMVUG5	
	mm
	598
	596
	575
	556
	545
	20
	463

COMBI-STEAM OVEN	
OS60SAMHUB5, OS60SAMHUG5, OS60SAMVUB5, OS60SAMVUG5	
	mm
	580
	560
	550
	600
	600

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

**PRODUCT DIMENSIONS**

**CAVITY DIMENSIONS**

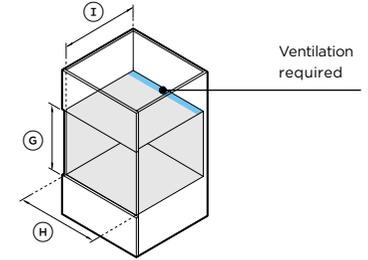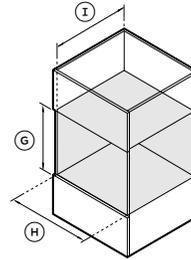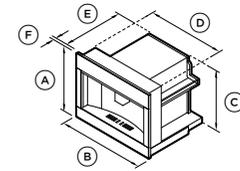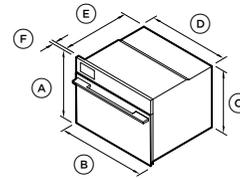

**PRODUCT DIMENSIONS**

(A) Overall height	
(B) Overall width	
(C) Chassis height	
(D) Chassis width	
(E) Chassis depth	
(F) Control panel thickness	
Depth with door/drawer fully open*	

\*Measured from front of control panel.

**CAVITY DIMENSIONS**

(G) Minimum inside height of cavity	
(H) Minimum inside width of cavity	
(I) Minimum inside depth of cavity**	
Recommended cabinet height	
Recommended cabinet width	

**COMPACT COMBI-STEAM OVEN**  
OS60NAMHUB5, OS60NAMHUG5,  
OS60NAMVUB5, OS60NAMVUG5

	mm
(A) Overall height	458
(B) Overall width	596
(C) Chassis height	435
(D) Chassis width	556
(E) Chassis depth	545
(F) Control panel thickness	20
Depth with door/drawer fully open*	324
	mm
(G) Minimum inside height of cavity	440
(H) Minimum inside width of cavity	560
(I) Minimum inside depth of cavity**	550
Recommended cabinet height	460
Recommended cabinet width	600





**BUILT-IN COFFEE MAKER**  
EB60MSB3, EB60MSG3

	mm
(A) Overall height	458
(B) Overall width	596
(C) Chassis height	445
(D) Chassis width	560
(E) Chassis depth	460
(F) Control panel thickness	20
Depth with door/drawer fully open*	435
	mm
(G) Minimum inside height of cavity	450
(H) Minimum inside width of cavity	560*
(I) Minimum inside depth of cavity**	545***
Recommended cabinet height	460
Recommended cabinet width	600





\*Cabinetry requires additional vertical sidewalls to secure the product. \*\*Measured from front of chassis. \*\*\*A rear ventilation air vent totalling 280cm<sup>2</sup> is required. The air vent must be located at the rear of the cabinet, it can be positioned at the base, sides, back or top of the cavity.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

**PRODUCT DIMENSIONS**

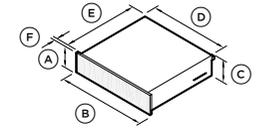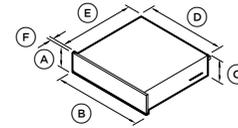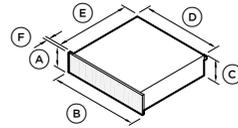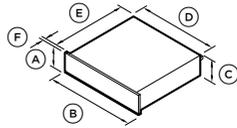

**CAVITY DIMENSIONS**

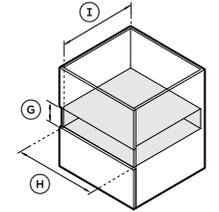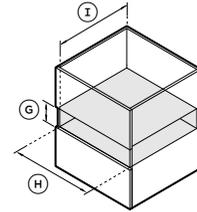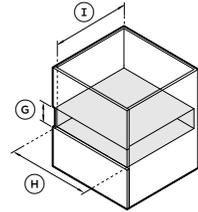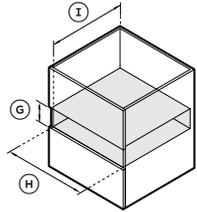

PRODUCT DIMENSIONS	
A Overall height	mm
B Overall width	596
C Chassis height	140
D Chassis width	543
E Chassis depth***	547
F Front panel thickness	20
Front panel height	136
Front panel width	596
Depth of drawer open*****	414

WARMING DRAWER WB60SMB3, WB60SMG3	
A Overall height	140
B Overall width	596
C Chassis height	140
D Chassis width	543
E Chassis depth***	547
F Front panel thickness	20
Front panel height	136
Front panel width	596
Depth of drawer open*****	414

INTEGRATED WARMING DRAWER WB60SDEI3	
A Overall height	140
B Overall width	596
C Chassis height	140
D Chassis width	559*
E Chassis depth***	566
F Front panel thickness	min 16****
Front panel height	min 136
Front panel width	min 596
Depth of drawer open*****	414

VACUUM SEAL DRAWER VB60SMB3, VB60SMG3	
A Overall height	140
B Overall width	596
C Chassis height	140
D Chassis width	556**
E Chassis depth***	545
F Front panel thickness	20
Front panel height	136
Front panel width	596
Depth of drawer open*****	414

INTEGRATED VACUUM SEAL DRAWER VB60SDEI3	
A Overall height	140
B Overall width	596
C Chassis height	140
D Chassis width	559**
E Chassis depth***	563
F Front panel thickness	min 16****
Front panel height	min 136
Front panel width	min 596
Depth of drawer open*****	414

\*Including side brackets. \*\*Including side brackets and anti-tip brackets. \*\*\*Including power plug. \*\*\*\*A clearance of 2mm between the cabinet and the custom panel is required for the push-to-open mechanism (spacer included). Maximum custom panel weight 5kg.  
\*\*\*\*\*Measured from front of control panel.

CAVITY DIMENSIONS	
G Minimum inside height of cavity	142
H Minimum inside width of cavity	560
I Minimum inside depth of cavity*	550
Recommended cabinet height	144
Recommended cabinet width	600

WARMING DRAWER WB60SMB3, WB60SMG3	
G Minimum inside height of cavity	142
H Minimum inside width of cavity	560
I Minimum inside depth of cavity*	550
Recommended cabinet height	144
Recommended cabinet width	600

INTEGRATED WARMING DRAWER WB60SDEI3	
G Minimum inside height of cavity	142
H Minimum inside width of cavity	560
I Minimum inside depth of cavity*	550
Recommended cabinet height	144
Recommended cabinet width	600







VACUUM SEAL DRAWER VB60SMB3, VB60SMG3	
G Minimum inside height of cavity	142
H Minimum inside width of cavity	560
I Minimum inside depth of cavity*	550
Recommended cabinet height	144
Recommended cabinet width	600

INTEGRATED VACUUM SEAL DRAWER VB60SDEI3	
G Minimum inside height of cavity	142
H Minimum inside width of cavity	560
I Minimum inside depth of cavity*	570
Recommended cabinet height	144
Recommended cabinet width	600

\*Measured from front of chassis. Note: Drawers can fully support 60cm Fisher & Paykel ovens, without adding shelf in between.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

ISOMETRIC VIEW

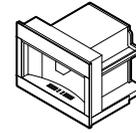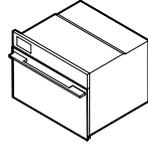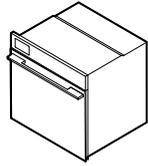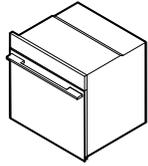

	<b>PYROLYTIC OVEN</b> OB60SAMPUB5, OB60SAMPUG5	<b>COMBI-STEAM OVEN</b> OS60SAMHUB5, OS60SAMHUG5, OS60SAMVUB5, OS60SAMVUG5	<b>COMPACT COMBI-STEAM OVEN</b> OS60NAMHUB5, OS60NAMHUG5, OS60NAMVUB5, OS60NAMVUG5	<b>BUILT-IN COFFEE MAKER</b> EB60MSB3, EB60MSG3	<b>WARMING DRAWER</b> WB60SMB3, WB60SMG3 <b>INTEGRATED WARMING DRAWER</b> WB60SDEI3	<b>VACUUM SEAL DRAWER</b> VB60SMB3, VB60SMG3 <b>INTEGRATED VACUUM SEAL DRAWER</b> VB60SDEI3
<b>PRODUCT REQUIREMENTS</b>						
Dedicated Circuit (A)	16	16	16	10	10	10
Rated Power (W)	2800 - 3300	2800 - 3300	2800 - 3300	1350	810	320
Supply (Hz)	50	50	50	50	50	50
Voltage (V)	220 - 240	220 - 240	220 - 240	220 - 240	220 - 240	220 - 240
Connection	Flex cord 1500mm*	Flex cord 1500mm*	Flex cord 1500mm*	Flex cord 1700mm*	Flex cord 1800mm*	Flex cord 1800mm*
*Supplied with product. Note: For multi-residential installs, use the Rated Power to calculate the demand.						
<b>CAPACITY</b>						
Total Oven capacity	85L	85L	55L	-	-	-
Total water tank capacity	-	2.4L	1.4L	2.4L	-	-

Note: All Coffee Makers and Steam Ovens have internal water tanks which need to be filled manually. No external water supply is required.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

