

60cm Series 7 4 Zone Induction Cooktop, 2 SmartZones

Series 7 | Contemporary

Black Glass




Ultimate flexibility. Create a large cook zone with SmartZone, or match with a gas cooktop.

- Child and pet safe – cooktop remains cool to touch until a pot or pan is placed on the surface
- PowerBoost activates a very high heat, bringing liquid to boil in less than a minute

- Easily control each cook zone with Touch&Slide, including pairing cook zones to create a large SmartZone
- Mix and match your induction cooktop with our Gas on Glass cooktop, for even more cooking flexibility

DIMENSIONS

Height	49 mm
Width	600 mm
Depth	450 mm

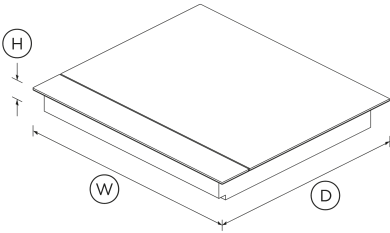

FEATURES & BENEFITS

Precise Control

Fisher & Paykel induction cooktops offer extremely accurate temperature control from very high to very low heats, so you can sear, sauté and temper like a pro. Touch&Slide controls react immediately when you adjust the temperature, so you can go from a boil to a simmer in seconds.

Safer Choice

Induction cooktops only start heating your pot or pan once you’ve placed it on the ceramic surface and stop as soon as you remove it – so you don’t have to worry about curious little fingers or leaving an element on.

Easy Cleaning

The surface around your cookware stays cool when you cook, preventing baked-on spills and making cleaning up a breeze. The durable ceramic cooktop surface just needs a quick wipe after use to maintain its good looks.

Enhanced Features

PowerBoost and GentleHeat deliver either very high or very low heat fast for specialised cooking tasks such as searing meat and melting chocolate. An integrated timer keeps you on track.

Superior Efficiency


No heat is wasted during induction cooking because only the cookware is heated, not the cooktop surface. This makes induction cooking more energy-efficient than electric or gas cooktops.

Larger Cooking Zone

SmartZone links two cooking zones and controls them as one, giving you the flexibility to use large pans and griddles and easily handle bigger food items like pancakes.

SPECIFICATIONS

Accessories (sold separately)

Joiner kit	Part 534731 (required to join two cooktops)	Power requirements	Supply voltage	220-240 V	<p>The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020</p> <p>Other product downloads available at fisherpaykel.com</p> <div><div>↓</div>Installation Guide</div> <div><div>↓</div>Installation Guide - Joining Strip</div> <div><div>↓</div></div> Revit Induction Cooktop
------------	--	--------------------	----------------	-----------	---

↓

Rhino Induction Cooktop

↓

Restriction of Hazardous Substances (Chinese)

↓

Sketchup Induction Cooktop

↓

User Guide

↓

User Guide 

↓

User Guide (English)