

**WINE CABINET & BEVERAGE CENTER**

---

# PLANNING GUIDE

---

**INTEGRATED WINE CABINET** - RS6009V2RT1, RS6009V2R1

**INTEGRATED BEVERAGE CENTRE** - RS6009SBLT1, RS6009SBL1

**FISHER & PAYKEL**

This comprehensive Planning Guide provides you with the framework and tools to achieve your desired design outcome with Fisher & Paykel appliances. In this guide, you will find a range of conceptual, detailed, and dimensional product information to bring your ideas to life and create spaces that truly reflect your vision.

CONTENTS


CONCEPT DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE
Design Choices		Data Sheets		Services	
Wine Cabinet & Beverage Center	4	Wine Cabinet & Beverage Center + Stainless Steel Door Panel	12	Power and Water Connections	22
Specification Guide		Wine Cabinet & Beverage Center + Custom Door Panel	13	Handle Data Sheets	
Integrated Wine Cabinet	6	Planning Considerations		Professional Handle	24
Integrated Beverage Center	8	Custom Toe Kick Details	15	Fine Aluminium Handle	25
Multiple Installation	10	Custom Panel Preparation – Solid Door	16	Fine Round Handle	26
		Custom Panel Preparation – Glass Door	17	Classic Handle	27
		Hinge Articulation	18		
		Door Opening Clearance	19		

SUPPORT

For additional design planning and installation support please contact the Fisher & Paykel design support team.

designsupport@fisherpaykel.com

## DESIGN CHOICES

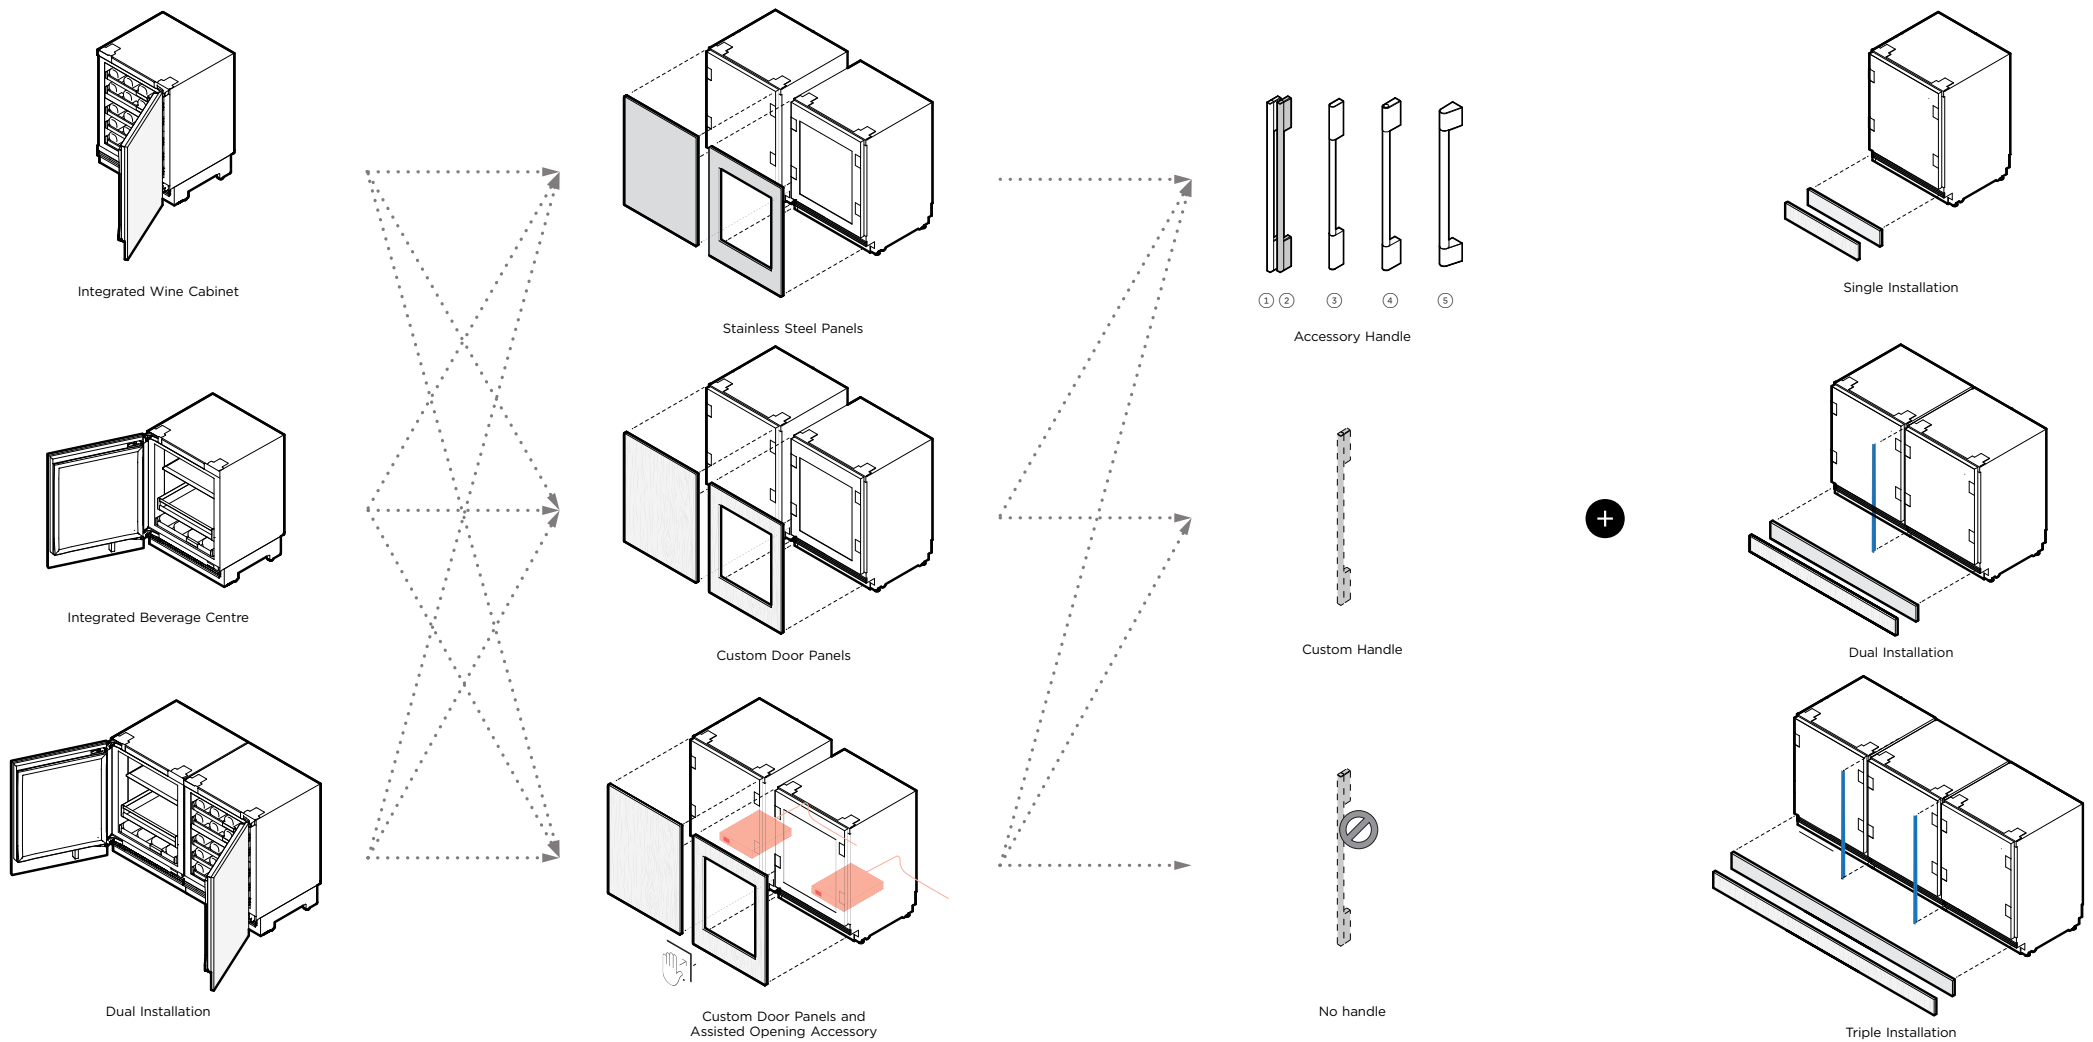

MODELS		
	Left Hinge	Right Hinge
Integrated Wine Cabinet - Glass door		RS6009V2RT1
Integrated Wine Cabinet - Solid door		RS6009V2R1
Integrated Beverage Center - Glass door	RS6009SBLT1	
Integrated Beverage Center - Solid door	RS6009SBL1	

Note: All models can achieve opposite hinge location using the supplied parts

DOOR PANELS		
	Left Hinge	Right Hinge
Solid Stainless Steel Door Panel	RD6009L	RD6009R
Glass Stainless Steel Door Panel	RD6009VL	RD6009VR
Assisted Opening Accessory	Check fisherpaykel.com for availability	

Note: Custom Door Panels to be manufactured and fitted by cabinet maker

HANDLES		
① Fine Aluminium Handle		AHD5RD09
② Fine Black Aluminium Handle		AHD5RD09B
③ Fine Round Handle		AHSRD09
④ Classic Handle		AHCLRD09
⑤ Professional Handle		AHP3RD09

Note: Custom handles to be fitted by cabinet maker

STAINLESS STEEL TOE KICK AND JOINER KIT		
	Toe Kick	Joiner Kit
Single Installation	AKRS06010	Not required
Dual Installation	AKRS12010	AJRS09LR (1x)
Triple Installation	AKRS18010	AJRS09LR (2x)

Note: Custom Toe Kick to be manufactured and fitted by cabinet maker

## SPECIFICATION GUIDE



RS6009V2R1 – Solid door with Custom Panel



RS6009V2RT1 – Glass door with Custom Panel



RS6009SBL1 & RS6009V2R1 Side by Side

**OVERVIEW**

Designed for wine lovers, this under-counter wine cabinet seamlessly fits in any space of the evolving home. Boasting premium oak slide-out shelves and a UV-tempered glass door, it elegantly showcases up to 35 bottles. Featuring dual temperature zones and specialised modes for Red, White, Sparkling, and Cellar wines, this versatile cabinet provides the perfect environment for all wine varieties.

**FEATURES**

- ① Integrates into any setting within the home, from the bar to the master suite – the choices are endless
- ② Four specialised wine modes for Red, White, Sparkling, and Cellar wines
- ③ Designed to fit flush, with 4mm gaps and no visible hinges or grilles
- ④ Premium oak slide-out shelves for convenient access and storage
- ⑤ Accommodates up to 35 bottles, providing ample space for a diverse collection
- ⑥ Features two independent temperature zones to cater for different wine varieties
- ⑦ UV-tempered glass door elegantly displays and protects wine
- ⑧ Intuitive interface for easy temperature control and mode selection
- ⑨ Internal LED lighting provides beautiful illumination, showcasing the collection
- ⑩ Wi-Fi enabled for remote temperature control from the SmartHQ™ app


**PRODUCTS**

**RS6009V2RT1** Integrated Wine Cabinet  
Glass Door, Panel Ready or Stainless Steel Panel, Right Hinge  
(All models can achieve opposite hinge location using the supplied parts)


**RS6009V2R1** Integrated Wine Cabinet  
Solid Door, Panel Ready or Stainless Steel Panel, Right Hinge  
(All models can achieve opposite hinge location using the supplied parts)

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

SPECIFICATIONS	
Model No.	RS2435V2RT1, RS2435V2R1
Product Dimensions	H 864-900mm W 592mm D 579mm
Electrical	
Supply	220-240 V, 50 Hz
Service	10 A
Connection	Plug with flex cord
Weights	
Packaged	Wine Cabinet, Glass Door - 74kg Wine Cabinet, Solid Door - 72kg
Unpackaged	Wine Cabinet, Glass Door - 64kg Wine Cabinet, Solid Door - 62kg

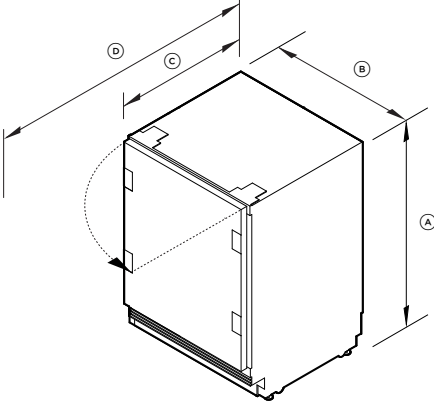PRODUCT DIMENSIONS	
	
	mm
Ⓐ Overall height	864 - 900
Ⓑ Overall width	592
Ⓒ Overall depth*	579
Ⓓ Overall depth with the door open*	1200
Height from floor to bottom of custom door panel (visual toe kick)**	15 - 136
Depth of toe kick (excl. front door and toe kick panels)**	50 - 100
Splitline heights achievable (height from floor to top of custom door panel)	min 861

\*Excluding door panel and handle.  
\*\*Applies to custom door panels.  
Note: Maximum custom door panel thickness of 19mm.

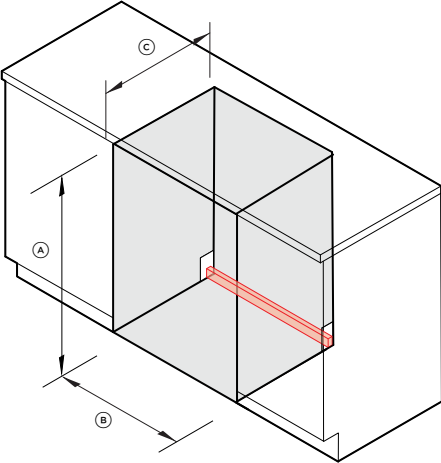CAVITY DIMENSIONS: STANDARD INSTALLATION	
	
	mm
Ⓐ Height	864 - 900
Ⓑ Width	600
Ⓒ Minimum overall cavity depth with service to the side*	600
Minimum overall cavity depth with service behind*	650
Service area H 37mm x W 600mm x D 20mm	

\*Including max custom door panel thickness 19mm.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)



RS6009SBL1 – Solid door with Custom Panel



RS6009SBLT1 – Glass door with Custom Panel



RS6009SBL1 & RS6009V2R1 Side by Side

**OVERVIEW**

Experience the luxury of the Integrated Beverage Centre. Seamlessly blending into any home setting, its adjustable shelves and full-depth wine shelf elegantly house your favourite beverages. With a UV-resistant glass door and soft LED lighting, this Beverage Centre is a blend of style and functionality, offering optimal conditions for all drinks.

**PRODUCTS**

**RS6009SBLT1** Integrated Beverage Centre  
Glass Door, Panel Ready or Stainless Steel Panel, Left Hinge  
(All models can achieve opposite hinge location using the supplied parts)

**RS6009SBL1** Integrated Beverage Centre  
Solid Door, Panel Ready or Stainless Steel Panel, Left Hinge  
(All models can achieve opposite hinge location using the supplied parts)

**FEATURES**

- ① Integrates into any setting within the home, from the bar to the master suite – the choices are endless
- ② Designed to fit flush, with 4mm gaps and no visible hinges or grilles
- ③ Adjustable temperature control helps to keep drinks at the ideal temperature
- ④ Customisable beverage shelf with adjustable gates ensures contents remain upright and neatly organised
- ⑤ Spacious 129L capacity, with full-depth wine shelf that can accommodate up to seven bottles
- ⑥ Wi-Fi enabled for remote temperature control from the SmartHQ™ app
- ⑦ Internal LED lighting provides beautiful illumination, showcasing the collection
- ⑧ UV-tempered glass door elegantly displays and protects beverages
- ⑨ Intuitive interface for easy temperature control and mode selection


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)



SPECIFICATIONS

Model No.	RS6009SBLT1, RS6009SBL1
Product Dimensions	H 864-900mm W 592mm D 579mm
Electrical	
Supply	220-240 V, 50 Hz
Service	10 A
Connection	Plug with flex cord
Weights	
Packaged	Beverage Center, Glass Door - 67kg Beverage Center, Solid Door - 65kg
Unpackaged	Beverage Center, Glass Door - 60kg Beverage Center, Solid Door - 58kg

PRODUCT DIMENSIONS

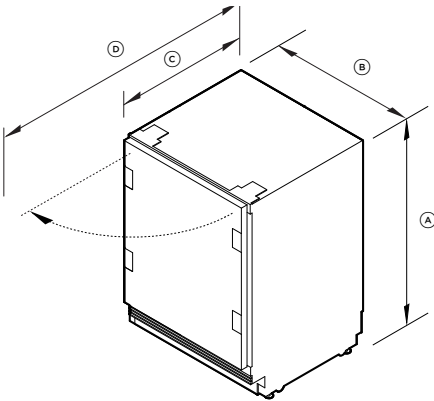


	mm
Ⓐ Overall height	864 - 900
Ⓑ Overall width	592
Ⓒ Overall depth*	579
Ⓓ Overall depth with the door open*	1200
Height from floor to bottom of custom door panel (visual toe kick)**	15 - 136
Depth of toe kick (excl. front door and toe kick panels)**	50 - 100
Splitline heights achievable (height from floor to top of custom door panel)	min 861

\*Excluding door panel and handle.

\*\*Applies to custom door panels.

Note: Maximum custom door panel thickness of 19mm.

CAVITY DIMENSIONS: STANDARD INSTALLATION

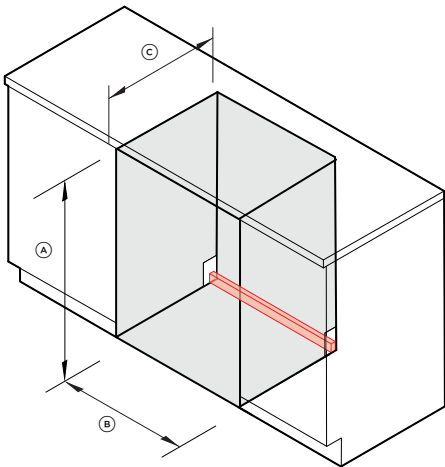

	mm
Ⓐ Height	864 - 900
Ⓑ Width	600
Ⓒ Minimum overall cavity depth with service to the side*	600
Minimum overall cavity depth with service behind*	650
Service area H 37mm x W 600mm x D 20mm	


\*Including max custom door panel thickness 19mm.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

SPECIFICATIONS

Model No.	RS6009V2RT1, RS6009V2R1, RS6009SBLT1, RS6009SBL1
Product Dimensions	H 864-900mm W 592mm D 579mm
Electrical	
Supply	220-240 V, 50 Hz
Service	10 A
Connection	Plug with flex cord

PRODUCT DIMENSIONS

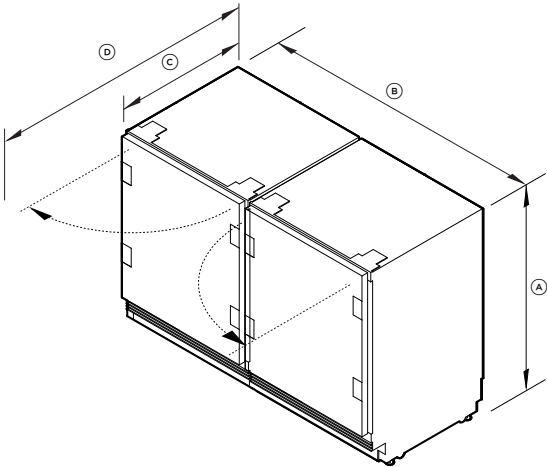

	mm
Ⓐ Overall height	864 - 900
Ⓑ Overall width dual installation*	1190
Overall width triple installation*	1776
Ⓒ Overall depth**	579
Ⓓ Overall depth with the door open**	1200
Height from floor to bottom of custom door panel (visual toe kick)***	15 - 136
Depth of toe kick (excl. front door and toe kick panels)***	50 - 100
Splitline heights achievable (height from floor to top of custom door panel)	min 861


\*Including joiner kit.

\*\*Excluding door panel and handle.

\*\*\*Applies to custom door panels.

Note: Maximum custom door panel thickness of 19mm.

CAVITY DIMENSIONS: STANDARD INSTALLATION

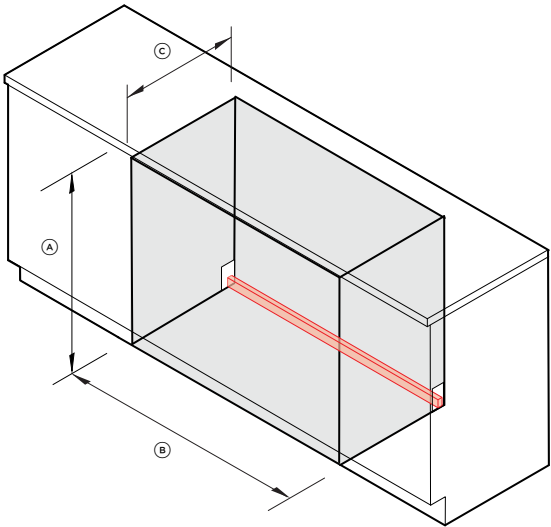


	mm
Ⓐ Height	864 - 900
Ⓑ Width dual installation	1200
Width triple installation	1800
Ⓒ Minimum overall cavity depth with service to the side*	600
Minimum overall cavity depth with service behind*	650
Service area dual installation H 37mm x W 1200mm x D 20mm	
Service area triple installation H 37mm x W 1800mm x D 20mm	

\*Including max custom door panel thickness 19mm.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

## DATA SHEETS

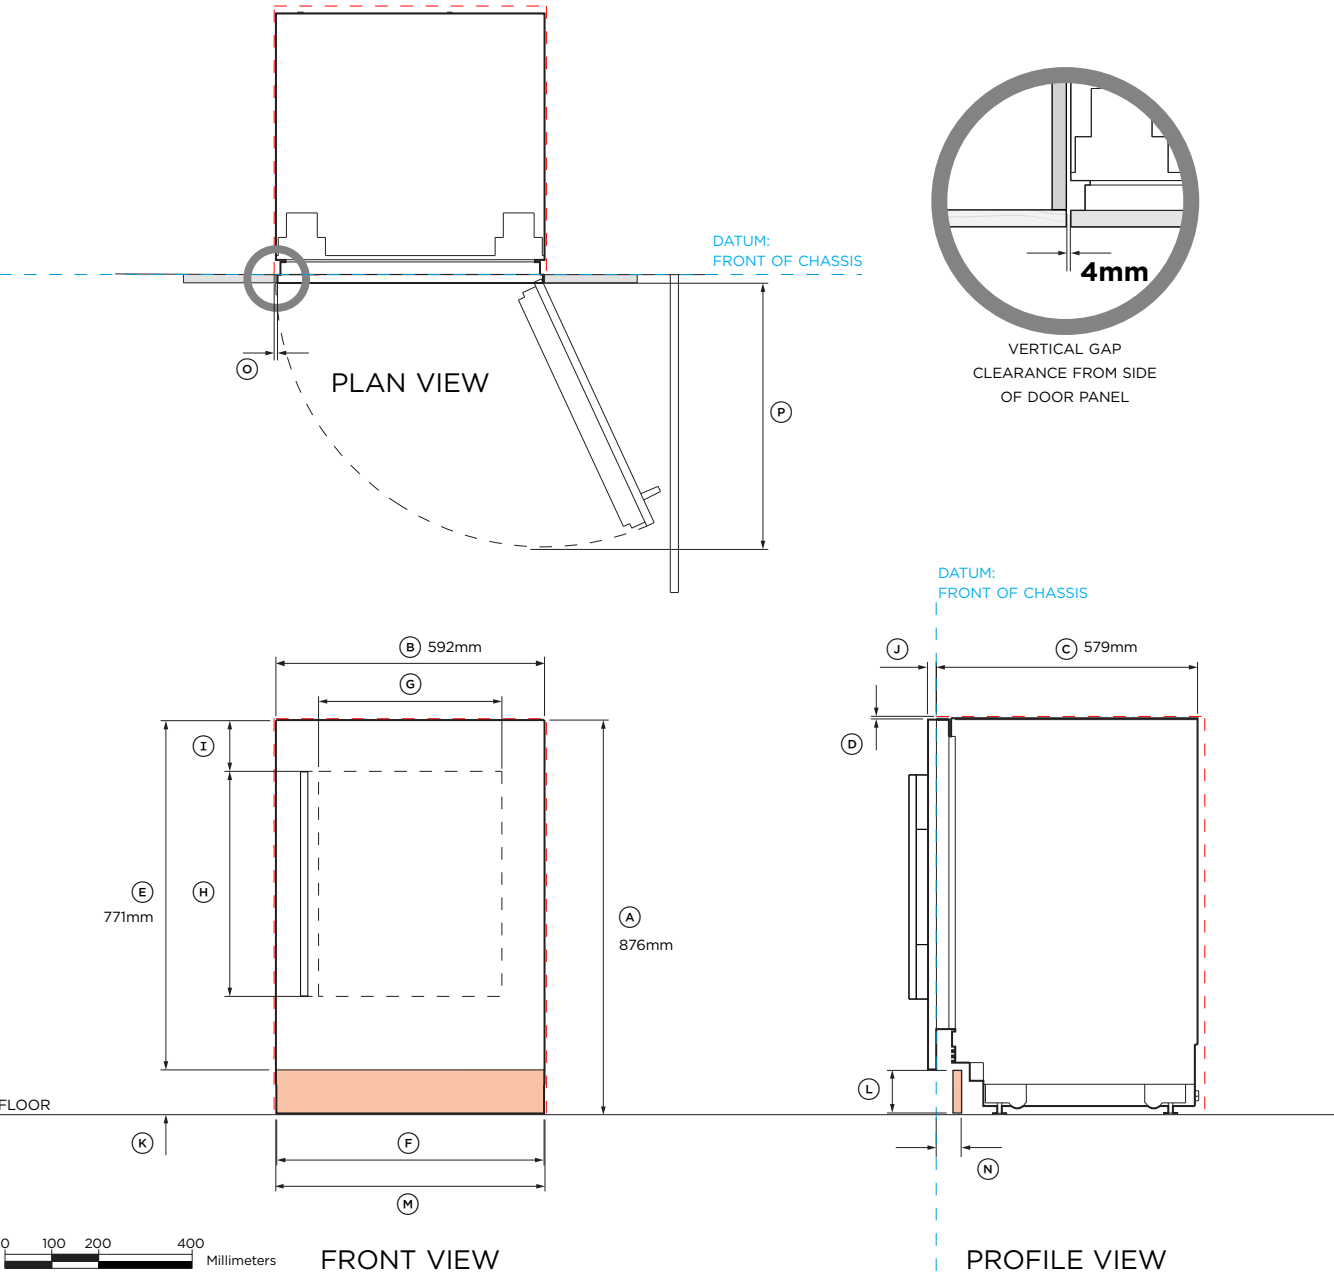

**Integrated Wine Cabinets & Beverage Centers with Stainless Steel Door Panels**

**Model No:**  
Wine Cabinet, Glass Door - **RS6009V2RT1** (right hinge)  
Wine Cabinet, Solid Door - **RS6009V2R1** (right hinge)  
Beverage Center, Glass Door - **RS6009SBLT1** (left hinge)  
Beverage Center, Solid Door - **RS6009SBL1** (left hinge)  
**Note:** Right hinge is shown in drawing. All models can achieve opposite hinge location using the supplied parts.

**Stainless Steel Door Panel:**  
Glass Door Panel - **RD6009VR** (right hinge) or **RD6009VL** (left hinge)  
Solid Door Panel - **RD6009R** (right hinge) or **RD6009L** (left hinge)

**Shown With:**  
Handle Kit - **AHD5RD09(B)**  
Stainless Steel Toe Kick Panel - **AKRS6009**


Product Dimensions	mm
A Overall height of product*	876
B Overall width of product	592
C Overall depth of product (excl. front door panels)	579
D Height from top of door panel to chassis	3
E Height of stainless steel door panel	771
F Width of stainless steel door panel	592
G Width glass window	404
H Height glass window	496
I Top of door panel to top of cut-out/window	113
J Thickness of stainless steel door panel	18
K Visual toe kick height*	102
L Height of stainless steel toe kick panel	100
M Width of stainless steel toe kick panel	596
N Depth of toe kick (excl. front door and toe kick panels)	50-100
O Minimum cabinetry clearance from side of door panel	4
P Depth of door (90° open, measured from front of cabinetry)	600

\*Overall height to achieve a 102mm visual toe kick.  
Note: Head to 'Toe Kick Details' section of this planning guide to find out more about visual toe kicks.

Cavity Dimensions	mm
Overall height of cavity	876
Overall width of cavity	600
Minimum overall depth of cavity: (including front panel)	
When services are located outside of cavity (shallow)*	600
When services are located in the neighbouring cavities	610
When services are located at rear of cavity (deep)	650
*Multiple product installation cavity depth is 610mm, this to allow space for the joiner kit bracket	
Minimum clearance from top of door panel to the underside of the benchtop	3



Notes: Product shown installed on the floor. Slide into cabinetry position. Alternatively can be installed on a plinth. Adjust your cavity height accordingly.

INDICATES PRODUCT DATUM  
INDICATES CABINETRY CLEARANCES  
**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit [fisherpaykel.com](https://fisherpaykel.com)

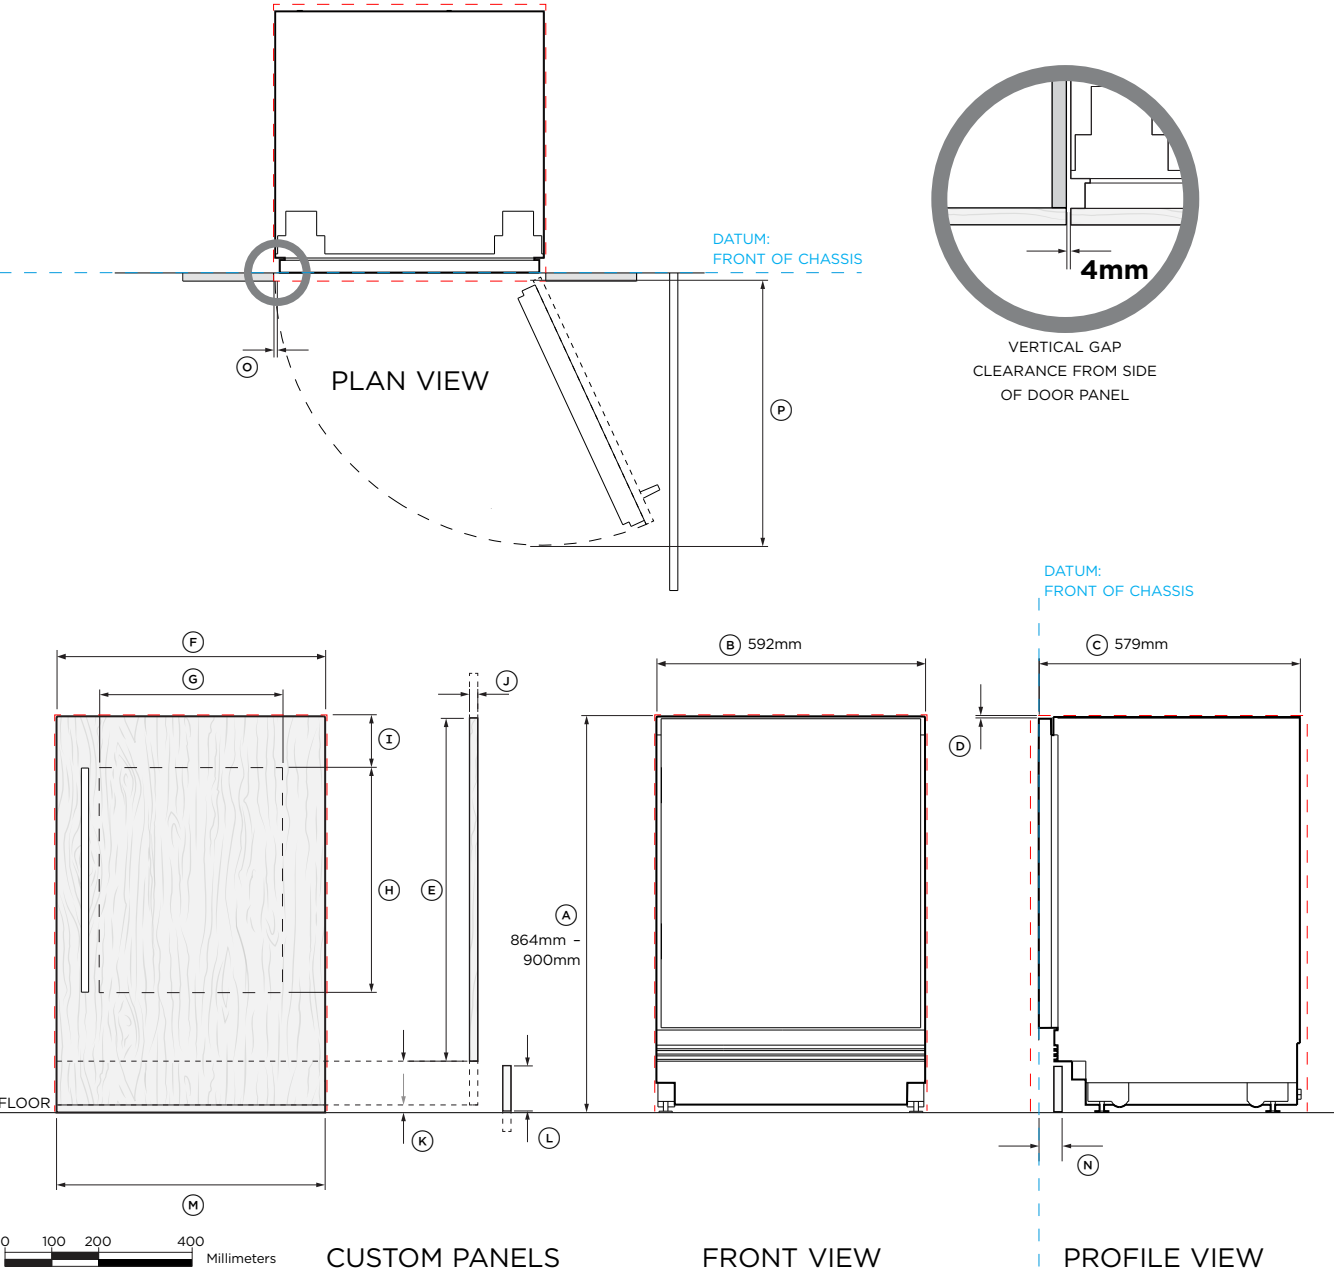


Integrated Wine Cabinets & Beverage Centers with Custom Door Panels	
Model No:	
Wine Cabinet, Glass Door - RS6009V2TR1 (right hinge)	
Wine Cabinet, Solid Door - RS6009V2R1 (right hinge)	
Beverage Center, Glass Door - RS6009SBLT1 (left hinge)	
Beverage Center, Solid Door - RS6009SBL1 (left hinge)	
<b>Note:</b> Right hinge is shown in drawing. All models can achieve opposite hinge location using the supplied parts.	
Product Dimensions	mm
A Overall height of product	864 - 900
B Overall width of product	592
C Overall depth of product (excl. front door panels)	579
D Minimum height from top of custom door panel to chassis	3
E Minimum height of custom door panel	761
F Width of custom door panel	
- Single install	592
- Dual install	594
- Triple install	594.5
G Width of glass window	404
H Height of glass window	496
I Top edge of glass to top of chassis	116
J Thickness of custom door panel	16 - 19
K Visual toe kick height*	15 - 136
L Height of custom toe kick panel	min 100 max 131
M Width of custom toe kick panel	596
N Depth of toe kick (excl. front door and toe kick panels)	50 - 100
O Minimum cabinetry clearance from side of door panel	4
P Depth of door (90° open, measured from front of cabinetry)	600
*Head to 'Custom Toe Kick Details' section of this planning guide to find out more about visual toe kicks.	
Note: The custom door panel can be extended upwards. Ensure that the minimum clearances are maintained and that the glass window dimensions are adjusted accordingly.	
Cavity Dimensions	mm
Overall height of cavity	864 - 900
Overall width of cavity	600
Minimum overall depth of cavity: (incl. custom front panel)	
When services are located outside of cavity (shallow)*	600
When services are located in the cabinet above the cavity	610
When services are located at rear of cavity (deep)	650
*Multiple product installation cavity depth is 610mm, this to allow space for the joiner kit bracket	
Minimum clearance from top of custom door panel to the underside of the benchtop	3
<b>Notes:</b> Product shown installed on the floor. Slide into cabinetry position. Alternatively can be installed on a plinth. Adjust your cavity height accordingly.	
INDICATES PRODUCT DATUM	
INDICATES CABINETRY CLEARANCES	
<b>IMPORTANT NOTE:</b> Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit <a href="https://fisherpaykel.com">fisherpaykel.com</a>	


## PLANNING CONSIDERATIONS

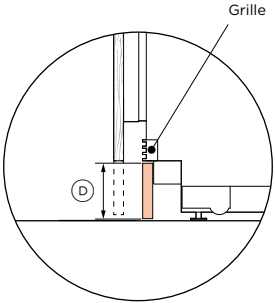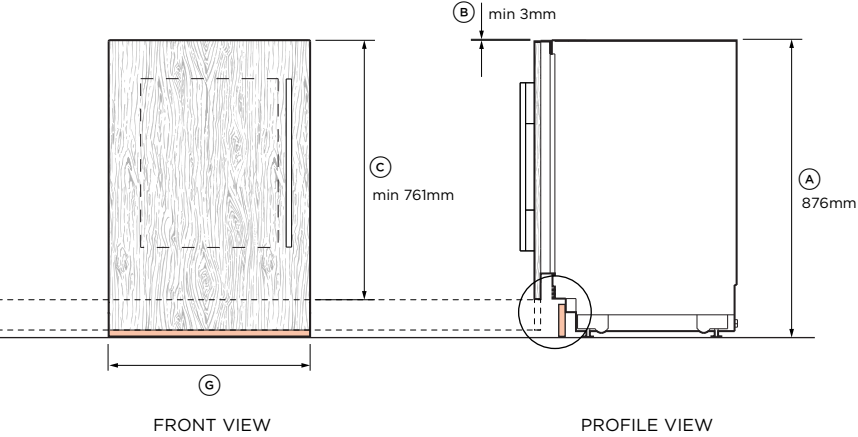

**GRILLE AND TOE KICK**  
PROFILE VIEW

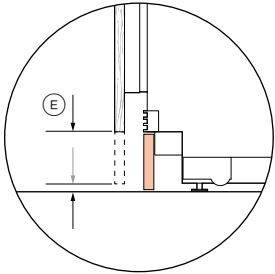

**VIUSAL TOE KICK**  
PROFILE VIEW

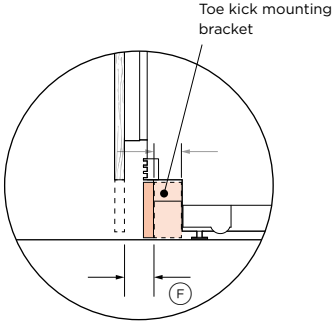

**TOE KICK DEPTH**  
PROFILE VIEW

Dimensions	mm
(A) Overall product height*	864 - 900
(B) Height from top of door panel to under benchtop	3
(C) Minimum custom door panel height	min 761
(D) Custom toe kick panel height	min 100 max 131
(E) Visual toe kick height	min 15 max 136
(F) Depth of toe kick (excl. front door panel and toe kick panel)	50 - 100
(G) Custom toe kick panel width	
- Single installation	592
- Dual installation	594
- Triple installation	594.5

\*Drawing shows an overall product height of 876mm.  
Custom door panels and toe kick panel to be manufactured and fitted by cabinet maker.

**GRILLE - CUSTOM DOOR PANEL**

The grille is hidden at minimum custom door panel height.

**VISUAL TOE KICK - CUSTOM DOOR PANEL**

Custom door panel can be longer or shorter to achieve a smaller or bigger visual toe kick.


Head to 'Custom Panels Preparation' section of this planning guide to find out more about custom door panel heights.

**TOE KICK DEPTH**

The toe kick mounting bracket extends out to 50mm.



To ensure proper alignment with the front of the grille, use a toe kick panel that is minimum of 16mm thick.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

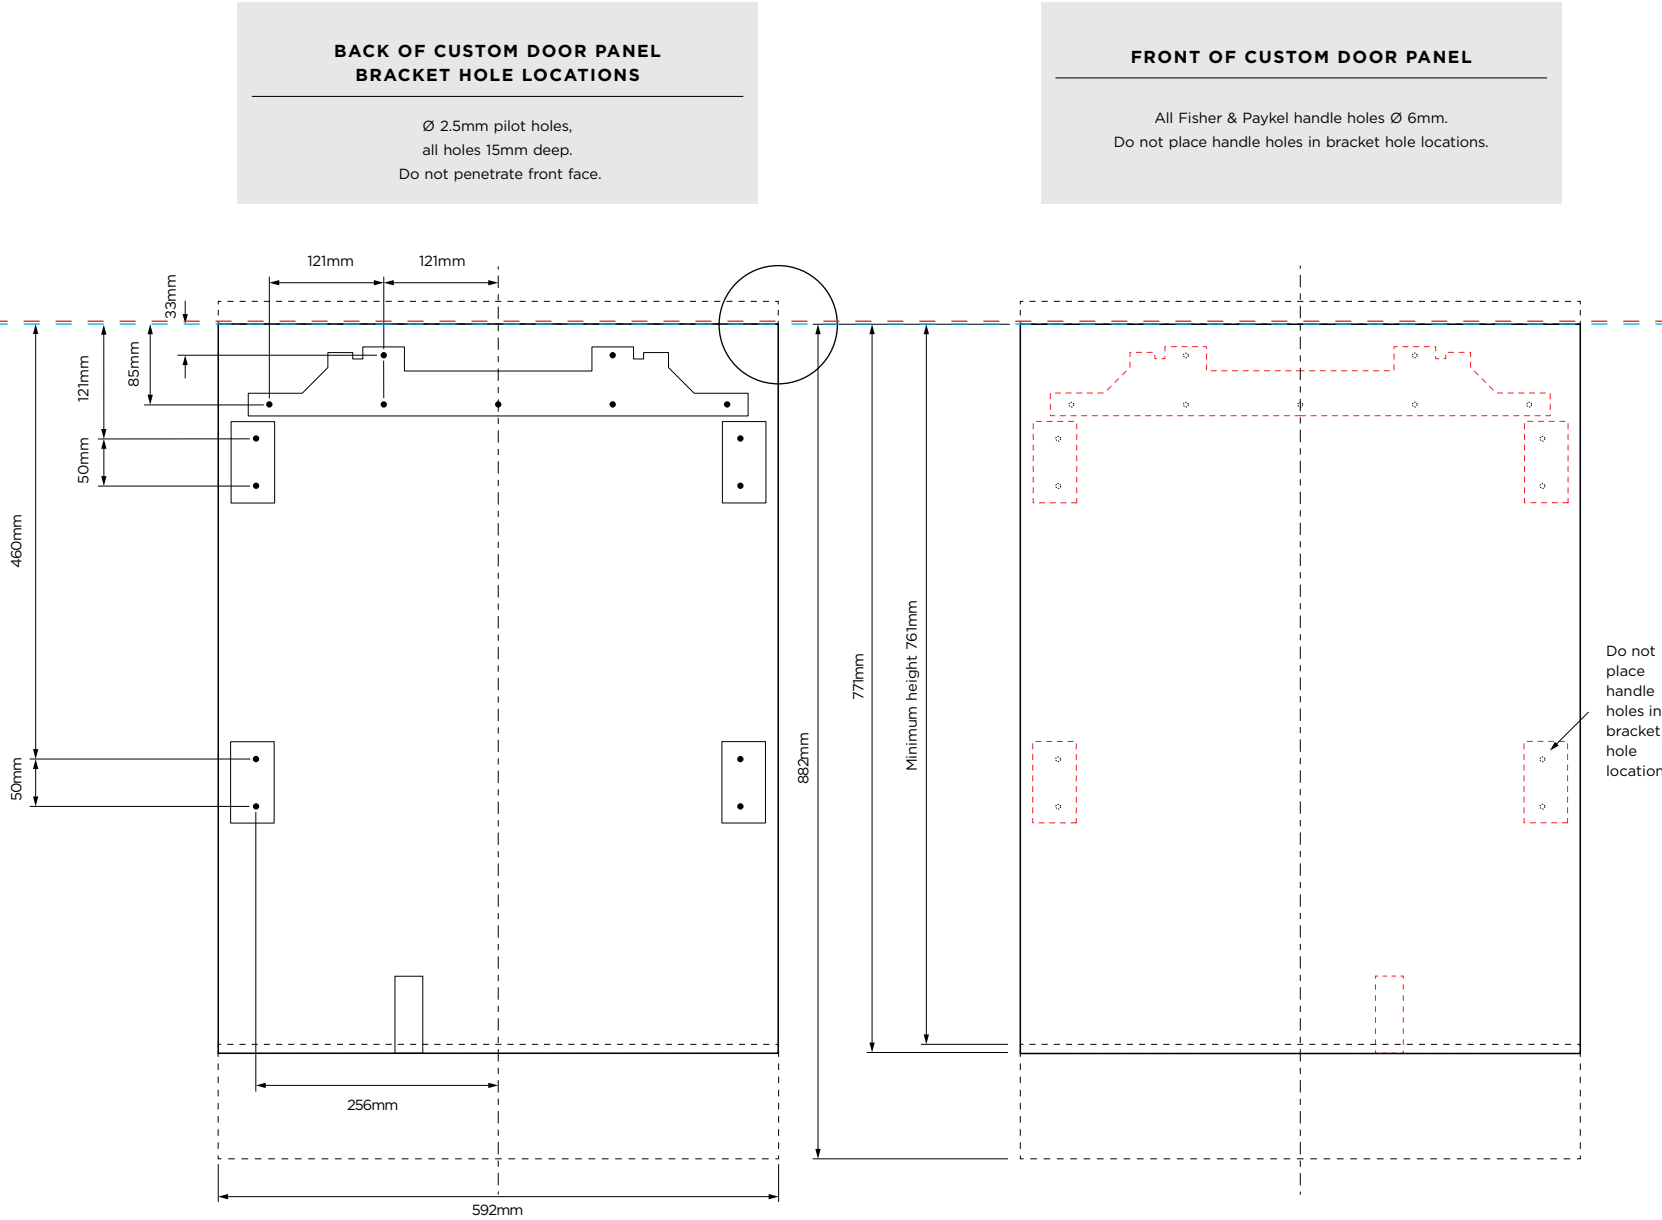

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)



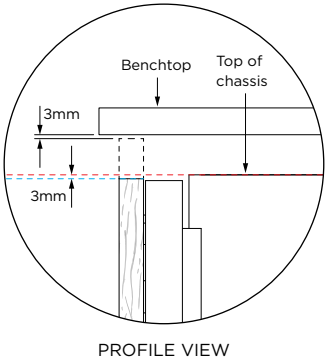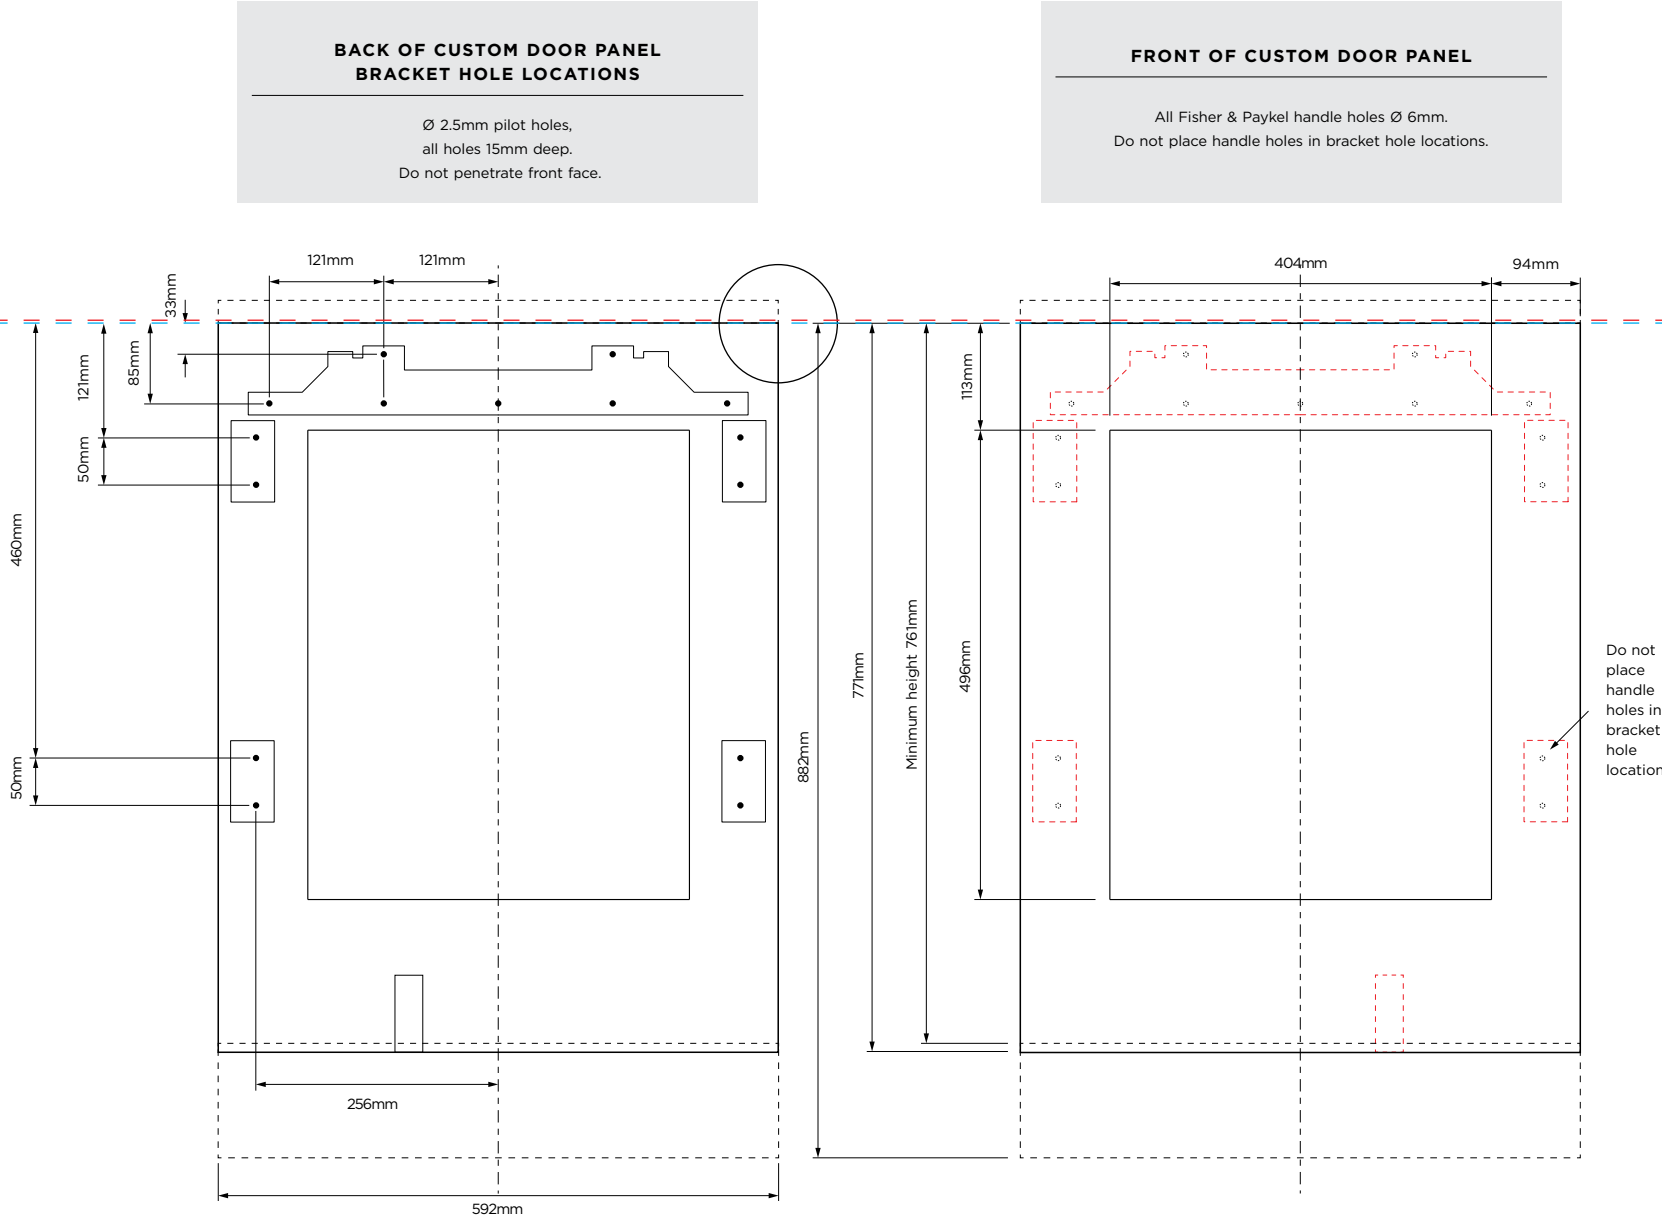

**DATUM TOP OF CUSTOM DOOR PANEL**

Ensure a minimum 3mm gap between the top of the custom door panel and the underside of the benchtop.

**CUSTOM DOOR PANEL HEIGHT**

Minimum custom door panel height 761mm. Assistant Opening Accessory will be hidden at this height.


Height to match stainless steel door panel height 771mm.

Max product height of 900mm, with a visual toe kick of 15mm, requires a custom panel height of 882mm.

**CUSTOM PANEL WEIGHT**

Maximum custom glass door panel weight is 3.7kg.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

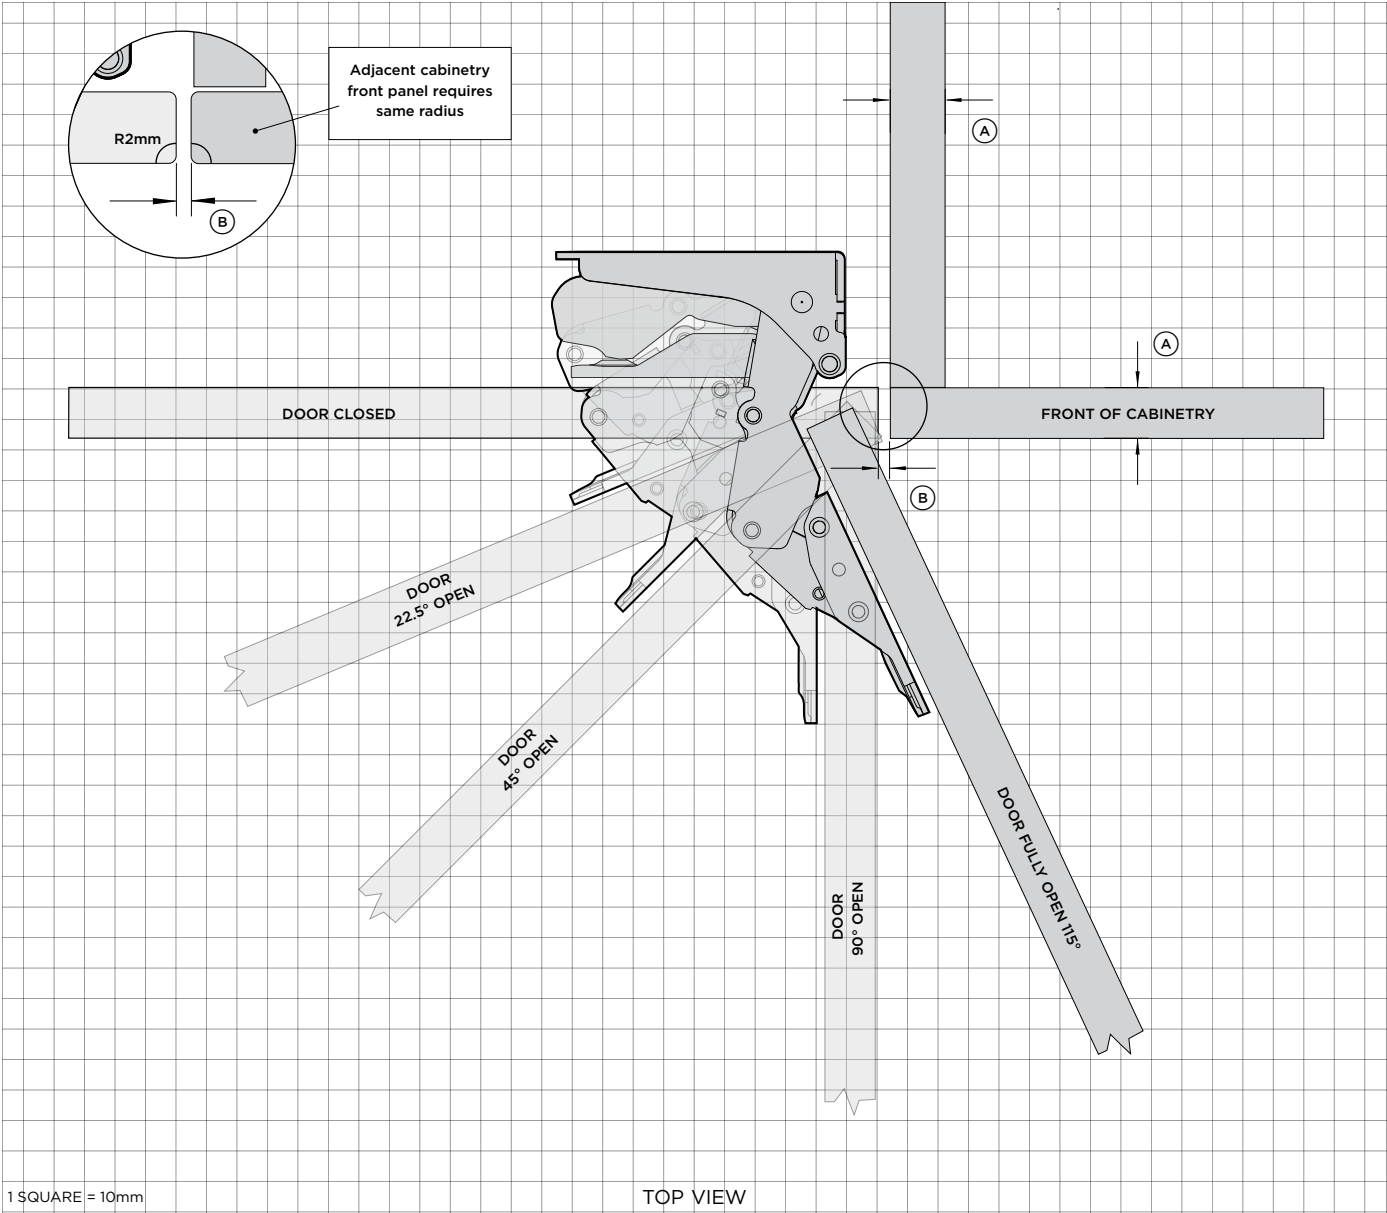

**DOOR HINGE - HETTICH K08**

Left hand hinge models are a mirrored version of shown.

**CUSTOM FRONT PANEL**

**(A) Front panel thickness:** 16mm-19mm  
Drawing shown with 18mm panels.

**(B) Gap between custom panel and adjacent cabinetry:** 4mm

**RADIUS REQUIREMENTS**

**Gap:** Minimum 4mm

**Panel thickness 16mm-19mm:** Requires minimum R2mm

**Panel thickness 20mm:** Requires minimum R5mm

Minimum radius prevents clashes with adjacent cabinetry. Panels thicker than 20mm need a larger gap and radius, which might expose internal components.

**WEIGHT LIMIT**

**Custom solid door panel:** Max 5.6kg

**Custom window door panel:** Max 3.7kg


Note: Door weight's includes weight of handle.

**SUPPORT**

For additional design planning and installation support please contact the Fisher & Paykel design support team.

[designsupport@fisherpaykel.com](mailto:designsupport@fisherpaykel.com)

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)


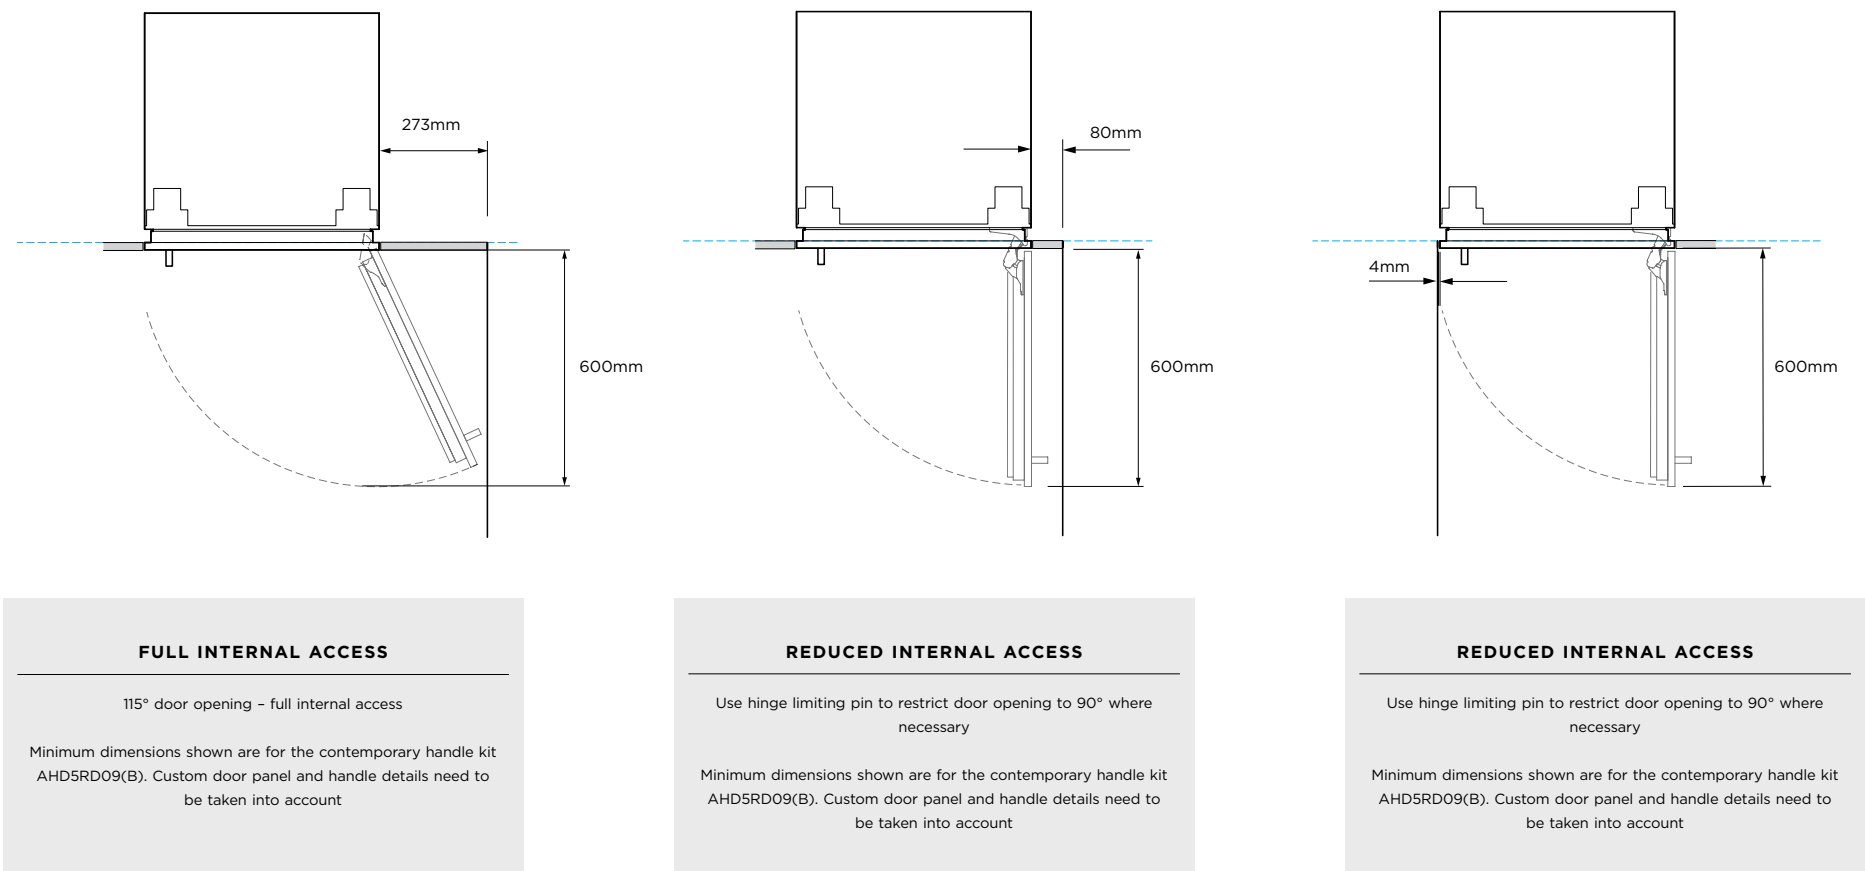


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

**HINGE TO HINGE**

- Ⓐ Both doors open at the same time – requires space between models
- Ⓑ Only allows a single door open at a time

Minimum dimensions shown are for the contemporary handle kit AHD5RD09(B). Custom door panel and handle details need to be taken into account.

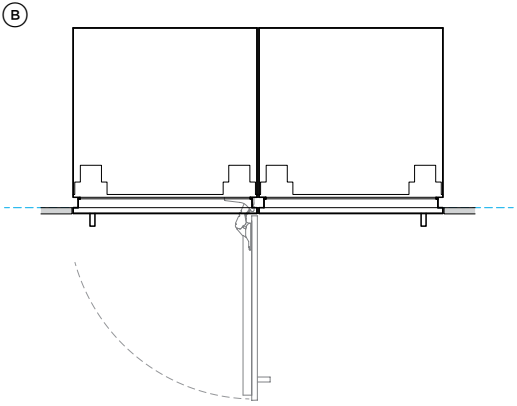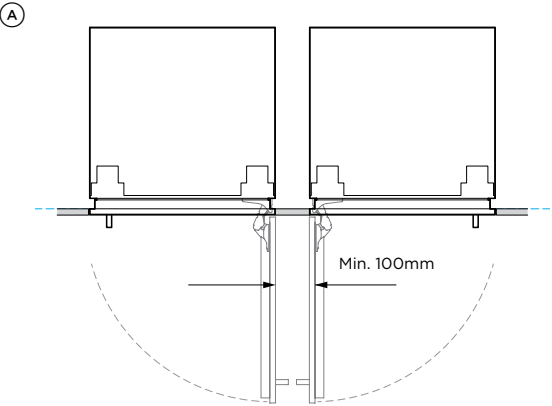



**ADDITIONAL NOTES**

Use hinge limiting pin to restrict door opening to 90° where necessary.

Minimum dimensions shown are for the contemporary handle kit AHD5RD09(B). Custom door panel and handle details need to be taken into account.



**DUAL INSTALLATION**

- Ⓒ Stainless steel door panels (gaps equalised during installation) – **5mm**
- Ⓒ Custom door panels (width of custom door panel increased to maintain 4mm gap across multiple products) – **4mm**

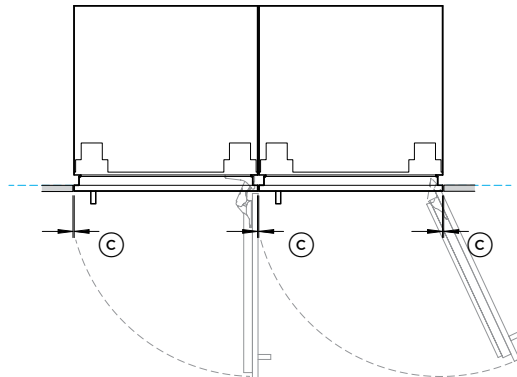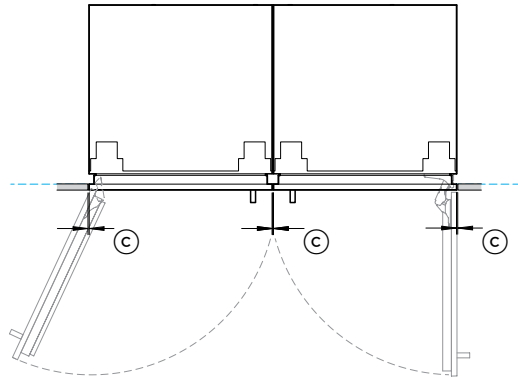


**TRIPLE INSTALLATION**

- Ⓒ Stainless steel door panels (gaps equalised during installation) – **6mm**
- Ⓒ Custom door panels (width of custom door panel increased to maintain 4mm gap across multiple products) – **4mm**

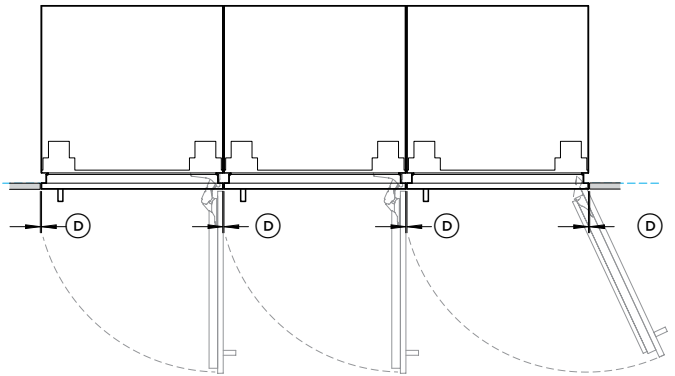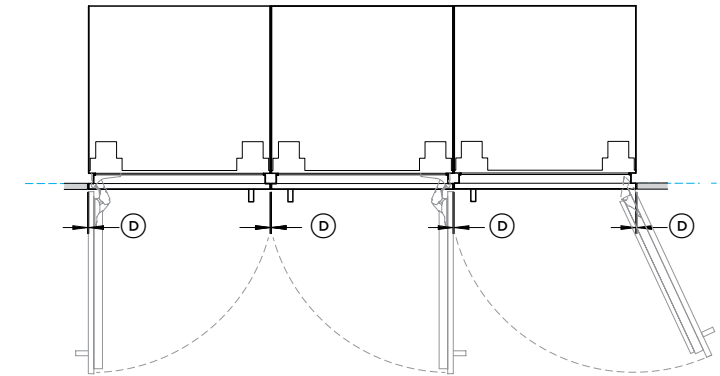

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available soon on our website [fisherpaykel.com](https://fisherpaykel.com)

## SERVICES

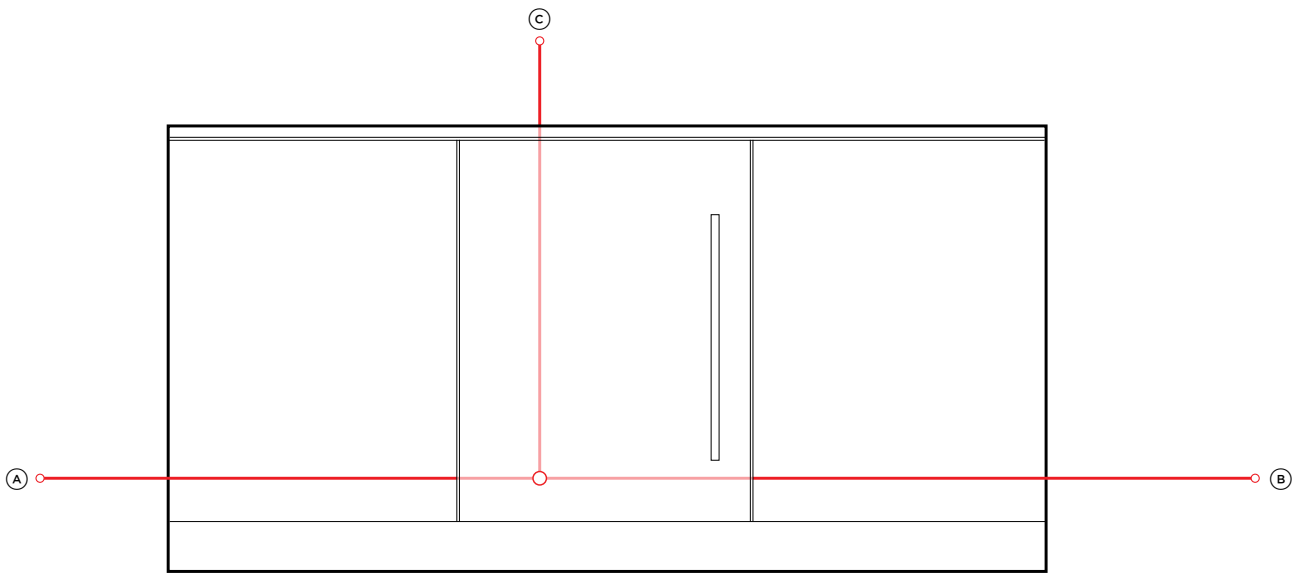

**POWER AND WATER CONNECTIONS**  
**Integrated Wine Cabinets & Integrated Beverage Centres**

For Models:  
Integrated Wine Cabinets - **RS6009V2RT1, RS6009V2R1**  
Integrated Beverage Centers - **RS6009BLT1, RS6009BL1**

All models can achieve opposite hinge location using the supplied parts.  
Please refer to Installation Guide for details.

Electrical Specifications	
Supply	220-240 V, 50 Hz
Service	10 A
Connection	Plug with flex cord

NOTE: Recommended that services are routed to the adjacent cabinet.

Cord Lengths Electrical		mm
A Power cord length (from the left edge of the product)*		1800
B Power cord length (from the right edge of the product)*		2000
C Power cord length (from the top of the product)*		1400


\* Excluding plug.

Recommended that services are located in neighbouring cabinets

INDICATES PRODUCT DATUM -----  
INDICATES CABINETRY CLEARANCES -----



IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit [fisherpaykel.com](https://fisherpaykel.com)

## HANDLE DATA SHEETS

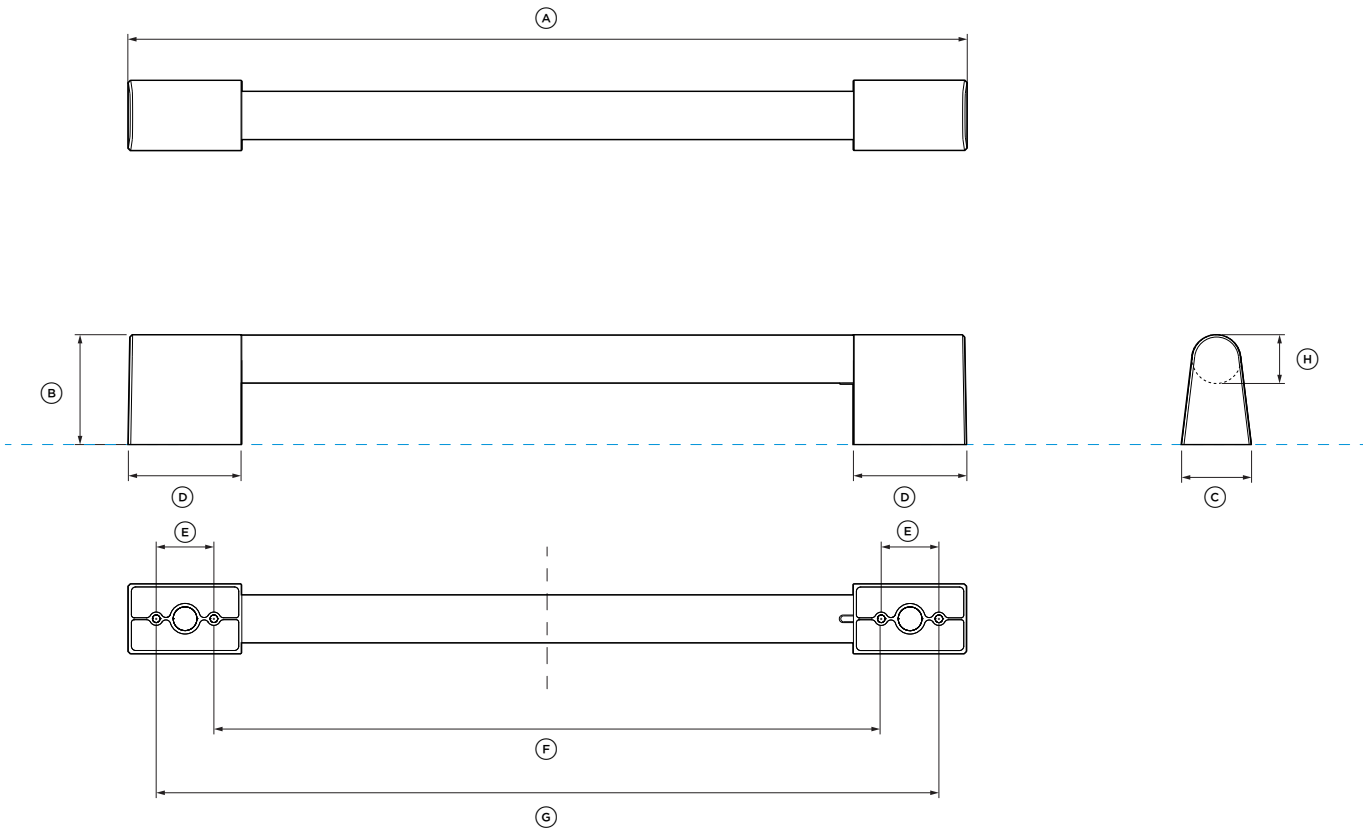

SCREWS

M5 X 12" Pan Head Socket Screw (4 per handle).  
Suits standard 19mm panel. Thicker panels may require counterboring or longer screws.

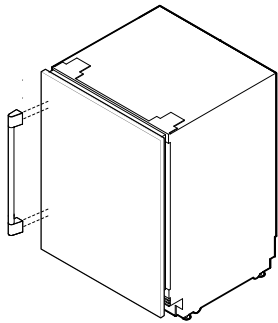

HANDLE DATA SHEET  
For all Integrated Wine Cabinet & Integrated Beverage Center models

Model No:  
Professional Handle AHP3RD09


For Models:  
Integrated Wine Cabinets - RS6009V2RT1, RS6009V2R1  
Integrated Beverage Centers - RS6009BLT1, RS6009BL1

Handle Dimensions	mm
A Overall length of handle	442
B Overall height of handle	58
C Overall width of handle	37
D Length of off-stand	60
E Distance between attachment holes	30
F Distance between inner attachment holes	353
G Distance between outer attachment holes	413
H Thickness of handle rail	25

INDICATES PRODUCT DATUM  
INDICATES CABINETRY CLEARANCES



IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit [fisherpaykel.com](https://fisherpaykel.com)



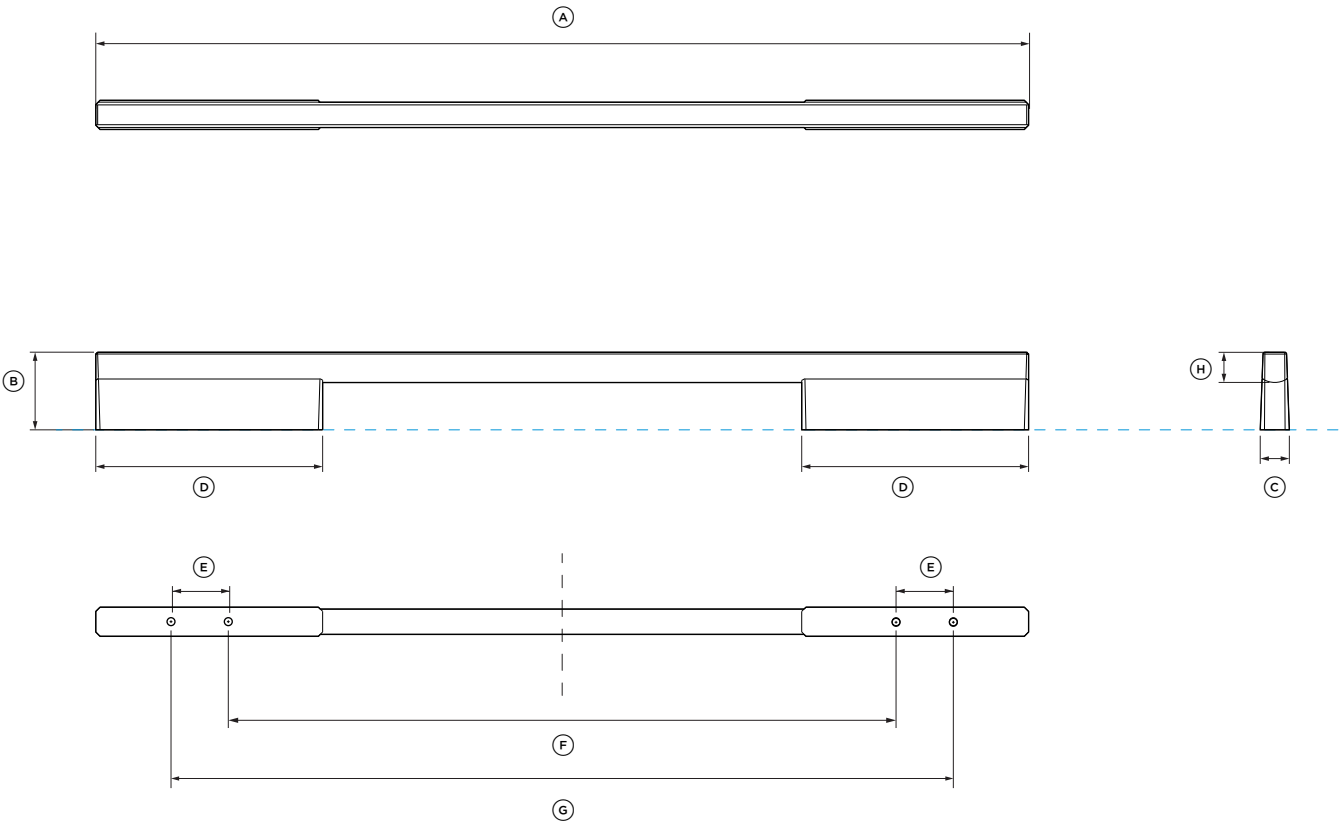

SCREWS

M5 X 12" Pan Head Socket Screw (4 per handle).  
Suits standard 19mm panel. Thicker panels may require counterboring or longer screws.

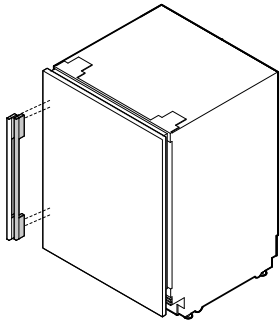

HANDLE DATA SHEET  
For all Integrated Wine Cabinet & Integrated Beverage Center models


Model No:  
**Fine Aluminium Handle AHD5RD09**  
**Fine Black Aluminium Handle AHD5RD09B**

For Models:  
Integrated Wine Cabinets - **RS6009V2RT1, RS6009V2R1**  
Integrated Beverage Centers - **RS6009BLT1, RS6009BL1**

Handle Dimensions	mm
A Overall length of handle	493
B Overall height of handle	41
C Overall width of handle	15
D Length of off-stand	120
E Distance between attachment holes	30
F Distance between inner attachment holes	353
G Distance between outer attachment holes	413
H Thickness of handle rail	16



INDICATES PRODUCT DATUM -----  
INDICATES CABINETRY CLEARANCES -----

IMPORTANT NOTE: Throughout this guide, dimensions may vary by  $\pm 2\text{mm}$  (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit [fisherpaykel.com](https://fisherpaykel.com)

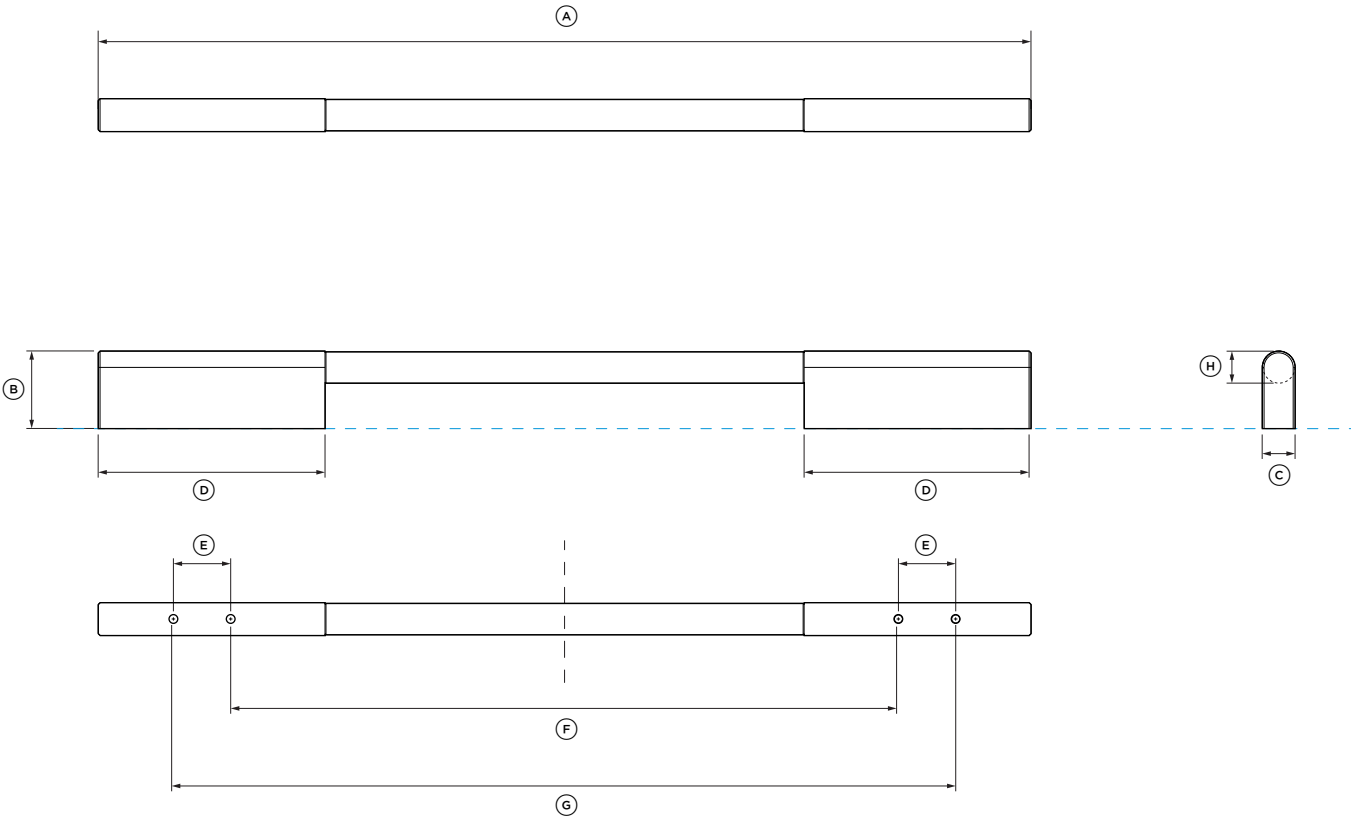

SCREWS

M5 X 12" Pan Head Socket Screw (4 per handle).  
Suits standard 19mm panel. Thicker panels may require counterboring or longer screws.

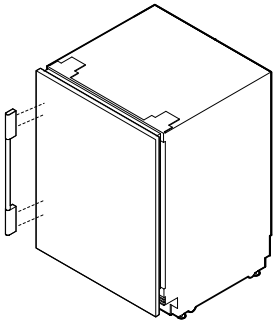

HANDLE DATA SHEET  
For all Integrated Wine Cabinet & Integrated Beverage Center models


Model No:  
**Fine Round Handle AHSRD09**

For Models:  
Integrated Wine Cabinets - **RS6009V2RT1, RS6009V2R1**  
Integrated Beverage Centers - **RS6009BLT1, RS6009BL1**

Handle Dimensions	mm
A Overall length of handle	493
B Overall height of handle	41
C Overall width of handle	17
D Length of off-stand	120
E Distance between attachment holes	30
F Distance between inner attachment holes	353
G Distance between outer attachment holes	413
H Thickness of handle rail	17



INDICATES PRODUCT DATUM  
INDICATES CABINETRY CLEARANCES

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit [fisherpaykel.com](https://fisherpaykel.com)

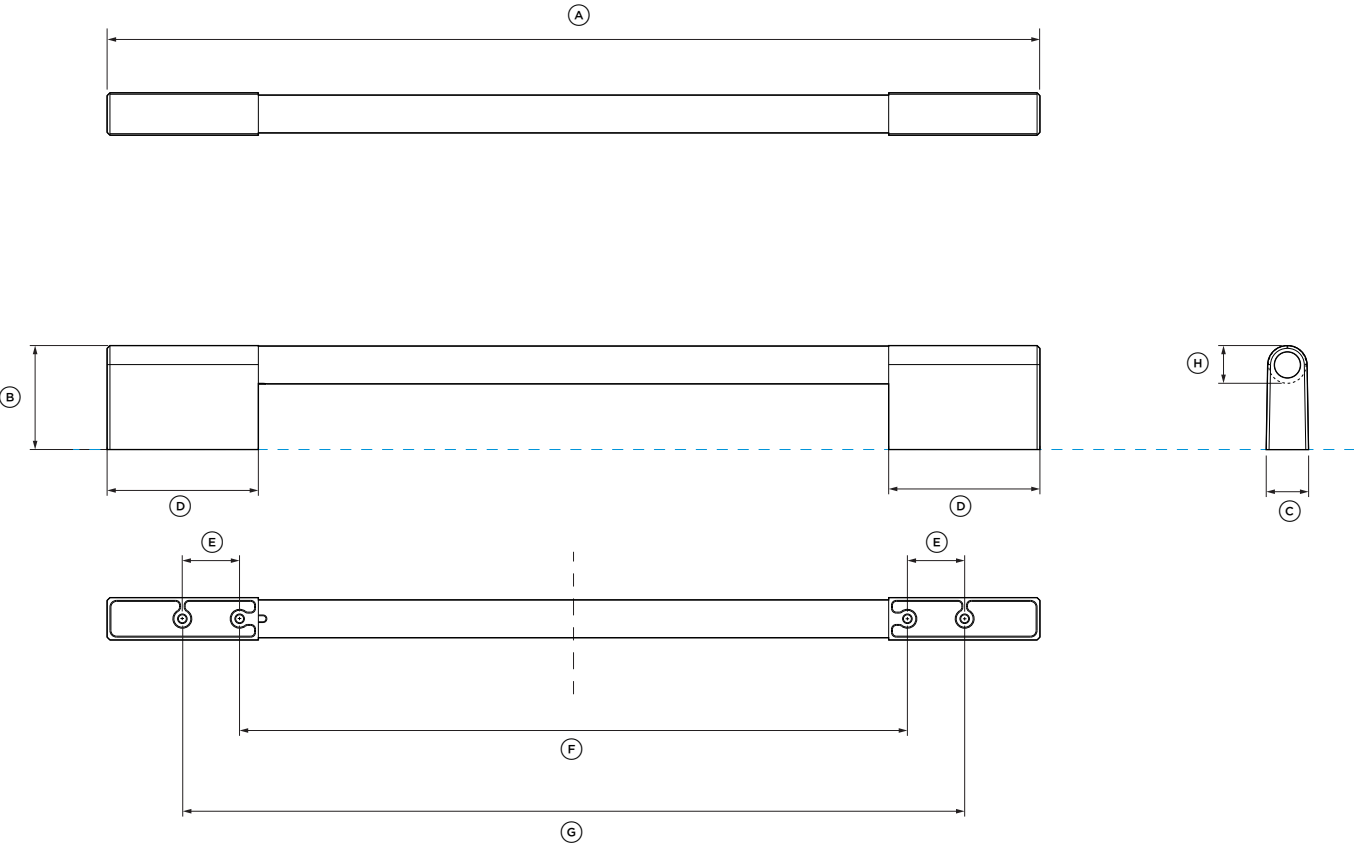

SCREWS

M5 X 12" Pan Head Socket Screw (4 per handle).  
Suits standard 19mm panel. Thicker panels may require counterboring or longer screws.

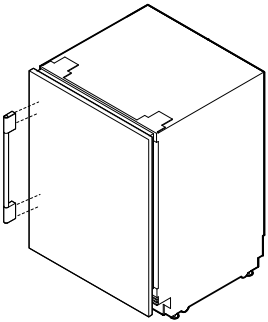

HANDLE DATA SHEET  
For all Integrated Wine Cabinet & Integrated Beverage Center models

Model No:  
**Classic Handle AHCLRD09**

For Models:  
Integrated Wine Cabinets - **RS6009V2RT1, RS6009V2R1**  
Integrated Beverage Centers - **RS6009BLT1, RS6009BL1**

Handle Dimensions	mm
(A) Overall length of handle	414
(B) Overall height of handle	55
(C) Overall width of handle	22
(D) Length of off-stand	80
(E) Distance between attachment holes	30
(F) Distance between inner attachment holes	353
(G) Distance between outer attachment holes	413
(H) Thickness of handle rail	20

INDICATES PRODUCT DATUM -----  
INDICATES CABINTRY CLEARANCES -----

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit [fisherpaykel.com](https://fisherpaykel.com)

