

**INTEGRATED FRENCH DOOR REFRIGERATOR  
FREEZER**

---

# PLANNING GUIDE

---

**SERIES 7 | RS90A | RS90AU | RS80A | RS80AU**

**FISHER & PAYKEL**

**INTRODUCTION**

This comprehensive planning guide provides you with the framework and tools to achieve your desired design outcome with Fisher & Paykel appliances. In this guide, you will find a range of conceptual, detailed, and dimensional product information to bring your ideas to life and create spaces that truly reflect your vision.

**SUPPORT**

For additional design planning and installation support please contact the Fisher & Paykel design support team.  
**designsupport@fisherpaykel.com**

**NOTES**

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Refer to our website fisherpaykel.com for the latest document version. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Specific installation guidance will be available with the product on delivery and on our website.

**CONTENTS**

<b>CONCEPT DESIGN</b>	<b>PAGE</b>	<b>DEVELOPED AND DETAILED DESIGN</b>	<b>PAGE</b>	<b>DEVELOPED AND DETAILED DESIGN</b>	<b>PAGE</b>
<b>Specification guide</b>		<b>Data sheets</b>		<b>Custom Door Panel Preparation</b>	
RS90A, RS80A	<b>4</b>	RS90A	<b>11</b>	RS90A Models	<b>22</b>
RS90AU, RS80AU	<b>5</b>	RS90AU	<b>12</b>	RS80A Models	<b>23</b>
		RS80A	<b>13</b>		
<b>Design choices</b>		RS80AU	<b>14</b>	<b>Services</b>	
Product options	<b>7</b>			RS90A	<b>25</b>
Handle accessories	<b>8</b>	<b>Planning Considerations</b>		RS90AU	<b>26</b>
Stainless steel panel accessories	<b>9</b>	Cavity specifications	<b>16</b>	RS80A	<b>27</b>
		Service specifications	<b>17</b>	RS80AU	<b>28</b>
		Custom panel extension	<b>18</b>		
		Hinge articulation	<b>19</b>	<b>Handles - data sheets</b>	
		Door opening clearance	<b>20</b>	RS90 Contemporary square fine handle	<b>30</b>
				RS90 Contemporary Round	<b>31</b>
				RS90 Classic handle	<b>32</b>
				RS90 Professional round flush	<b>33</b>
				RS80 Contemporary square fine handle	<b>34</b>
				RS80 Contemporary Round	<b>35</b>
				RS80 Classic handle	<b>36</b>
				RS80 Professional round flush	<b>37</b>

# SPECIFICATION GUIDE



### OVERVIEW

This roomy refrigerator with bottom freezer seamlessly integrates into the kitchen, fitting flush into the cabinetry. Customise with kitchen cabinetry or our stainless steel door panel accessory. Select one of our handle options or go custom to match any kitchen style.

### PRODUCTS\*

#### RS90A

Integrated French Door Refrigerator Freezer, 90cm wide

#### RS80A

Integrated French Door Refrigerator Freezer, 80cm wide

\*Some models may not be available in all markets, please check [fisherpaykel.com](http://fisherpaykel.com) for more information.

### OPTIONS

#### Integrated Custom Panels

Customise with your own kitchen cabinetry

#### Stainless Steel Panels

RD90A, RD80A

#### Handle kits

Contemporary square fine, Contemporary round, Classic, Professional round

### FEATURES

- ① Seamless flush fit with 4mm gaps.
- ② Customise with kitchen cabinetry or a stainless steel door panel accessory
- ③ Select Fisher & Paykel handles or customise handles to match any kitchen style.
- ④ ActiveSmart™ technology helps keep food fresher for longer by constantly maintaining the ideal temperature
- ⑤ Flexible storage makes it simple to store, access and remove food.
- ⑥ LED lighting illuminates the interior with a crisp, clean glow for enhanced visibility



---

### OVERVIEW

This roomy refrigerator with bottom freezer seamlessly integrates into the kitchen, fitting flush into the cabinetry.

Pair with our stainless steel door panel accessory (sold separately) for a sleek and modern finish.

External slimline water dispenser and internal ice maker provide filtered ice and water.

---

### PRODUCTS\*

#### RS90AU

Integrated French Door Refrigerator Freezer with chilled water and ice, 90cm wide

#### RS80AU

Integrated French Door Refrigerator Freezer with chilled water and ice, 80cm wide

\*Some models may not be available in all markets, please check [fisherpaykel.com](http://fisherpaykel.com) for more information.

---

### OPTIONS

#### Stainless Steel Panels

RD90AU, RD80AU

#### Handle kits

Contemporary square fine, Contemporary round, Classic, Professional round

---


---

### FEATURES


- ① Seamless flush fit with 4mm gaps
  - ② Pair with our stainless steel door panels (sold separately) for a sleek modern finish.
  - ③ ActiveSmart™ technology helps keep food fresher for longer by constantly maintaining the ideal temperature.
  - ④ Flexible storage makes it simple to store, access and remove food.
  - ⑤ LED lighting illuminates the interior with a crisp, clean glow for enhanced visibility.
  - ⑥ Slimline external water dispenser makes it easy to fill almost any sized jug or vessel.
  - ⑦ Internal ice maker means ice is always available in a dedicated freezer bin.
-

## DESIGN CHOICES

**INTEGRATED FRENCH DOOR 90CM**

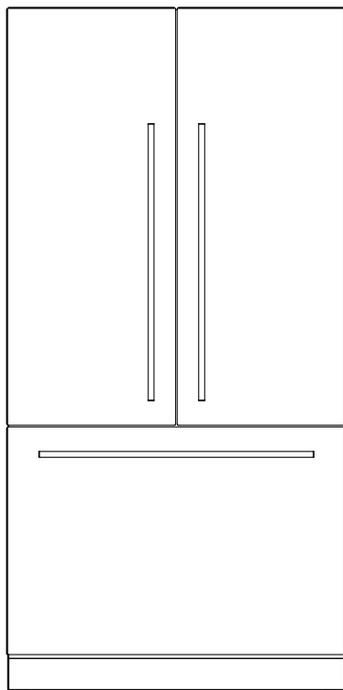


①

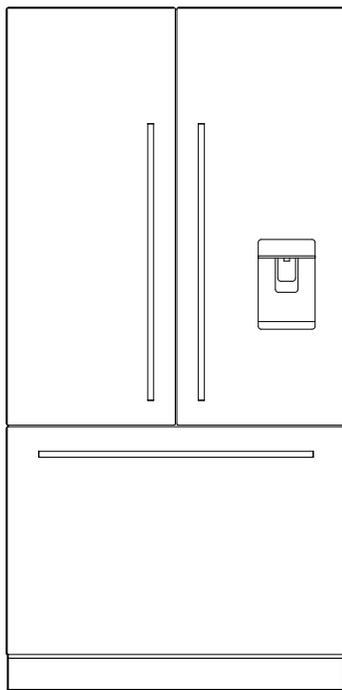


②

**INTEGRATED FRENCH DOOR 80CM**

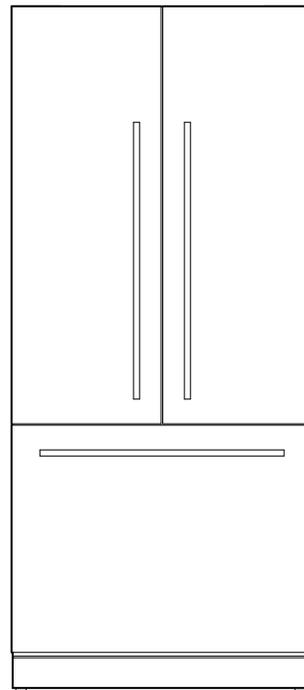

③

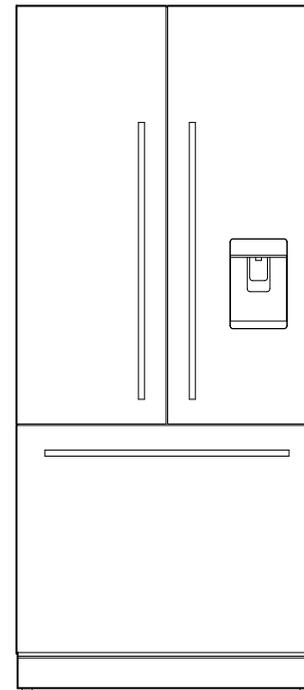

④

**OPTIONS**

① 90cm Refrigerator Freezer Large capacity  
Custom or stainless steel panels optional

② 90cm Refrigerator Freezer Large capacity with ice and water  
Stainless steel panels available

**MODELS**

RS90A

RS90AU

**OPTIONS**

③ 80cm Refrigerator Freezer Large capacity  
Custom or stainless steel panels optional

④ 80cm Refrigerator Freezer Large capacity with ice and water  
Stainless steel panels available


**MODELS**

RS80A

RS80AU

Handle kits all models - Contemporary Square Fine, Contemporary Round, Classic, Professional Round

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

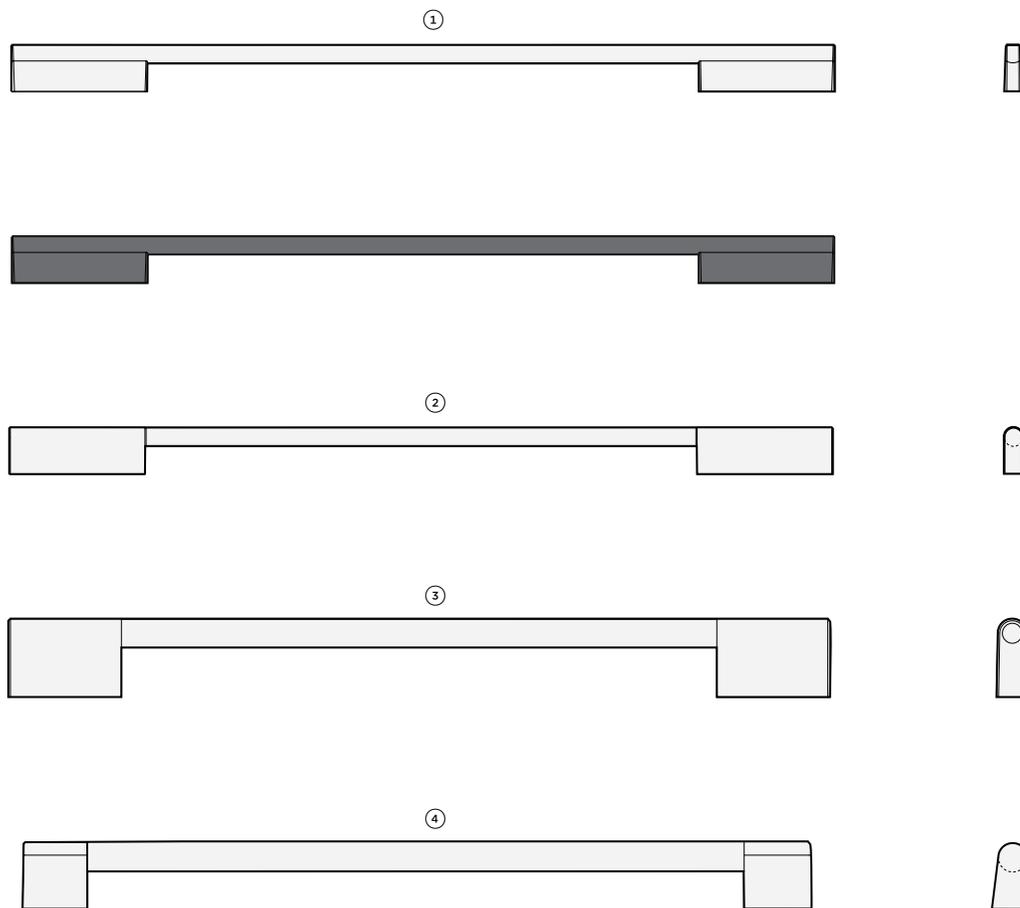


HANDLE KITS
① Contemporary Square Fine
② Contemporary Round
③ Classic Handle
④ Professional Round Flush

FINISH
Aluminium
Black
Aluminium
Stainless Steel
Aluminium


90CM REFRIGERATOR FREEZER MODELS
AHD5RD90A
AHD5RD90AB
AHS-ASBI-A
AHCLRD90A
AHP3RD90A

80CM REFRIGERATOR FREEZER MODELS
AHD5RD80A
AHD5RD80AB
AHSRS80A
AHCLRD80A
AHP3RD80A


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

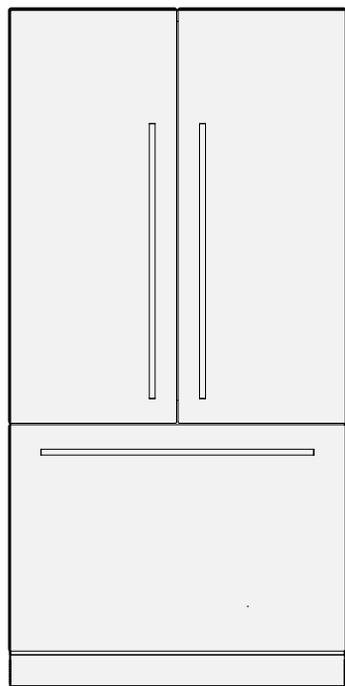


①

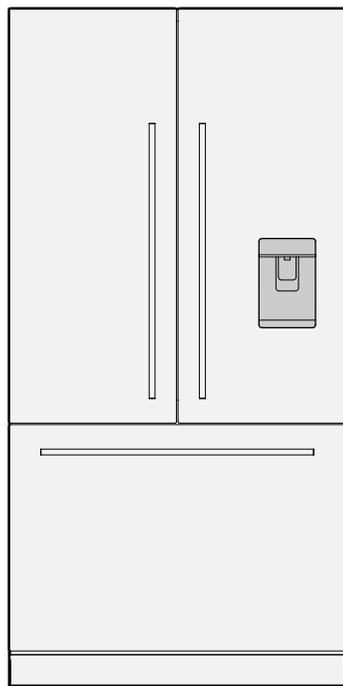

②

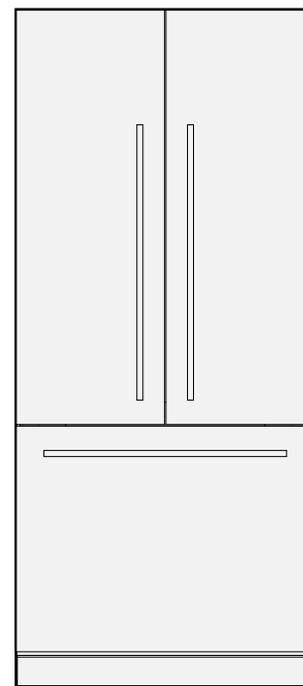

③

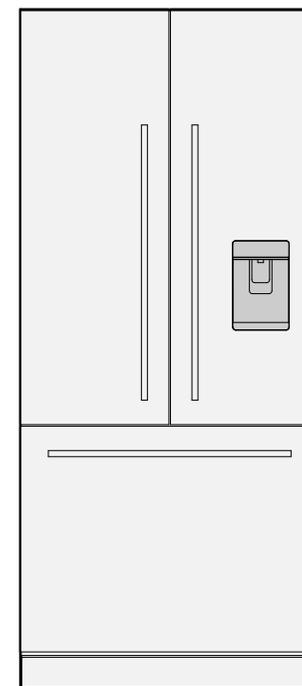

④

**REFRIGERATOR FREEZER MODELS**

- ① RS90A
- ② RS90AU
- ③ RS80A
- ④ RS80AU

**FINISH**


- Brushed stainless steel
- Brushed stainless steel
- Brushed stainless steel
- Brushed stainless steel

**STAINLESS STEEL PANELS**

- RD90A
- RD90AU
- RD80A
- RD80AU

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

## DATA SHEETS

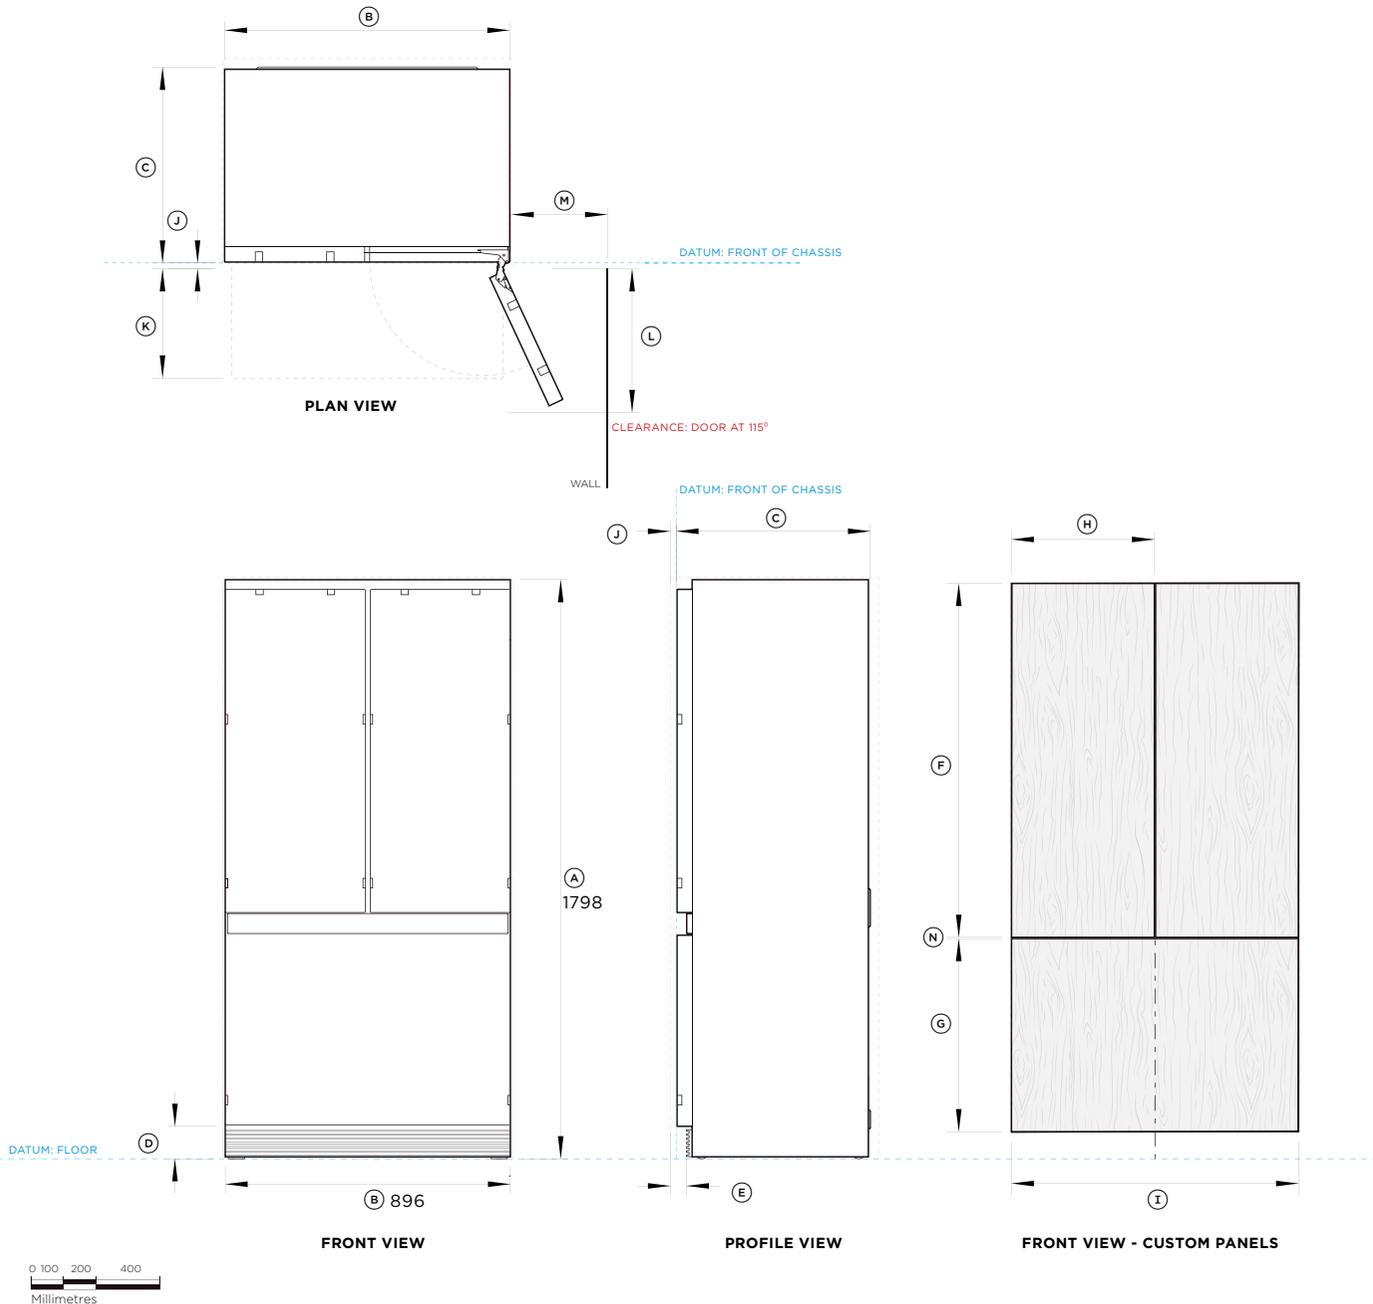

**Model no:**

**RS90A models** Integrated French Door Refrigerator Freezer

**Shown with:**

Custom Door Panel\*  
Stainless steel door panels optional (RD90A)

Product Dimensions		mm
(A)	Overall height of product	1798
(B)	Overall width of chassis	896
(C)	Depth of chassis (without handle and door panel)	604
(D)	Height of toe kick	100
(E)	Depth of toe kick - from front of door panels to grill*	50
Custom Door Panel Minimum Dimensions		mm
(F)	Height of top door panel	1096
(G)	Height of bottom drawer panel	598
(H)	Width of top door panels	446
(I)	Width of bottom drawer panel	896
(J)	Depth of fridge front panels (excl. handles)	16-19
Door/Drawer Opening Dimensions*		mm
(K)	Depth of drawer (open) from front of panel	360
(L)	Depth of door (widest opening) from front of panel**	445
(M)	Minimum door clearance** to wall (widest opening)**	300
(N)	Minimum panel gap clearance	4


Minimum Clearances		mm
Cavity overall height		1800 - 1802
Overall width of cavity		900-904
Minimum overall depth of cavity		650

\* Custom panels to be manufactured & fitted by cabinet maker.



\*\*Assumes 19mm door panels on adjacent cabinetry

----- INDICATES CABINETRY / PRODUCT DATUM  
 - - - - - INDICATES CABINETRY CLEARANCES  
 - · - · - INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

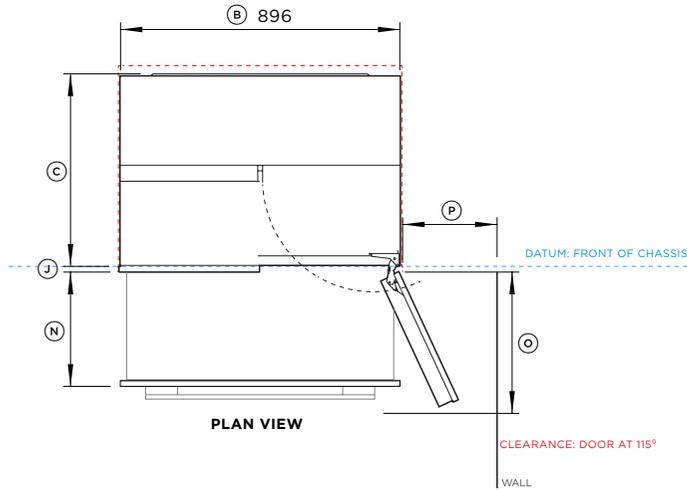

DATUM: FRONT OF CHASSIS

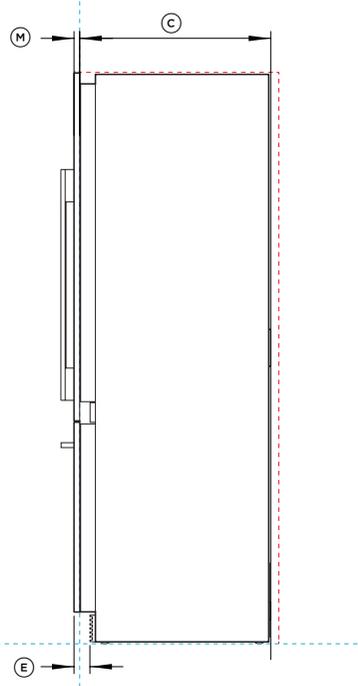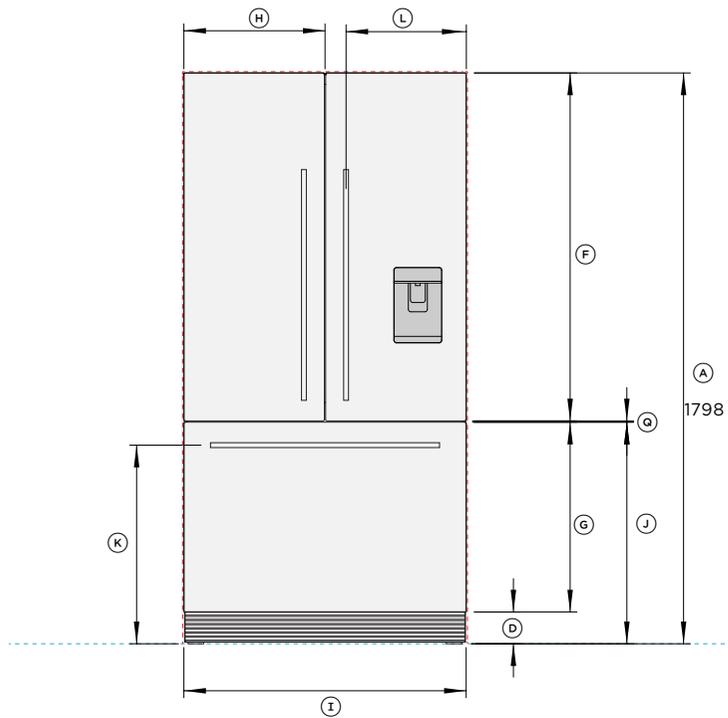

**Model no:**  
**RS90AU models** Integrated French Door Refrigerator Freezer

**Shown with:**  
 RD90AU Stainless steel door panels


Product Dimensions	mm
A Overall height of product	1798
B Overall width of chassis	896
C Depth of chassis (without handle and door panel)	604
D Height of toe kick	100
E Depth of toe kick - from front of door panels*	50
Door Panel Dimensions	mm
F Height of top door panel	1096
G Height of bottom drawer panel	598
H Width of top door panels	446
I Width of bottom drawer panel	896
J Height from floor to top of drawer	698
K Height from floor to centre of handle	626
L Distance to centre of top handles	381
M Panel depth	19
Door/Drawer Opening Dimensions*	mm
N Depth of drawer (open) from front of panel	360
O Depth of door (widest opening) from front of panel	445
P Minimum door clearance** to wall (widest opening)	300
Q Minimum panel gap clearance	4
Minimum Clearances	mm
Cavity overall height	1800
Overall width of cavity	900-904
Minimum overall depth of cavity	650

**Custom panels covering water dispenser (internal ice only):**  
 A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.


**Custom panels including water dispenser:**  
 The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD90AU). Alternatively to use the dispenser with custom door panels, please contact [designsupport@fisherpaykel.com](mailto:designsupport@fisherpaykel.com) for guidance and support.

----- INDICATES CABINETRY / PRODUCT DATUM  
 - - - - - INDICATES CABINETRY CLEARANCES  
 - · - · - INDICATES CUTOUT


**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

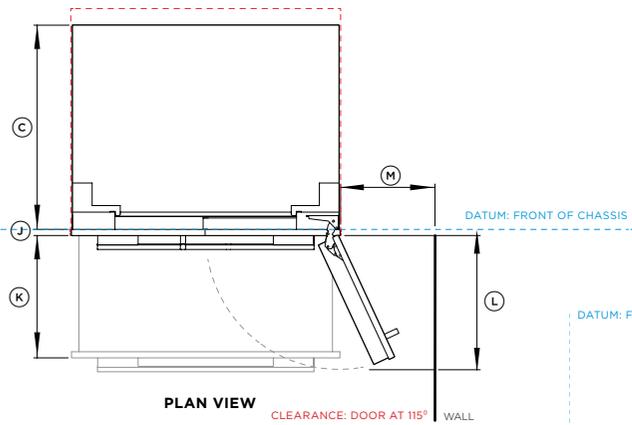


PLAN VIEW

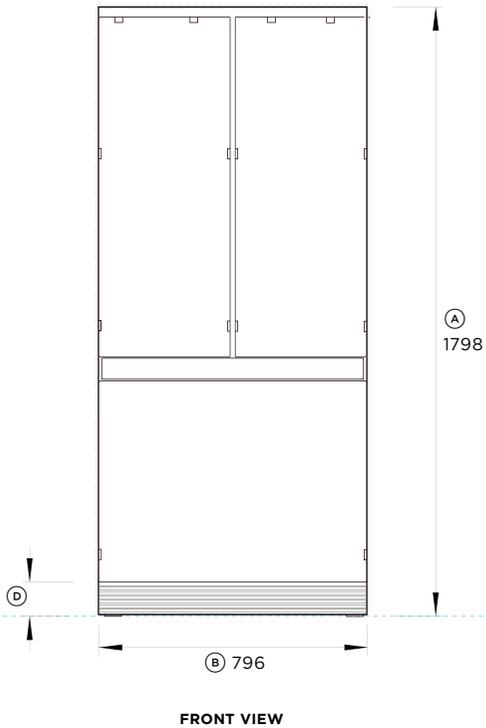

FRONT VIEW

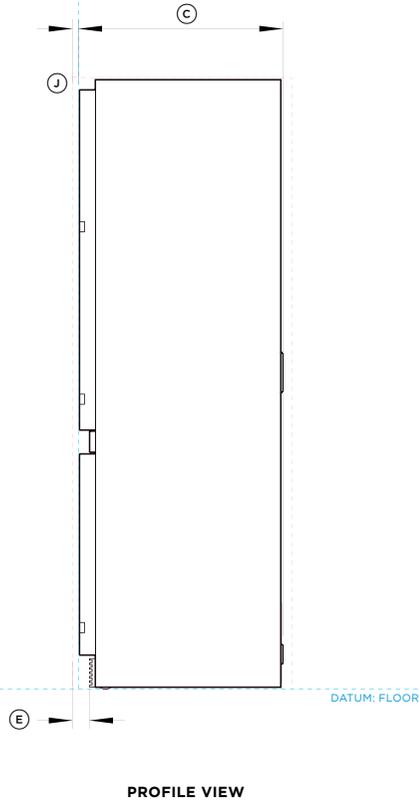

PROFILE VIEW

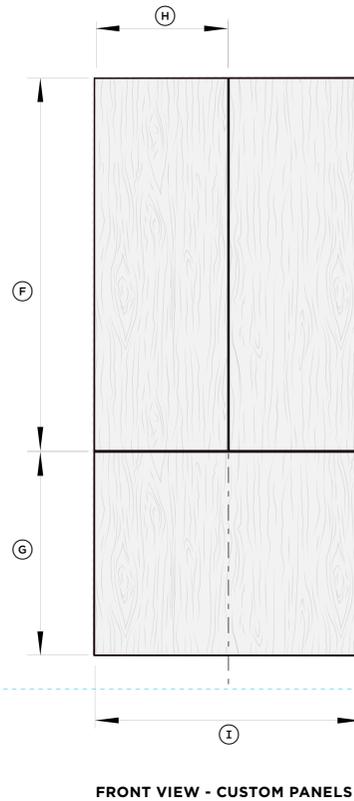

FRONT VIEW - CUSTOM PANELS



**Model no:**

RS80A1

Integrated French Door Refrigerator Freezer

**Shown with:**

Custom Door Panel\*  
Stainless steel door panels optional

**Product Dimensions**

**mm**

Ⓐ	Overall height of product	1798
Ⓑ	Overall width of chassis	796
Ⓒ	Depth of chassis (without handle and door panel)	604
Ⓓ	Height of toe kick	100
Ⓔ	Depth of toe kick - from front of door panels*	50

**Custom Door Panel Minimum Dimensions**

**mm**

Ⓕ	Minimum height of top door panel	1096
Ⓖ	Minimum height of bottom drawer panel	598
Ⓗ	Width of top door panels	396
Ⓘ	Width of bottom drawer panel	796
Ⓙ	Depth of fridge front panels (excl. handles)	16-19

**Door/Drawer Opening Dimensions\***

**mm**

Ⓚ	Depth of drawer (open) from front of panel	360
Ⓛ	Depth of door (widest opening) from front of panel**	395
Ⓜ	Minimum door clearance** to wall (widest opening)**	280

**Minimum Clearances**

**mm**

	Minimum panel gap clearance	4
	Cavity overall height	1800
	Overall width of cavity	800-804
	Minimum overall depth of cavity	650

\* Custom panels to be manufactured & fitted by cabinet maker.


\*\*Assumes 19mm door panels on adjacent cabinetry

----- INDICATES CABINETRY / PRODUCT DATUM

----- INDICATES CABINETRY CLEARANCES

----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

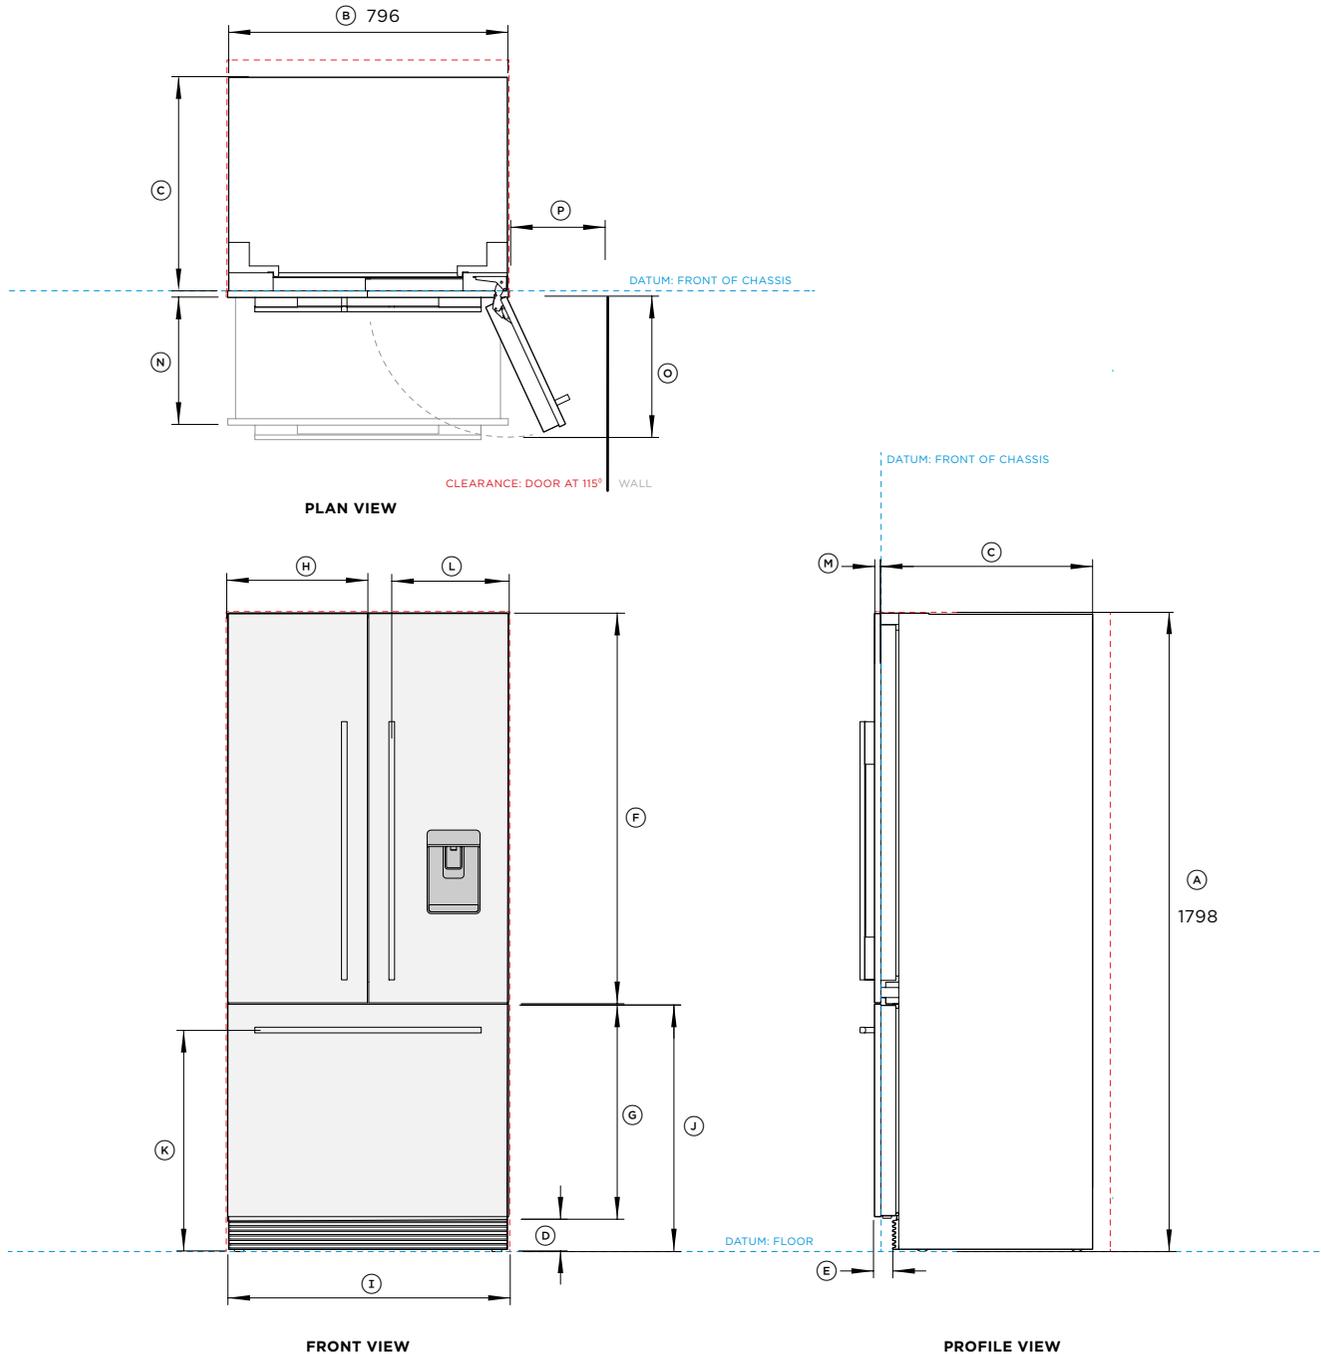

<b>Model no:</b>		
<b>RS80AU models</b>	Integrated French Door Refrigerator Freezer	
<b>Shown with:</b>		
RD80AU	Stainless steel door panels	
<b>Product Dimensions</b>		
mm		
Ⓐ	Overall height of product	1798
Ⓑ	Overall width of chassis	796
Ⓒ	Depth of chassis (without handle and door panel)	604
Ⓓ	Height of toe kick	100
Ⓔ	Depth of toe kick - from front of door panels*	50
<b>Door Panel Dimensions</b>		
mm		
Ⓕ	Height of top door panel	1096
Ⓖ	Height of bottom drawer panel	598
Ⓗ	Width of top door panels	396
Ⓙ	Width of bottom drawer panel	796
Ⓝ	Height from floor to top of drawer	698
Ⓚ	Height from floor to centre of handle	626
Ⓛ	Distance to centre of top handles	381
Ⓜ	Panel depth	19
<b>Door/Drawer Opening Dimensions*</b>		
mm		
Ⓝ	Depth of drawer (open) from front of panel	360
Ⓞ	Depth of door (widest opening) from front of panel	445
Ⓟ	Minimum door clearance** to wall (widest opening)	300
<b>Minimum Clearances</b>		
mm		
	Minimum panel gap clearance	4
	Cavity overall height	1800
	Overall width of cavity	800-804
	Minimum overall depth of cavity	650
<b>Custom panels covering water dispenser (internal ice only):</b>		
A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.		
<b>Custom panels including water dispenser:</b>		
The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD80AU). Alternatively to use the dispenser with custom door panels, please contact <a href="mailto:designsupport@fisherpaykel.com">designsupport@fisherpaykel.com</a> for guidance and support.		
----- INDICATES CABINETRY / PRODUCT DATUM		
- - - - - INDICATES CABINETRY CLEARANCES		
- · - · - INDICATES CUTOUT		
IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit <a href="http://fisherpaykel.com">fisherpaykel.com</a>		


## PLANNING CONSIDERATIONS

**CAVITY SPECIFICATIONS**


Dimensions	mm
(A) Cavity height*	1800 - 1802
(B) RS90 Overall cavity width	900 - 904
RS80 Overall cavity width	800 - 804
(C) Minimum internal depth**	650
(D) Toe kick height	100
(E) Product height	1798
(F) Chassis width	896
(G) Chassis depth (excluding panels)	606
(H) Minimum gap from edge of door panel to cabinetry	4
(I) Minimum required finished return	120

\*The minimum cabinet gap above door panels is 4mm

\*\*Water and electrical connections must not protrude from the wall if located behind the refrigerator.

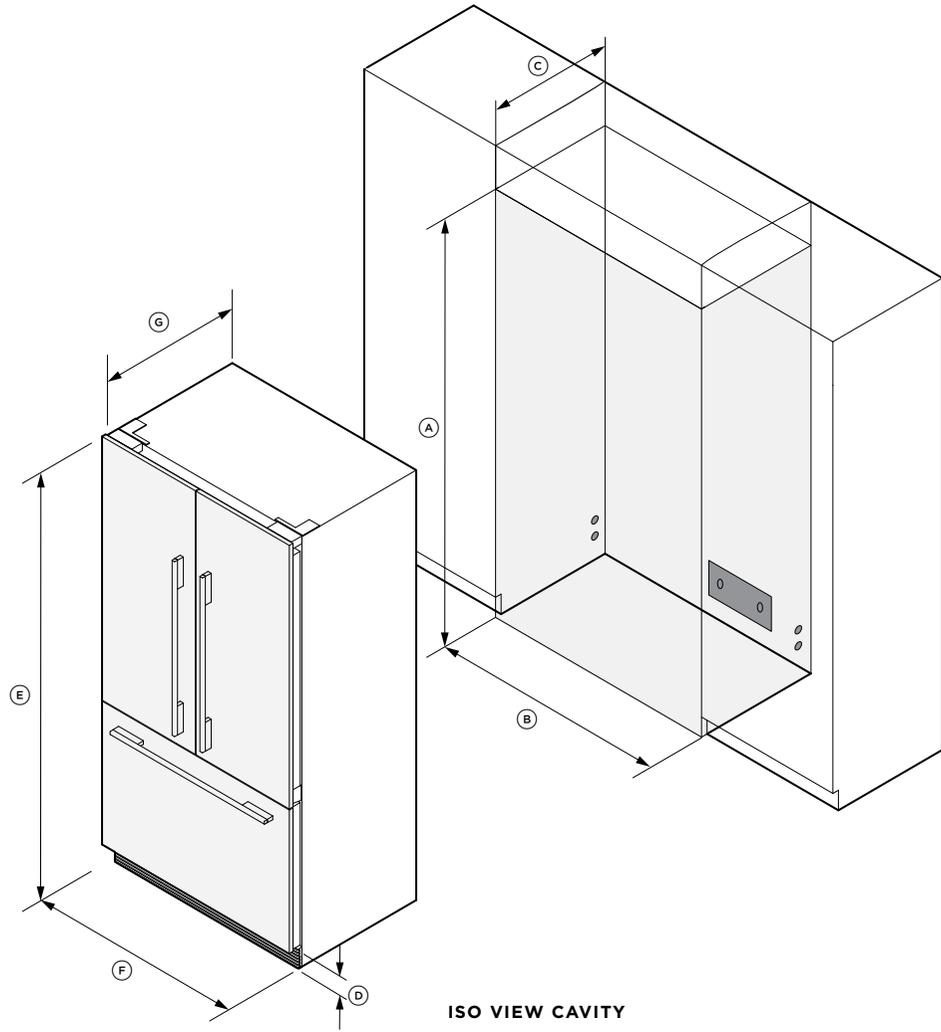


**ISO VIEW CAVITY**

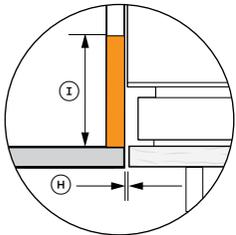

**UNFRAMED CABINETRY**

Ensure cabinetry extends minimum 120mm.

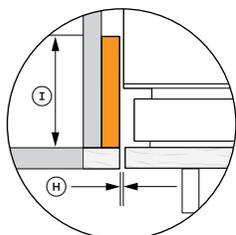

**FRAMED CABINETRY**

Ensure that there is a finished return of minimum 120mm added to the cavity.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com


**SERVICE SPECIFICATIONS**

Electrical connection should be located in an adjacent cabinet to either side, or above the refrigerator cavity.


Ensure that the power connection is accessible after installation.

Cavity Dimensions	mm
Ⓐ Height of supply area	130
Ⓑ RS90 Width of supply area RS80 Width of supply area	355 275
Ⓒ Supply area - distance from left side of cavity	145
Ⓓ Supply area - distance from floor	72

If water or power connections are in this location the water tap must to be recessed into the wall.  
The recess must allow for an 80mm bend radius for the water hose.

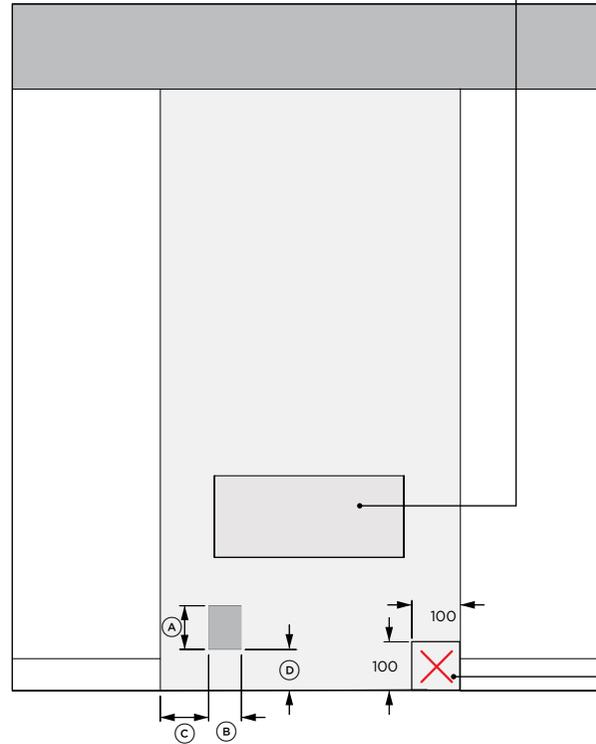






**FRONT VIEW - CAVITY SUPPLY POSITION**

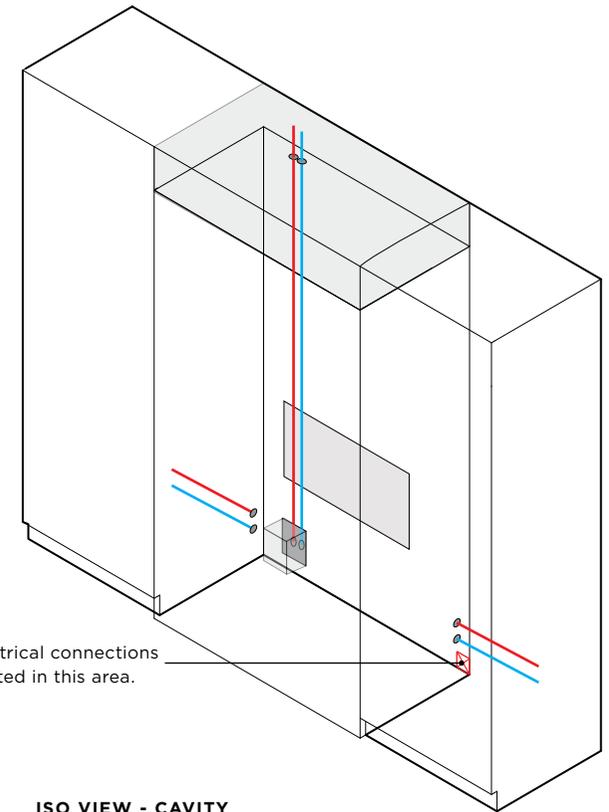

Water and electrical connections cannot be located in this area.

**ISO VIEW - CAVITY HOSE & ELECTRICAL ROUTING OPTIONS**

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

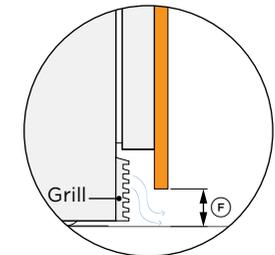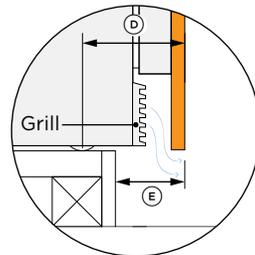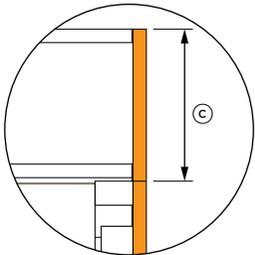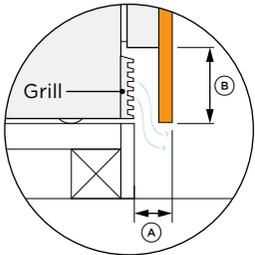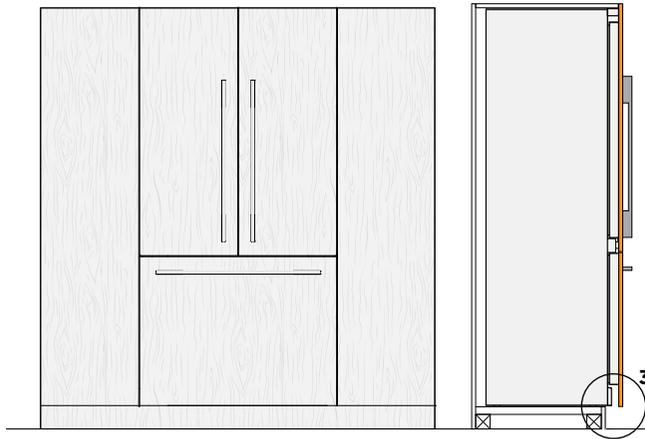

DETAIL VIEW 1

DETAIL VIEW 2

DETAIL VIEW 3

DETAIL VIEW 4

**INSTALL WITH PLINTH AND EXTENDED PANELS**

The drawer panel can extend downward to hide the airflow grill. Door panels can be extended upwards to align with the surrounding cabinets.

Dimensions	mm
Ⓐ Airflow gap	51
Ⓑ Minimum lower panel extension to cover grill	93
Ⓒ Maximum upper panel extension	200

**PLINTH AND INCREASED TOE KICK DEPTH**

The plinth can be set back to allow a deeper toe kick. The door panels can extend to cover the cavity top.

Dimensions	mm
Ⓓ Center of front wheels to front of door panel	136
Ⓔ Maximum toe kick depth	100

**EXTENDED DRAWER PANEL TO FLOOR**

The drawer panel can be extended down to the minimum distance from the floor (50mm) for a lower toe kick.

Dimensions	mm
Ⓕ Minimum distance panel to floor	50

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

**PANEL DETAILS**


Custom panels require a minimum radius of 2mm on panel edges to prevent clashing with adjacent cabinetry.

Panels thicker than 19mm require a larger gap between adjacent cabinetry and a larger radius to prevent clashing.

Custom Panel Dimensions		mm
Ⓐ	Front panel thickness	16mm-19mm
Ⓑ	Gap between custom panel and adjacent panels	4

Custom Panel Maximum Weight		
RS90	Each door panel	Max 10kg
RS90	Drawer panel	Max 9.5kg
RS80	Each door panel	Max 10kg
RS80	Drawer panel	Max 9.5kg

Weights includes handle.  
Left-hand hinge models are a mirror of version shown.

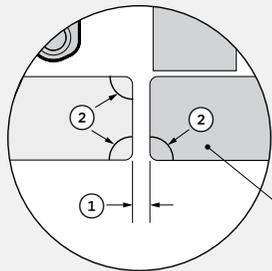


Adjacent cabinetry panels require a minimum 2mm radius

**DETAIL 1**


Custom Panel Edge Radius		
Panel Thickness	Ⓐ Gap to adjacent panel	Ⓑ Radius
16-19mm	4mm	2mm Radius
16-19mm	5mm*	1mm Radius
16-19mm	5.5mm*	0mm Radius

\*The side of the refrigerator may be visible if gaps are over 4mm.

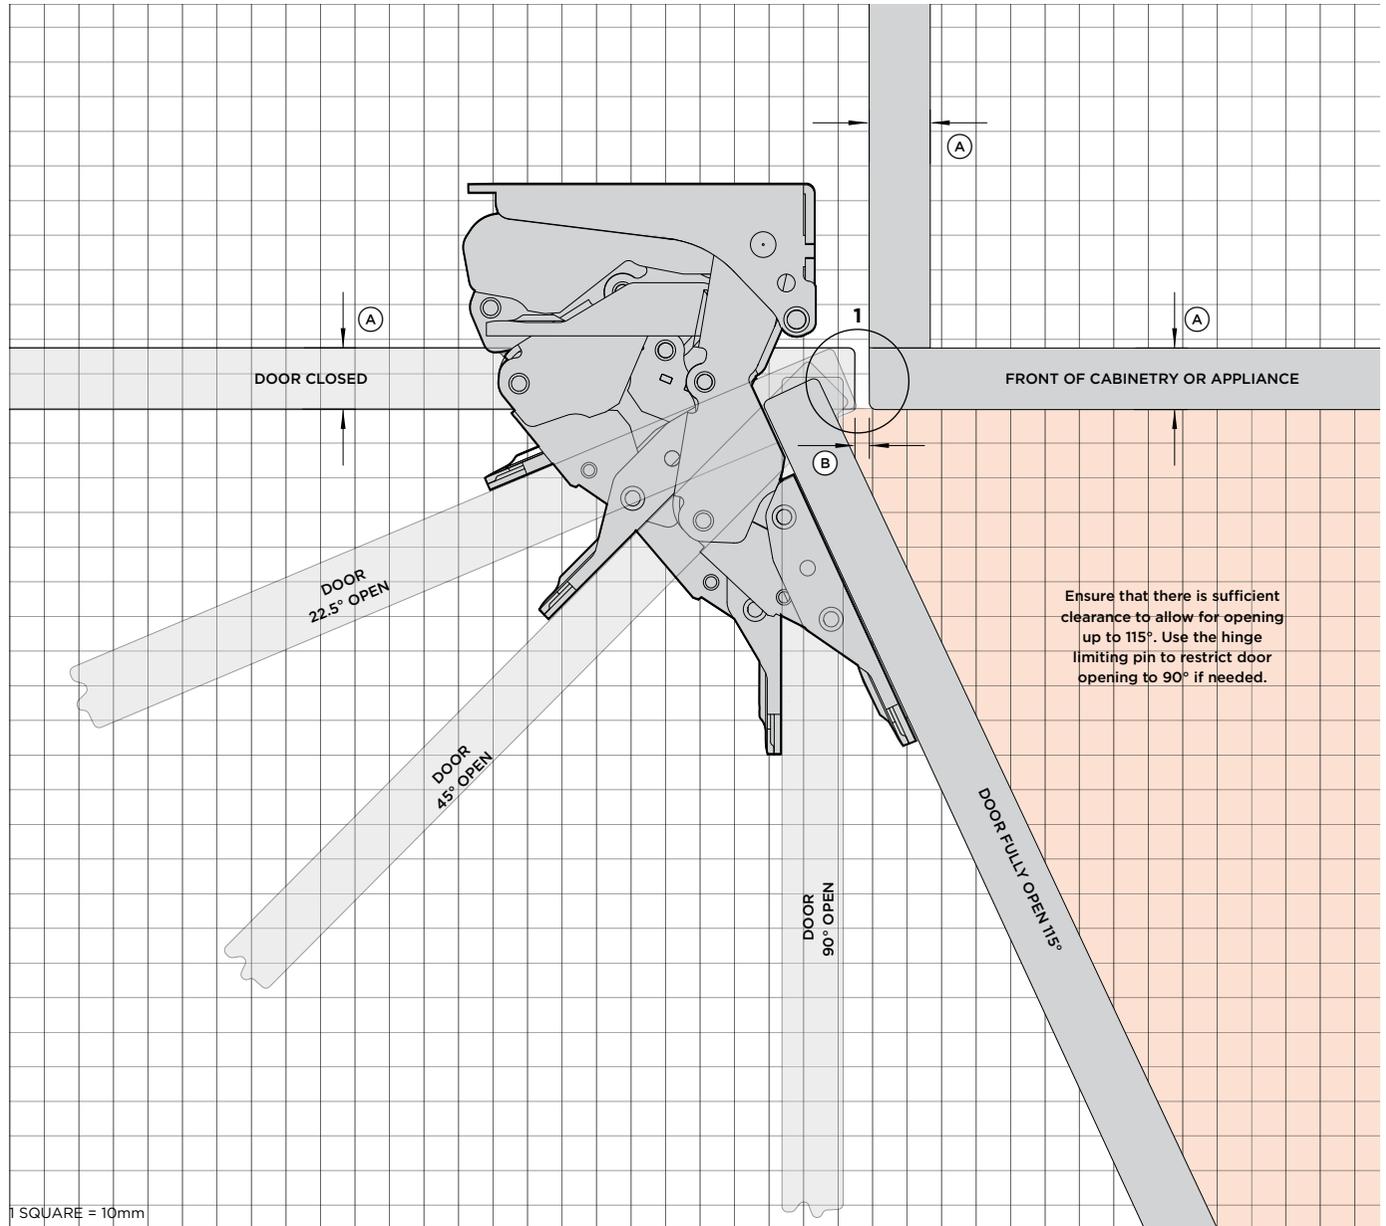


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

DESIGN PLANNING | DOOR OPENING CLEARANCE

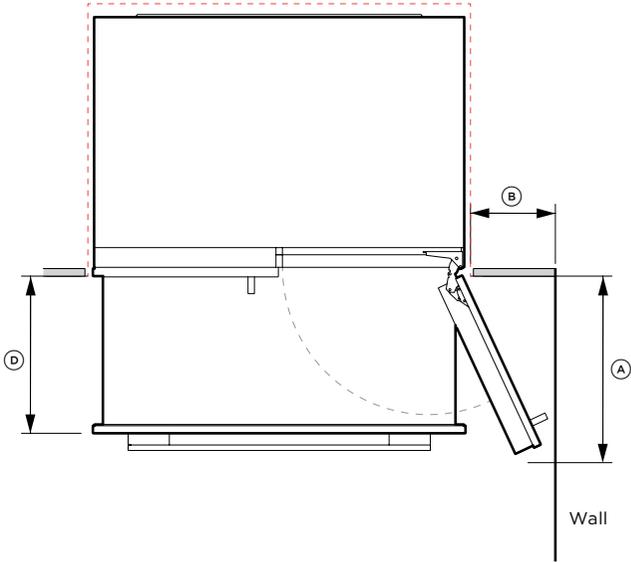

**FULL INTERNAL ACCESS 115°**

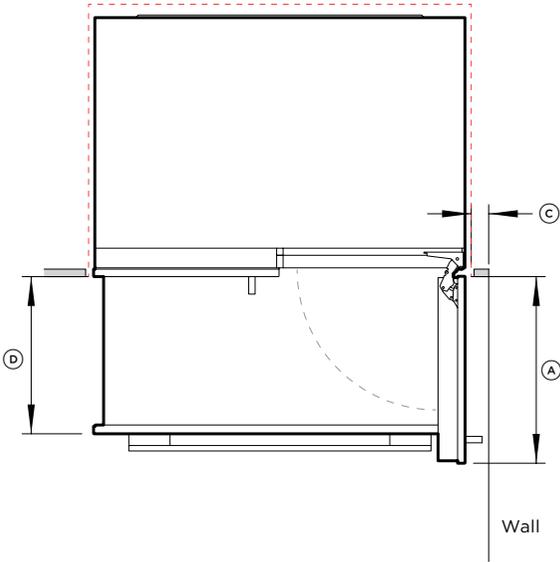

**REDUCED INTERNAL ACCESS 90°**

Hinge limiting pins restrict the door opening to 90°.

MINIMUM DOOR CLEARANCES	90cm MODELS		80cm MODELS	
	in	mm	in	mm
Ⓐ Door swing depth	min 17 1/2	min 445	min 15 9/16	min 395
Ⓑ Clearance for handle (at 115°)*	11 13/16	min 300	11 13/16	min 280
Ⓒ Clearance for handle (at 90°)*	3 15/16	min 100	3 15/16	min 100
Ⓓ Drawer open depth	14 13/16	min 360	14 13/16	min 360

\* Limiting pins are required for a 90° door swing. Dimensions assume a panel depth of 19mm (3/4"). Thicker panels will require a wider gap between panels.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

## CUSTOM DOOR PANEL PREPARATION

Models	
<b>RS80A</b>	Integrated French Door Refrigerator Freezer
Custom Panel Dimensions*	
(A) Height of door panels	1096 mm
(B) Width of door panels	396 mm
(C) Height of drawer panel (Do not extend more than 50mm from floor)	598 mm
(D) Width of drawer single panel	796 mm
Panel thickness	16 - 19 mm
Clearance Dimensions*	
Minimum cabinetry gap clearance from edge of door panel	4 mm

\* Custom panels to be manufactured & fitted by cabinet maker.

Dimensions apply for the preparation and installation of Custom door panels.

Dwg and Dxf files of the panel preparation can be downloaded from [www.fisherpaykel.com](http://www.fisherpaykel.com)

The thickness of the custom door panel can vary provided that the screws do not penetrate beyond the full depth of the door panel.


---

**RS80AU MODELS**

**Custom panels covering water dispenser (internal ice only):**  
A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.

**Custom panels including water dispenser:**  
The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD90AU). Alternatively to use the dispenser with custom door panels, please contact [designsupport@fisherpaykel.com](mailto:designsupport@fisherpaykel.com) for guidance and support.

**CUSTOM PANEL**

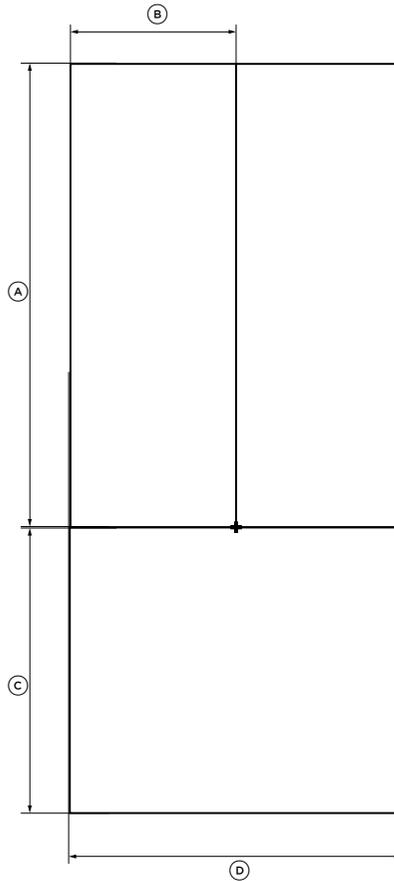


**PILOT HOLES**

8x Pilot holes recommended for bracket attachment. (Do not penetrate front surface).  
Do not place pilot holes for handle attachment in marked areas to avoid clashing with panel attachment brackets.

**MOUNTING HOLES**

Dimensions given in millimetres, do not fix handles through mounting holes.

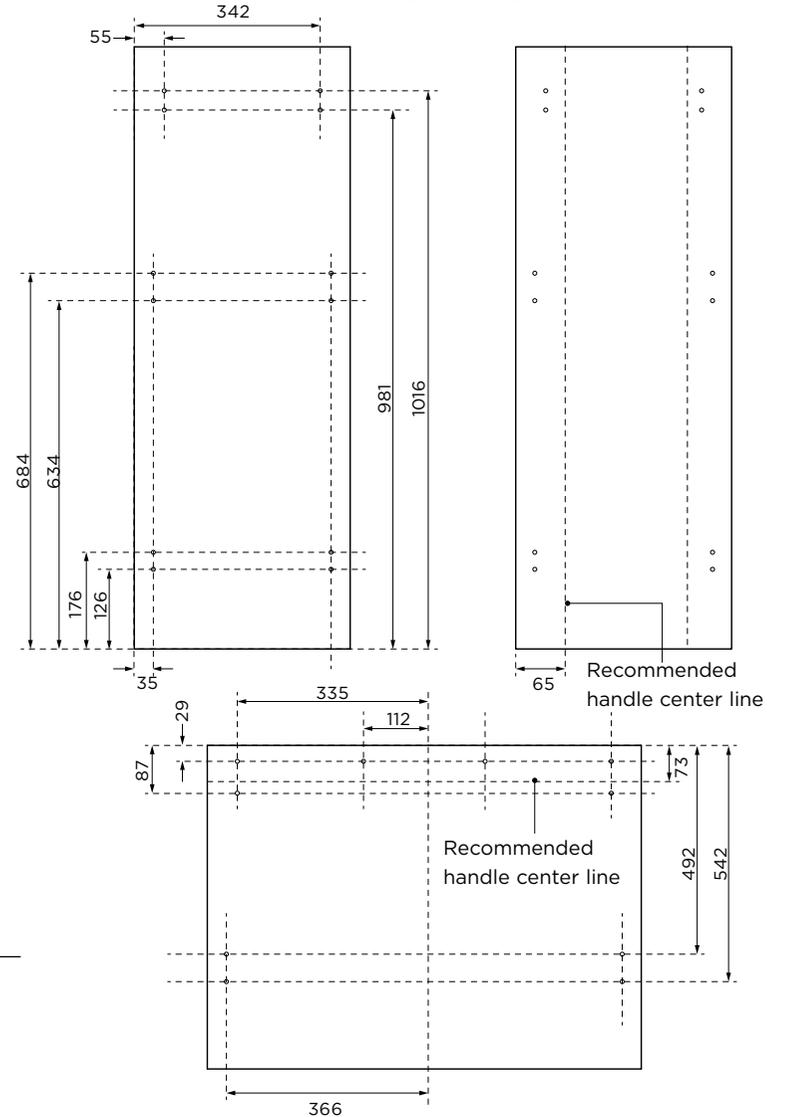

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)

Models	
<b>RS90A</b>	Integrated French Door Refrigerator Freezer
Custom Panel Dimensions*	
(A) Height of door panels	1096 mm
(B) Width of door panels	446 mm
(C) Height of drawer panel (do not extend more than 50mm from floor)	598 mm
(D) Width of drawer panel	896 mm
Panel thickness	16 - 19 mm
Clearance Dimensions*	
Minimum cabinetry gap clearance from edge of door panel	4 mm

\* Custom panels to be manufactured & fitted by cabinet maker.

Dimensions apply for the preparation and installation of Custom door panels.

Dwg and Dxf files of the panel preparation can be downloaded from [www.fisherpaykel.com](http://www.fisherpaykel.com)

The thickness of the custom door panel can vary provided that the screws do not penetrate beyond the full depth of the door panel.


---

**RS90AU MODELS**

**Custom panels covering water dispenser (internal ice only):**  
A custom door panel can be fitted in front of the water dispenser panel. The water dispenser will be automatically disabled.

**Custom panels including water dispenser:**  
The water dispenser assembly and control panel are included only with the purchase of the stainless steel door panel kit (RD80AU). Alternatively to use the dispenser with custom door panels, please contact [designsupport@fisherpaykel.com](mailto:designsupport@fisherpaykel.com) for guidance and support.

**CUSTOM PANEL**

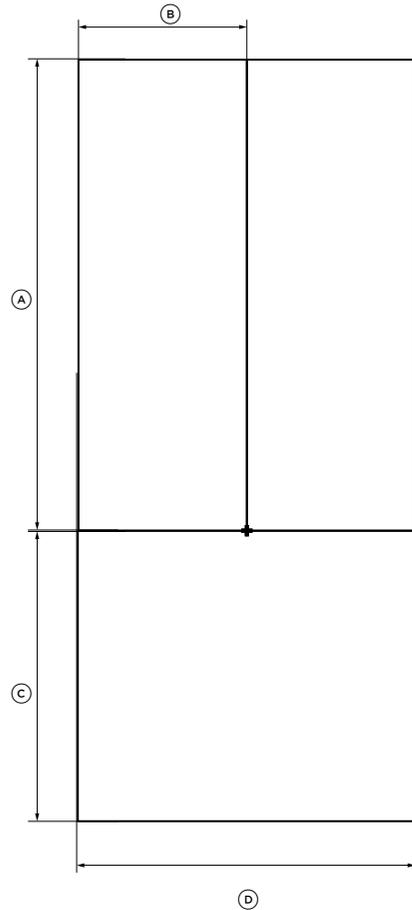


**PILOT HOLES**

8x Pilot holes recommended for bracket attachment. (Do not penetrate front surface). Do not place pilot holes for handle attachment in marked areas to avoid clashing with panel attachment brackets.

**MOUNTING HOLES**

Dimensions given in millimetres, do not fix handles through mounting holes.

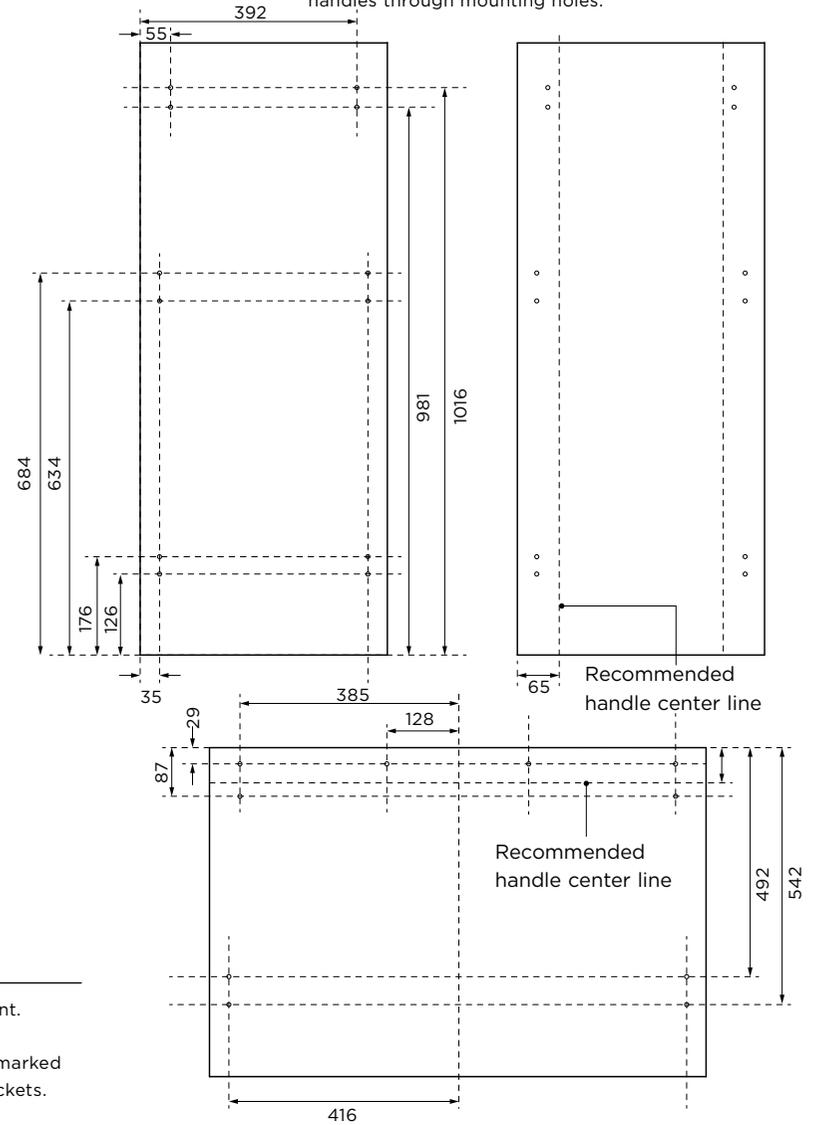

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website [fisherpaykel.com](http://fisherpaykel.com)


## SERVICES

**Electrical / Plumbing Specifications**

**RS90A** Integrated French Door Refrigerator Freezer

Specifications	mm
<b>Electrical</b>	
Supply	230 V, 50 Hz
Service	10 A circuit

Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

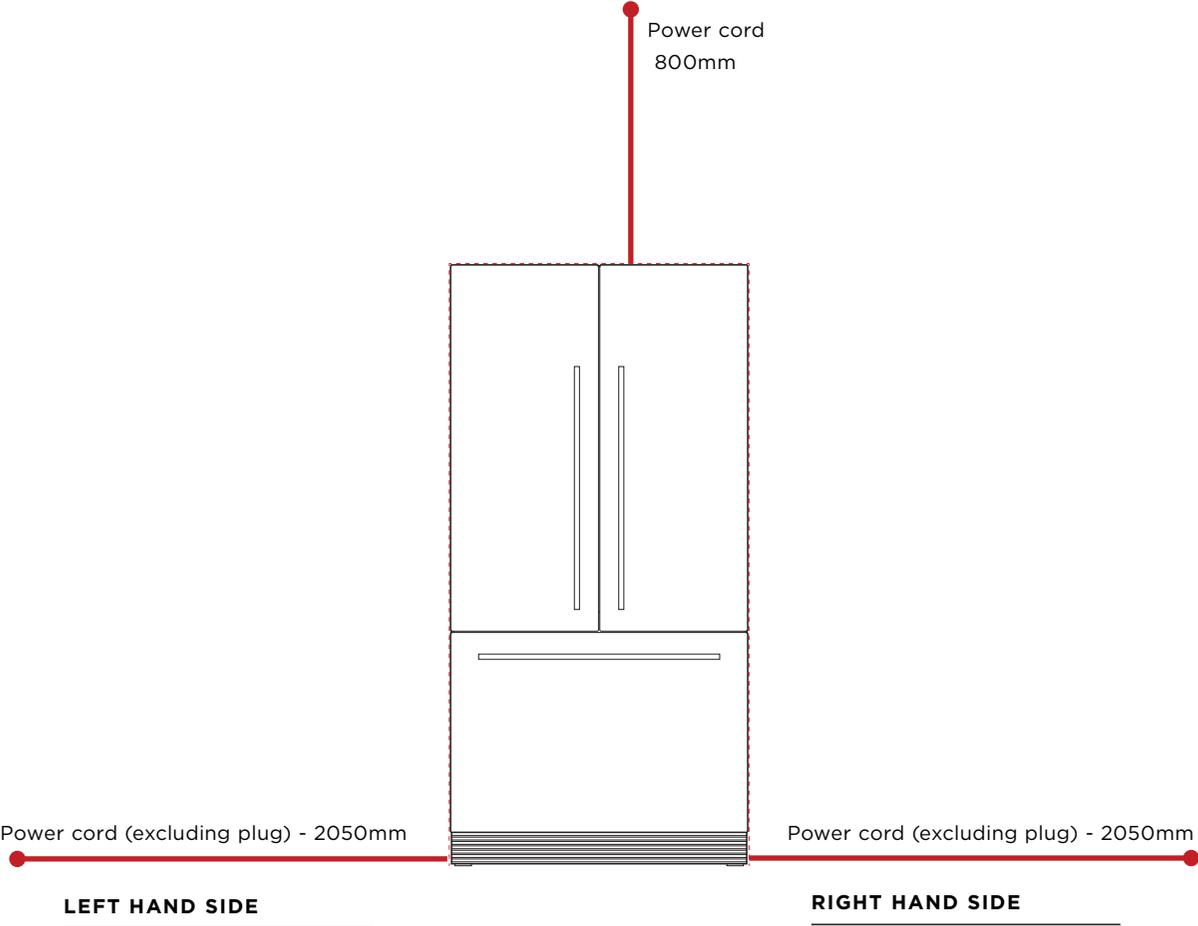


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

Electrical / Plumbing Specifications	
<b>RS90AU</b>	Integrated French Door Refrigerator Freezer
Specifications	mm
<b>Electrical</b>	
Supply	230 V, 50 Hz
Service	10 A circuit
<b>Plumbing</b>	
Water Supply	13mm (1/2") or 19mm (3/4") BSP threaded water connection 6.35mm LLDPE tubing
Pressure	min 150 kPa (22 psi) max 827 kPa (120 psi) @ 20°C (68°F)

\* Water inlet hose dimensions apply to ice and water models only.


Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

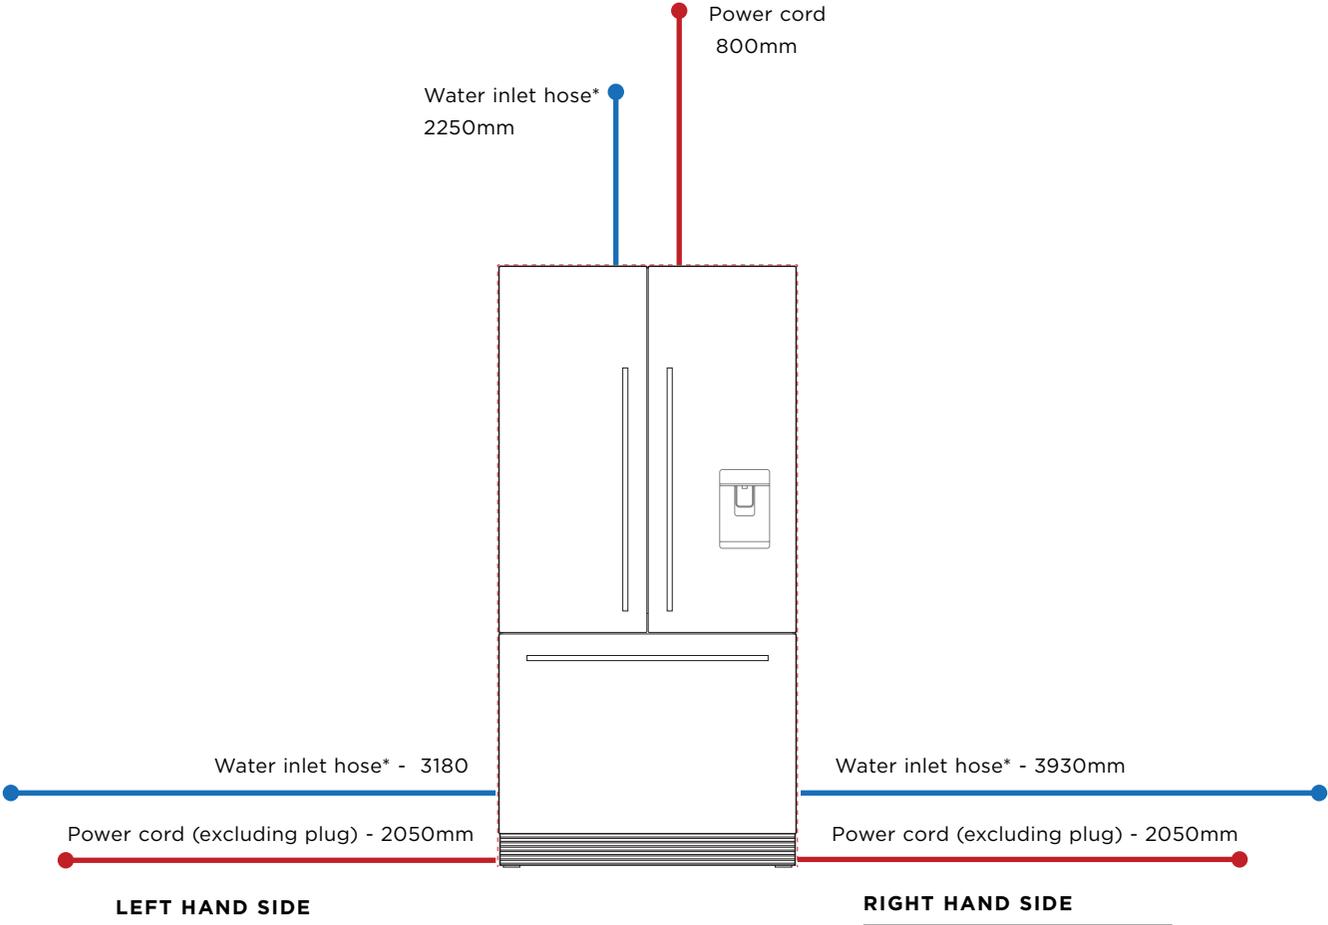

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

Electrical / Plumbing Specifications	
<b>RS80A</b>	Integrated French Door Refrigerator Freezer
Specifications	mm
Electrical	
Supply	230 V, 50 Hz
Service	10 A circuit

Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

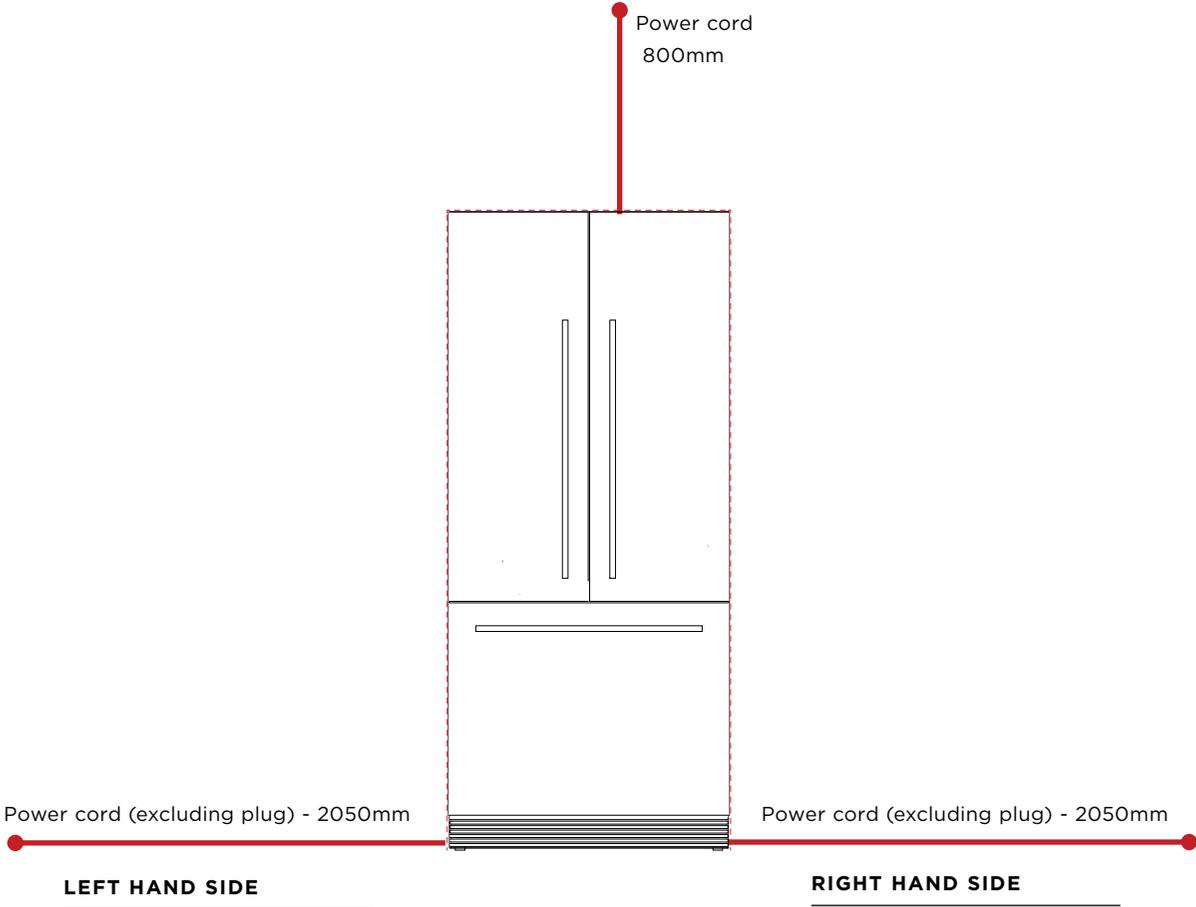


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

Electrical / Plumbing Specifications	
<b>RS80AU</b>	Integrated French Door Refrigerator Freezer
<b>Specifications</b>	<b>mm</b>
<b>Electrical</b>	
Supply	230 V, 50 Hz
Service	10 A circuit
<b>Plumbing</b>	
Water Supply	13mm (1/2") or 19mm (3/4") BSP threaded water connection 6.35mm LLDPE tubing
Pressure	Minimum 22 psi (150 kPa) Maximum 120 psi (827 kPa) @ 20°C


\* Water inlet hose dimensions apply to ice and water models only.

Connections may be located in an adjacent cabinet to either side of the fridge or above the fridge cavity.

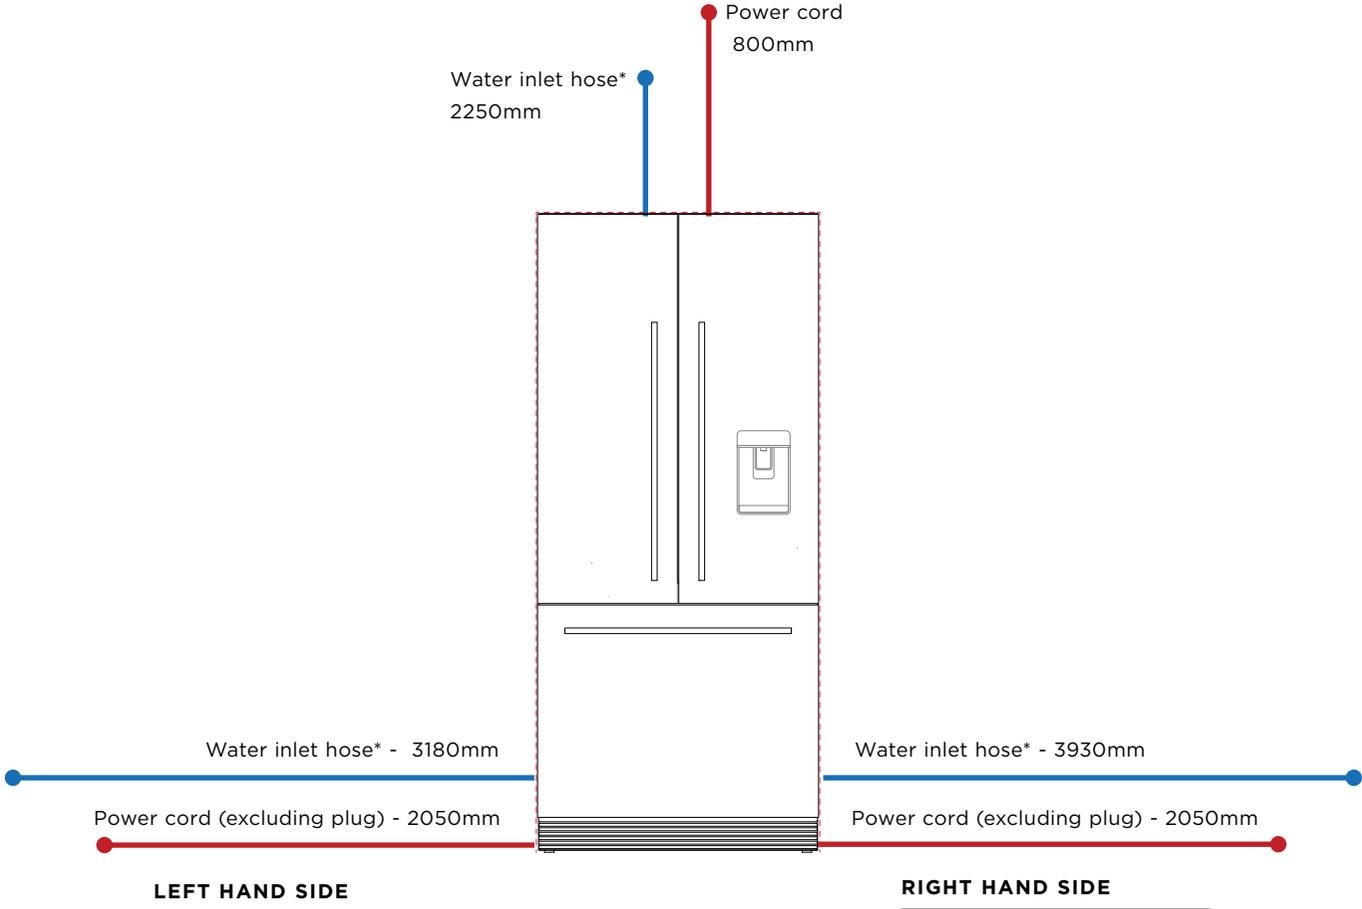

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

## HANDLES - DATA SHEETS

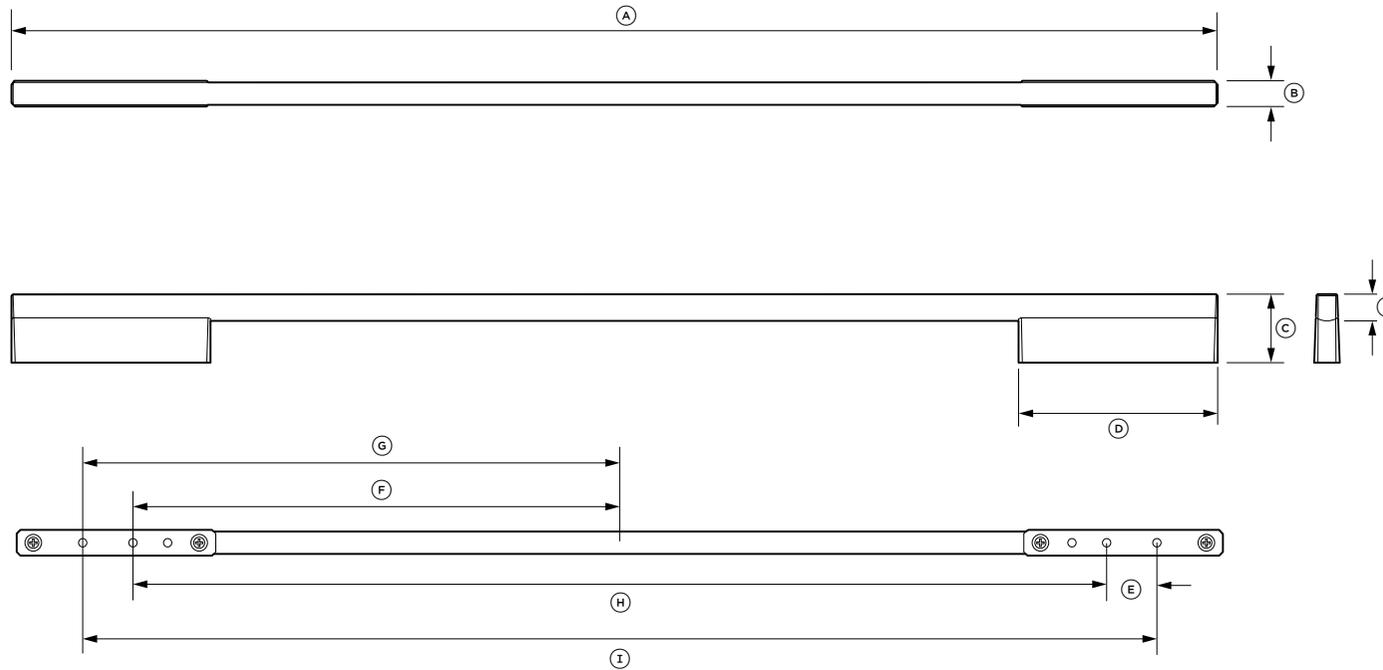

**Model no:**

**Square Fine Handle Aluminium- AHD5RD90A**  
**Black Square Fine Handle - AHD5RD90AB**

**For models**


RS90 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of handle	727
Ⓑ Overall depth of handle	15
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	293
Ⓖ Distance from centreline to outer attachment holes	324
Ⓗ Distance between inner attachment holes	587
Ⓘ Distance between outer attachment holes	647
Ⓣ Thickness of handle rail	16

Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINERY / PRODUCT DATUM  
 - - - - - INDICATES CABINERY CLEARANCES  
 - - - - - INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

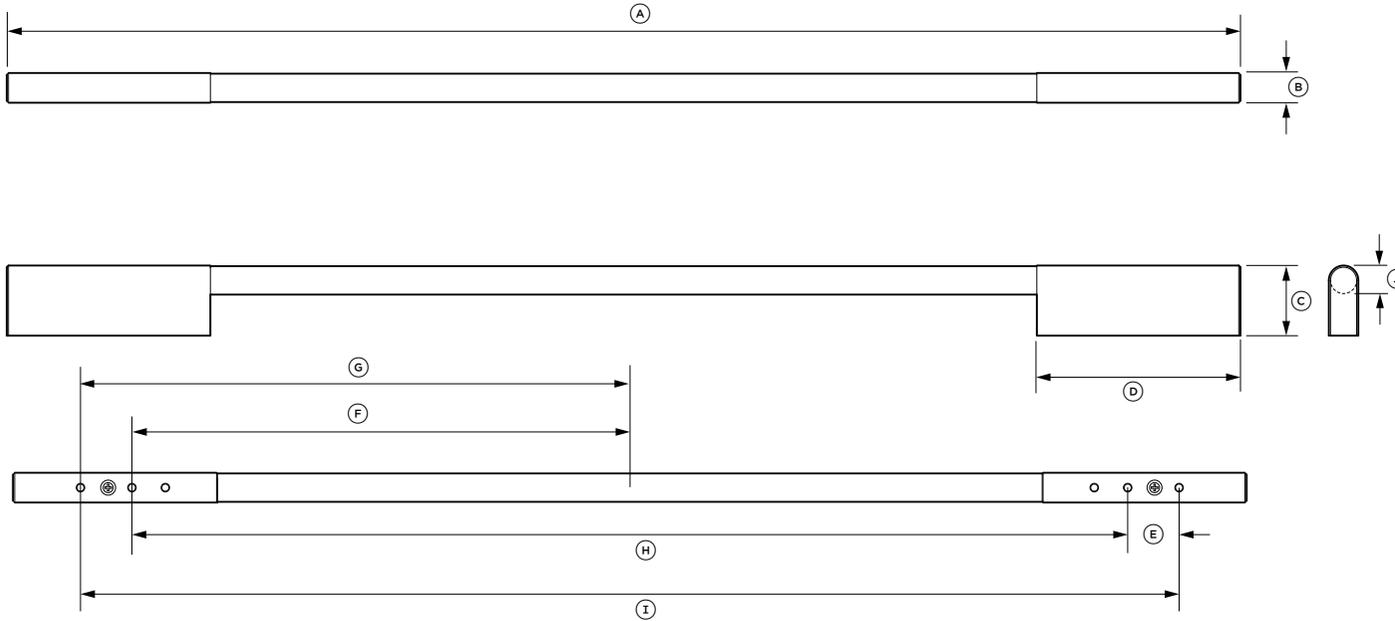

**Model no:**

**AHS-ASBI-A**

**For models**


RS90 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of handle	727
Ⓑ Overall depth of handle	17
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	293
Ⓖ Distance from centreline to outer attachment holes	324
Ⓗ Distance between inner attachment holes	587
Ⓘ Distance between outer attachment holes	647
Ⓣ Thickness of handle rail	17

Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

- INDICATES CABINERY / PRODUCT DATUM
- INDICATES CABINERY CLEARANCES
- INDICATES CUTOUT

**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

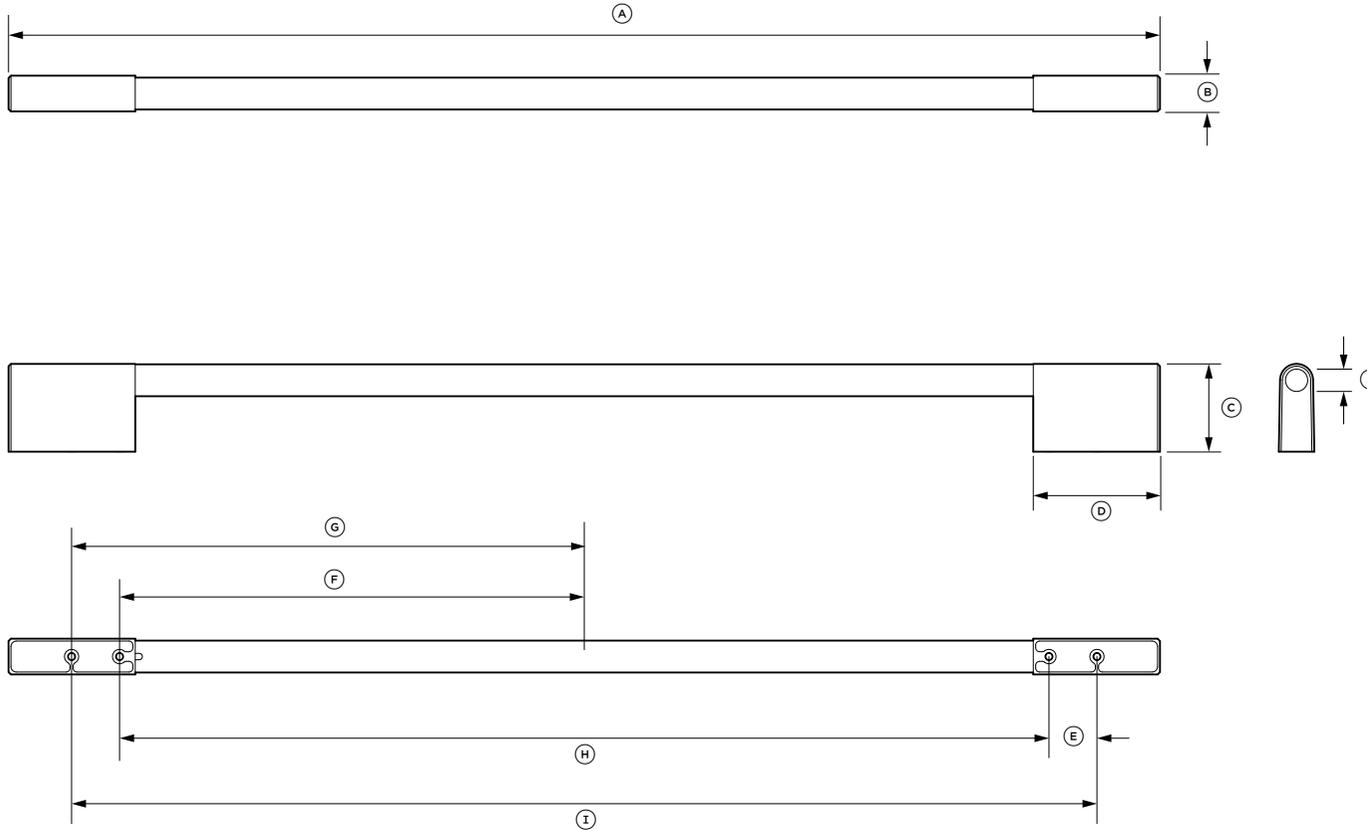

**Model no:**

**AHCLRD90A**

**For models**

RS90

Handle kits contain 2 door and 1 drawer handle.


**Handle Dimensions**

	<b>mm</b>
Ⓐ Overall length of handle	727
Ⓑ Overall depth of handle	22
Ⓒ Overall height of handle	56
Ⓓ Length of off-stand	80
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	329
Ⓖ Distance from centreline to outer attachment holes	359
Ⓗ Distance between inner attachment holes	658
Ⓘ Distance between outer attachment holes	719
Ⓝ Thickness of handle rail	20

Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINERY / PRODUCT DATUM  
 - - - - - INDICATES CABINERY CLEARANCES  
 - · - · - INDICATES CUTOUT

**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

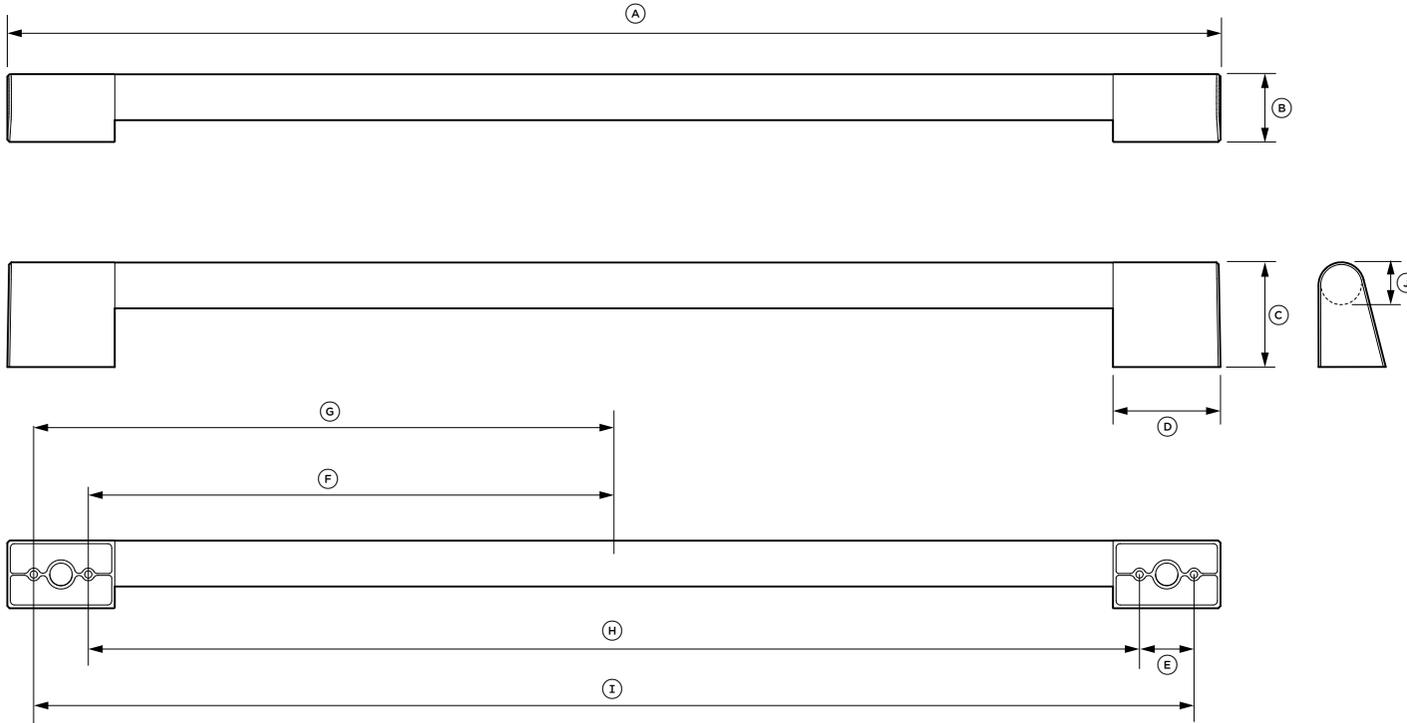

**Model no:**

**AHP3RD90A**

**For models**

RS90A

Handle kits contain 2 door and 1 drawer handle.


**Handle Dimensions**

	<b>mm</b>
Ⓐ Overall length of handle	677
Ⓑ Overall depth of handle	37
Ⓒ Overall height of handle	58
Ⓓ Length of off-stand	60
Ⓔ Distance between attachment holes	30
Ⓕ Distance from centreline to inner attachment holes	293
Ⓖ Distance from centreline to outer attachment holes	323
Ⓗ Distance between inner attachment holes	586
Ⓘ Distance between outer attachment holes	647
Ⓝ Thickness of handle rail	25

Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINERY / PRODUCT DATUM  
 ----- INDICATES CABINERY CLEARANCES  
 ----- INDICATES CUTOUT

**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

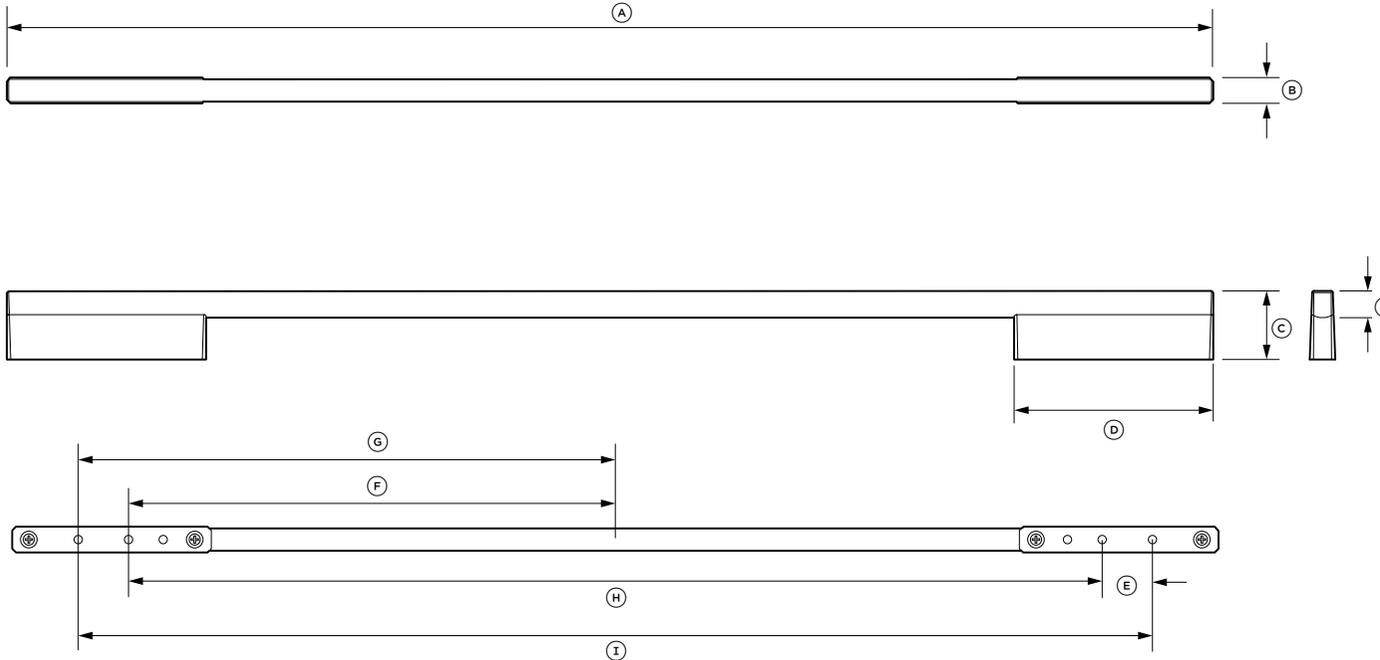

**Model no:**

**Square Fine Handle Aluminium- AHD5RD80A**  
**Black Square Fine Handle - AHD5RD80AB**

**For models**

RS80 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles	727
Overall length of drawer handles	679
Ⓑ Overall depth of handle	15
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes	293
Drawer handle distance from centreline to inner attachment holes	269
Ⓖ Door handle distance from centreline to outer attachment holes	324
Drawer handle distance from centreline to outer attachment holes	299
Ⓗ Door handle distance between inner attachment holes	587
Drawer handle distance between inner attachment holes	538
Ⓙ Door handle distance between outer attachment holes	647
Drawer handle distance between outer attachment holes	599
Ⓜ Thickness of handle rail	16


Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINETRY / PRODUCT DATUM

----- INDICATES CABINETRY CLEARANCES

----- INDICATES CUTOUT

**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

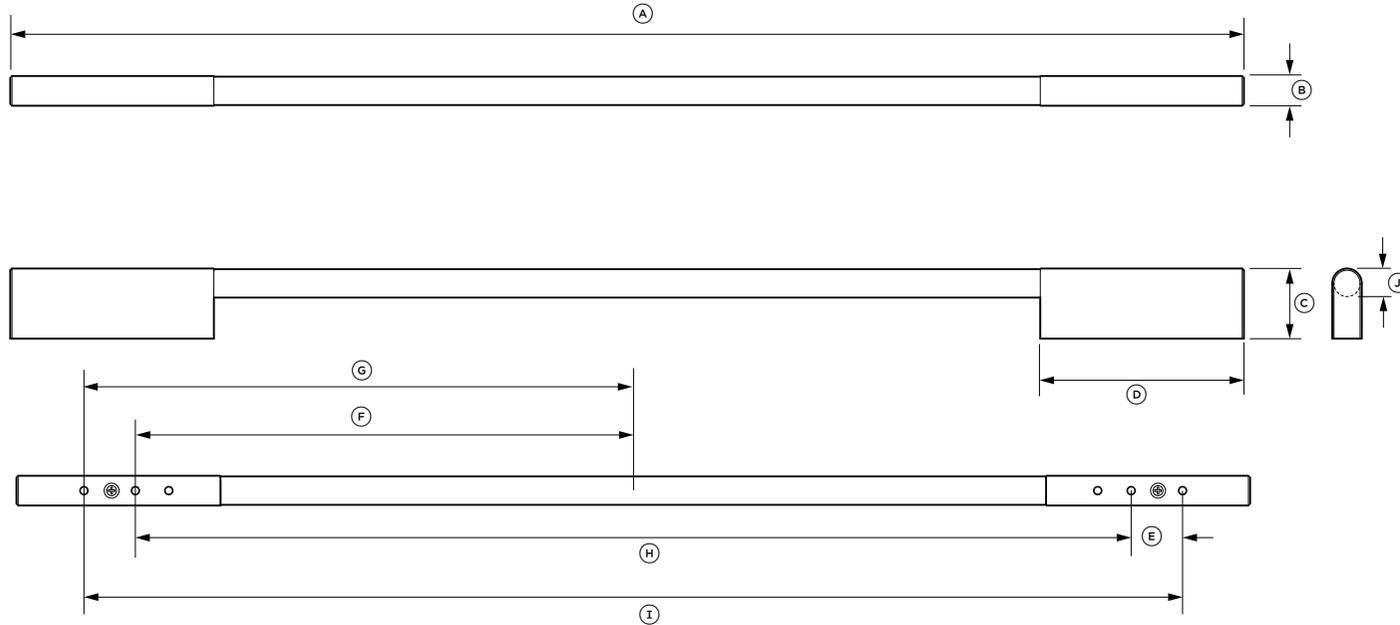

**Model no:**

**AHSRS80A**

**For models**

RS80 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles	727
Overall length of drawer handles	679
Ⓑ Overall depth of handle	17
Ⓒ Overall height of handle	41
Ⓓ Length of off-stand	120
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes	293
Drawer handle distance from centreline to inner attachment holes	269
Ⓖ Door handle distance from centreline to outer attachment holes	324
Drawer handle distance from centreline to outer attachment holes	300
Ⓗ Door handle distance between inner attachment holes	587
Drawer handle distance between inner attachment holes	539
Ⓘ Door handle distance between outer attachment holes	647
Drawer handle distance between outer attachment holes	599
Ⓙ Thickness of handle rail	17


Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINERY / PRODUCT DATUM

----- INDICATES CABINERY CLEARANCES

----- INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

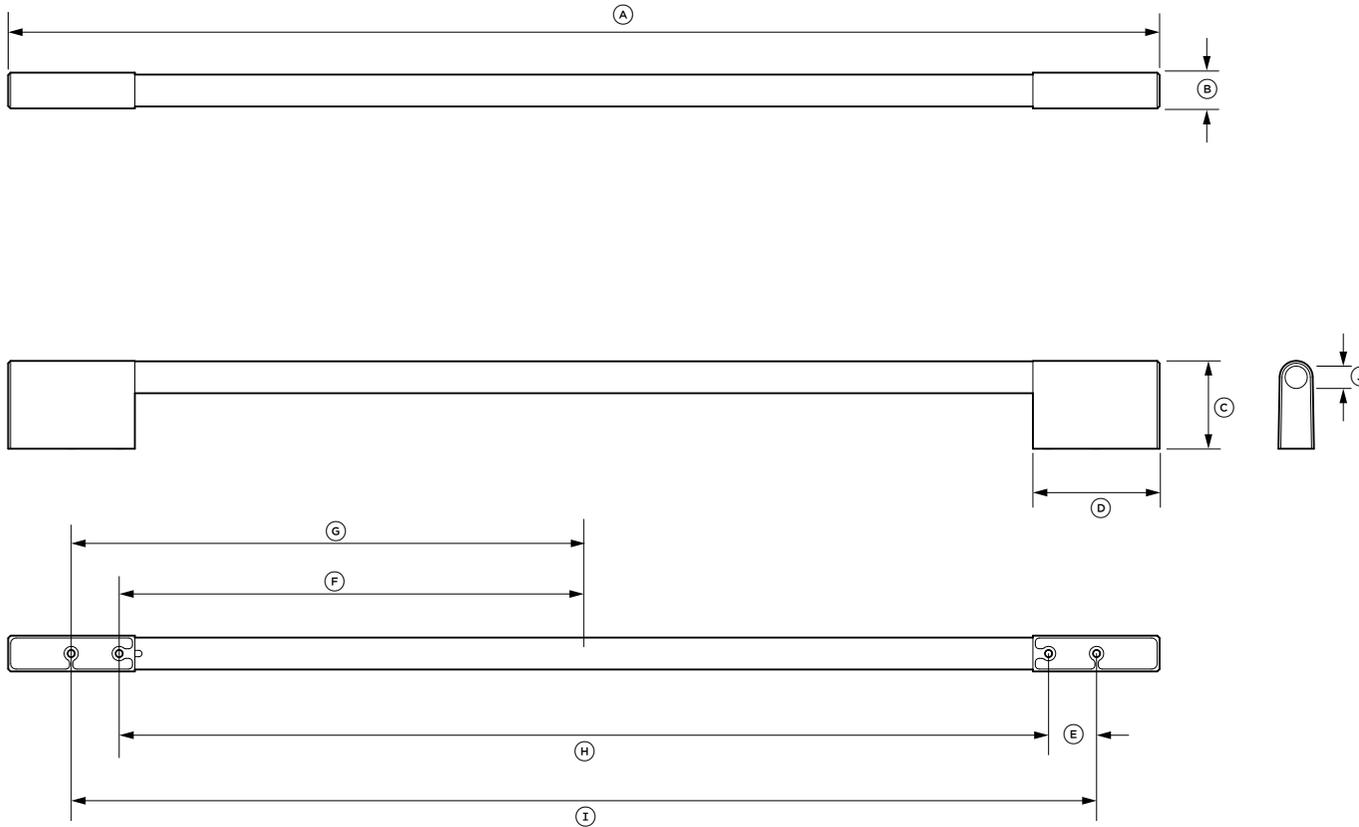

**Model no:**

**AHCLR80A**

**For models**


RS80 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles	727
Overall length of drawer handles	679
Ⓑ Overall depth of handle	22
Ⓒ Overall height of handle	56
Ⓓ Length of off-stand	80
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes	329
Drawer handle distance from centreline to inner attachment holes	269
Ⓖ Door handle distance from centreline to outer attachment holes	359
Drawer handle distance from centreline to outer attachment holes	300
ⒼⓂ Door handle distance between inner attachment holes	658
Drawer handle distance between inner attachment holes	539
ⒼⓅ Door handle distance between outer attachment holes	719
Drawer handle distance between outer attachment holes	599
Ⓙ Thickness of handle rail	20

Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

- INDICATES CABINERY / PRODUCT DATUM
- INDICATES CABINERY CLEARANCES
- INDICATES CUTOUT

**IMPORTANT NOTE:** Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

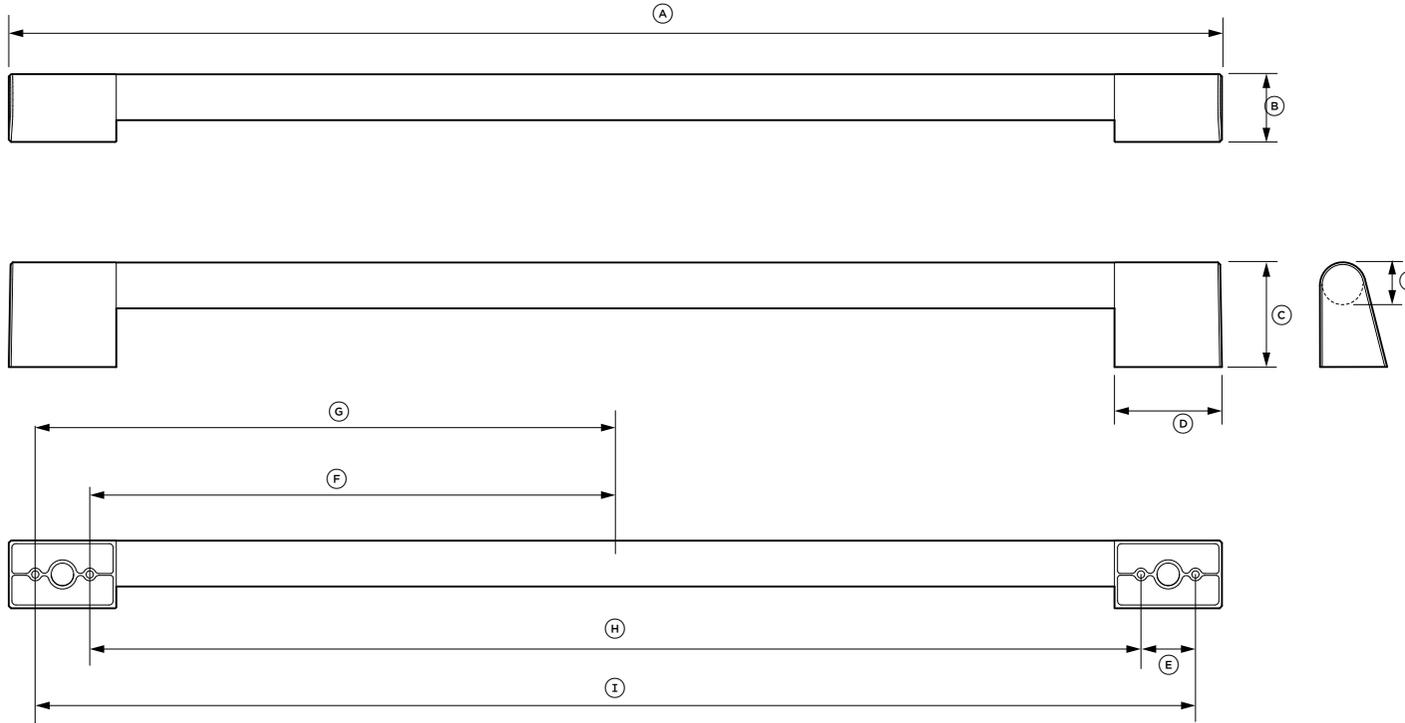

**Model no:**

**AHP3RD80A**

**For models**

RS80 Handle kits contain 2 door and 1 drawer handle.

Handle Dimensions	mm
Ⓐ Overall length of door handles Overall length of drawer handles	677 629
Ⓑ Overall depth of handle	37
Ⓒ Overall height of handle	58
Ⓓ Length of off-stand	60
Ⓔ Distance between attachment holes	30
Ⓕ Door handle distance from centreline to inner attachment holes Drawer handle distance from centreline to inner attachment holes	293 269
Ⓖ Door handle distance from centreline to outer attachment holes Drawer handle distance from centreline to outer attachment holes	323 300
Ⓗ Door handle distance between inner attachment holes Drawer handle distance between inner attachment holes	586 538
Ⓘ Door handle distance between outer attachment holes Drawer handle distance between outer attachment holes	647 599
⓵ Thickness of handle rail	25

Assumes 19mm door panels on adjacent cabinetry  
 Handle kit contains 2 door and 1 drawer handle.  
 M6 X 25mm Pan Head Socket Screw (2 per handle)

----- INDICATES CABINERY / PRODUCT DATUM  
 - - - - - INDICATES CABINERY CLEARANCES  
 - - - - - INDICATES CUTOUT

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit [fisherpaykel.com](http://fisherpaykel.com)

