

# Front Loader Washing Machine, 8kg

Series 5 | Front Load

White




This front loader cares for all kinds of fabrics, with a cycle for everything from delicates to bulky items.

- 13 wash cycles including Allergy, Handwash and SuperQuick
- Add a Garment function allows you to add items mid cycle
- 4.5-star water and 4-star energy rating

## DIMENSIONS

Height	850 mm
Width	600 mm
Depth	645 mm

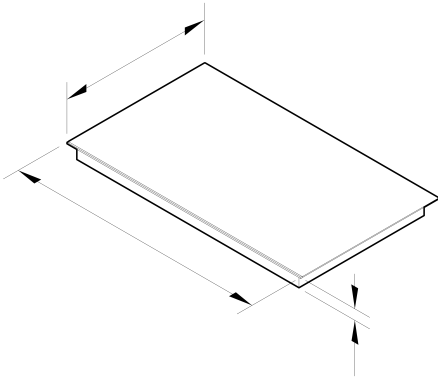

## FEATURES & BENEFITS

**Quiet performer**  
SmartDrive™ uses a direct drive motor, removing the need for belts, pulleys and the traditional block designed to hold down the machine. Without these heavy components, it vibrates less for a quieter wash.

**ADD A GARMENT**  
Missed an item from your wash? Our Add a Garment function allows you to pause your wash cycle, open the door and add or remove items, then carry on washing.

Quick wash cycles

Vortex Wash speeds up the cleaning process so most cycles take less than an hour to complete. During the tumble action, water is forced from the bottom of the drum up through your clothes so detergent and heat reach your fabric faster.

**Easy to use**  
This machine has a cycle to suit every load type including delicates, sportswear and woollens. Select a cycle with the easy to use SmartTouch™ control dial.

**Energy efficient**  
Our front loaders can be installed with both hot and cold water inlets allowing for better energy efficiency and quicker wash cycles. Cold water can be heated within the washing machine or hot water can be drawn directly from your plumbing.

**Timed dispenser**  
A liquid dispenser ensures detergent is distributed at exactly the right time in the cycle to optimise wash performance.

## SPECIFICATIONS

Capacity	8 kg
----------	------

Consumption	Grade 1
Energy rating	
Estimated Yearly Energy Usage (kWh)	0.67kWh/cycle
Water consumption per cycle	55L

Features	
Add a garment (immediate door opening)	•

Auto out of balance correction	•	Parts and labour	1 year
Automatic water level	•	Parts only SmartDrive™ motor	10 years
Child/Keylock	•		
Delay start	•		
Door and gasket flushing	•		
Excess foam detection	•		
Flood protection	•		
Interior light	•		
Progress indicator	•		
SmartTouch™ control dial	•		
Stainless steel drum	•		
Time to go	•		
Water supply	Hot & Cold		
Wrinkle Free	•		
Performance			
Maximum spin speed	1400 rpm		
Noise (spin)	58		
Noise (wash)	49		
Smart Diagnosis of problems	•		
Vortex wash	•		
Product dimensions			
Depth	645 mm		
Height	850 mm		
Width	600 mm		
Warranty			
		SKU	98112

Parts and labour	1 year
Parts only SmartDrive™ motor	10 years
Wash Cycles	
Allergy	•
Bulky	•
Cottons	•
Delicate	•
Drum Clean	•
Eco-Active™	•
Everyday	•
Handwash	•
Heavy	•
Number of wash cycles	13
Quick	•
Quick 30	•
Spin	•
Super Quick	•

- [↓](#) Service & Warranty
- [↓](#) Installation Guide - Cavity Sizes
- [↓](#) User Guide

**Where applicable:**

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.

The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020

Other product downloads available at [fisherpaykel.com](https://fisherpaykel.com)