QUICK REFERENCE GUIDE > WH1060S1

# 10kg Series 9 Front Loader Washer, Steam Care

Series 9 | Front Load

White




With 14 different cycles, this Steam Care front loader has advanced wash functions with SmartDrive™ technology.

- Refresh, revive and dewrinkle garments using the 20 minute Steam Refresh cycle
- Save time, minimise noise and reduce water usage with Optimise Wash options
- Add a Garment function allows you to add items of any size mid cycle

• Enjoy the convenience of not needing to fill the detergent dispenser for every wash with Auto Dose mode

## **DIMENSIONS**

Height 850 mm
Width 600 mm
Depth 665 mm

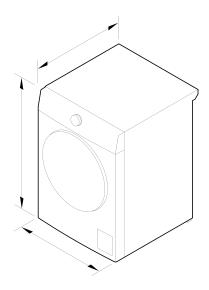

# **FEATURES & BENEFITS**

#### The Pinnacle Of Fabric Care

With 14 fabric care cycles including Steam Refresh, Quick 15, Wool and Sports. The specially-designed cushioned drum provides a gentle, effective washing action, protecting clothes while delivering an optimal wash performance.

Refresh, Revive, Respect

Bring lightly worn clothes, musty stored garments and even soft furnishings back to life with Steam Refresh. The 20 minute cycle removes odours so clothes can be worn again without the need for a full wash cycle, while steam reduces creases to save you precious time spent ironing.

#### Extra Protection

Our Sanitise cycle provides extra protection for your clothes. The higher wash temperature and extra rinse cycle is designed to kill more than 99.9% of bacteria and reduce allergens.

## Less Waste With Auto Dose

Prolong the life of your garments with Auto Dose mode. Auto Dose dispenses the exact amount of liquid detergent required based on load size – resulting in less waste, less hassle and less detergent residue, with the added convenience of not needing to fill the dispenser for every wash.

#### **Customise Your Wash**

Shorten your total wash time with our Speed option, or choose Eco to wash more sustainably. The Quiet mode reduces cycle noise, perfect for late night washing without waking the house.

## **Time Saving**

When time is short you can select a quick 15 minute wash for freshening up new or lightly soiled garments. In fact, Vortex Wash allows most cycles to take less than one hour to complete. Water is forced from the bottom of the drum, so detergent and heat reach your clothes faster, cleaning quickly and avoiding over-washing.

#### A Smarter, Quieter Wash

SmartDrive<sup>™</sup> technology is a gentle, quiet, and efficient combination of smart electronics and a direct drive motor that senses the load, with less moving parts, to deliver better fabric care.

# **SPECIFICATIONS**

QUICK REFERENCE GUIDE > WH1060S1

		Stainless steel drum	•	Wash Cycles	
Capacity		Time to go	•	20°C	•
Capacity	10 kg	Timed liquid detergent dispenser	•	Cottons	•
		Wash +	•	Delicate	•
		Water supply	Hot & Cold	Drum Clean	•
Consumption		Water temperature controls	5	Easy Iron	
Energy rating	Grade 1	Woolmark certified	•	Mixed	•
Estimated Yearly Energy Usage (kWh)	0.8kWh/cycle			Number of wash cycles	14
Water consumption per cycle	66L	Performance		Quick 15	•
				Quick 30	•
	_	Auto-dose	•	Rinse	•
Features		Load sensing	•	Sanitise	•
Add a garment (immediate door opening)	•	Maximum spin speed	1400 rpm	Spin	•
Adjustable alert beeps	•	Noise rating (spin)	Α	Steam Refresh	•
Anti-fungal door gasket	•	Number of spin speeds	5	Synthetics	•
Auto out of balance correction	•	SmartDrive™ technology	•	Wool	•
Automatic water level	•	Spin performance	С		
Child/Keylock	•	Steam Care	•		
Delay start	•	Vortex wash	•	SKU	93286
Excess foam detection	•			500	93200
Fabric softener dispenser	•				
Flood protection	•	Product dimensions		The product dimensions and specifications in this page apply to the s	specific
Hot and cold water inlets	•	Depth	665 mm	product and model. Under our policy of continuous improvement, the dimensions and specifications may change at any time. You should the	
Interior light	•	Height	850 mm	check with Fisher & Paykel's Customer Care Centre to ensure this page	
Pre Wash	•	Width	600 mm	correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020	
Quiet mode	•			Applicated Eta 2020	
Rinse +	•	Mousenty			
SmartTouch™ control dial	•	Warranty		Other product downloads available at fisherpaykel.com	
Soak	•	Parts and labour	2 years		
Speed mode	•	Parts only SmartDrive™ motor	10 years		
Spin speeds	5				

QUICK REFERENCE GUIDE > WH1060S1

 $\overline{\mathbf{\Lambda}}$ 

Installation Guide (English)

- $\downarrow$ 
  - Installation Guide (Chinese)
- User Guide EN
  - XXXXX ZH

### Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.