

30cm Series 7 2 Zone Induction Cooktop, SmartZone

Series 7 | Minimal

Black Glass




Enjoy the ability to create a large cook zone with SmartZone, or to match with a two-burner gas cooktop.

- Immediate heat response and extremely accurate temperature control
- Cooktop remains cool to touch until a pot or pan is placed on the surface

- PowerBoost activates a very high heat, bringing liquid to boil in less than a minute
- Easily control each cook zone with Touch&Slide, including pairing cook zones to create a large SmartZone

DIMENSIONS

Height	54 mm
Width	300 mm
Depth	530 mm

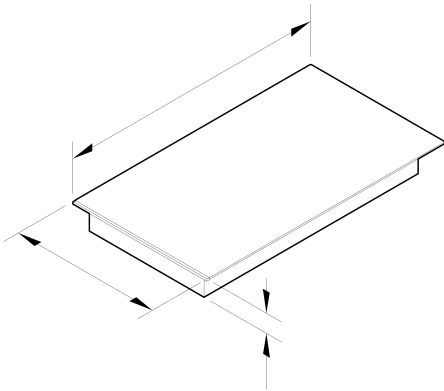

FEATURES & BENEFITS

Complementary Design

The subtle black glass and durable matte black detailing are designed to pair with the Minimal style Series 7 Ovens. With premium styling and detailing, these cooktops seamlessly blend with other appliances for a cohesive, considered kitchen design.

Enhanced Features

PowerBoost and GentleHeat deliver either very high or very low heat, fast. Perfect for specialised cooking tasks such as searing meat and melting chocolate. An integrated timer ensures a great result every time

Instant Response

Go from a boil to a simmer in seconds. Touch&Slide controls react immediately when you adjust the temperature so you don't waste time in the kitchen.

Safer Choice

Induction cooktops only start heating your pot or pan once you've placed it on the ceramic surface and stop as soon as you remove it - so you don't have to worry about curious little fingers or leaving a cook surface on.

Easy Cleaning



The surface around your cookware stays cool when you cook - preventing baked-on spills and making cleaning up a breeze. The ceramic cooktop surface, including anodised detailing for durability, just needs a quick wipe after use to maintain its good looks.

Superior Efficiency

Less heat is wasted during induction cooking because only the cookware is heated, not the cooktop surface. This makes induction cooking more energy-efficient than electric or gas cooktops.

SPECIFICATIONS

Accessories (sold separately)

Joiner kit	Part 534731 (required to join two cooktops)	Maximum power	3.7 kW	The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020
		Standby power	•	
		Supply frequency	60 Hz	
		Supply voltage	220-240 V	
Cleaning		Product dimensions		Other product downloads available at fisherpaykel.com
Flat easy clean glass surface	•	Depth	530 mm	
		Height	54 mm	
		Width	300 mm	
Consumption		Safety		↓ 2D-DWG Induction Cooktop ↓ 2D-DXF Induction Cooktop ↓ ArchiCAD-23 Induction Cooktop ↓ Data Sheet Induction Cooktop ↓ Service & Warranty ↓  ZH ↓ Revit-18 Induction Cooktop ↓ Rhino-5 Induction Cooktop ↓ Restriction of Hazardous Substances ↓ Sketchup-8 Induction Cooktop ↓ User Guide Induction Cooktop ↓  ZH
Heating efficiency	86%	Keylock	•	
Standby power	1W	Pan detection system	•	
		Safety time out	•	
Controls		Spillage auto off	•	Where applicable:
Auto cut-off timer for each zone	•	Surface hot indicators	•	
Minute timer	•			
Soft-touch electronic controls	•			
Touch and slide controls	•			All appliances use energy, and energy usage typically generates carbon emissions. Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.
Performance		Zone ratings		Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.
Auto heat reduce	•	Left front zone (PowerBoost set)	2100W (3700W)	
Gentle heat	•	Left rear zone (PowerBoost set)	2100W (3700W)	
Heat settings	9	PowerBoost	up to 3700W	
Induction cooking technology	•			
PowerBoost	•	Zones		
SmartZone	•	Number of zones	2	
Zone bridging	•			
Power requirements		SKU	82028	