

# 60cm Series 5 Integrated Refrigerator Freezer

Series 5 | Integrated

Panel Ready




A compact refrigerator with bottom freezer, ready for you to add your custom cabinetry for a flush fit.

- ActiveSmart technology helps keep food fresher for longer by constantly maintaining the ideal temperature
- Choose a left or right hinge to suit your kitchen's layout
- Customise with your own kitchen cabinetry
- Spacious bottom freezer with easy-slide internal drawers to separate storage

## DIMENSIONS

Height	1773 mm
Width	555 mm
Depth	544 mm

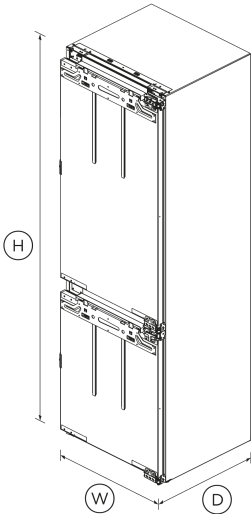

## FEATURES & BENEFITS

### Variable Temperature Drawer

The variable temperature drawer is designed to allow optimal storage of fresh meat, produce, deli and dairy products at their ideal temperatures. Operating separately from the refrigerator and freezer, the drawer can be set at a temperature between -5°C and 3°C, with 3°C ideal for fruit and vegetables, -1.1°C perfect for fresh meats, and -3°C for fast chilling. Helping to keep your food fresher for longer.

### Fast Freezing

When freezing fresh food, the freshness, texture and taste are retained with rapid freezing. The fast freeze function boosts the freezing speed by dropping the freezer to its coldest temperature (-24°C) for 12 hours, ensuring food is fast and fully frozen. Plus, you never need to worry about defrosting your refrigerator with the built-in frost-free function.

### Simple Storage

This refrigerator is designed to make it simple for you to store, access and remove food. Storage bins give you full access inside when they're pulled open and can be easily removed to clean. Adjustable shelving in the main cavity and door provide flexible storage options.

### Easy Installation

Our integrated products are easy to install, whether you are renovating your kitchen or designing a new one. They are designed for minimal gaps with adjustable door panels that can be customised to match your kitchen.

### Beautiful Lighting

Bright LEDs light up the ceiling, shelves, bins and tray in both refrigerator and freezer, making it easy to find your food and creating a welcoming glow in your kitchen for those midnight snacks.

### Easy Cleaning

Spill-safe secure glass shelves easily capture any drips or leaks and prevent them from falling on items below.

### Activesmart™ Foodcare

ActiveSmart™ Foodcare learns how you live. It's technology which understands how you use your refrigerator and adjusts temperature, airflow and humidity inside to help keep food fresher for longer.

## SPECIFICATIONS

Accessories (sold separately)

Toe kick stainless steel 610mm	AKRS06110	ActiveSmart™ Foodcare	•	The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020
		Frost free freezer	•	
		Holiday mode	•	
		Humidity control system	•	
		Inverter controlled compressor	•	
		Noise emissions	39 dBA	
		Noise emissions class	C	
Capacity		Power requirements		Other product downloads available at <a href="#">fisherpaykel.com</a>
Total net volume	225L	Rated current	10 A	<a href="#">↓</a> Service & Warranty
Volume freezer	62 L	Supply frequency	50 Hz	<a href="#">↓</a> Water Filter Replacement Instructions - Parts 847200 and 847201 - ZH
Volume refrigerator	138 L	Supply voltage	230 V	<a href="#">↓</a> Restriction of Hazardous Substances
Volume variable temperature compartment	25 L			<a href="#">↓</a> User Guide ZH
				<a href="#">↓</a> Installation & User Guide EN
Consumption		Product dimensions		Where applicable:
Energy rating	Grade 2	Depth	544 mm	All appliances use energy, and energy usage typically generates carbon emissions. <b>Fisher &amp; Paykel Appliances' In-use Energy Carbon Emissions Estimate</b> indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.
		Height	1773 mm	
		Width	555 mm	
		Warranty		Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.
		Parts and labour	1 year	
Features		SKU	24935	
Adjustable door shelves	3			
Adjustable glass shelves	2			
Door alarm	•			
Egg trays	2			
LED lighting	•			
Rapid cool function	•			
SmartTouch control panel	•			
Freezer Features				
Fast freeze	•			
Freezer bins	3			
Ice trays	1			
Large plastic bins	•			
Performance				