

INTEGRATED TALL DOUBLE DISHDRAWER™

PLANNING GUIDE

DD60DTX6HI1 | DD60DTX6HI1-CN

INTRODUCTION

This comprehensive planning guide provides you with the framework and tools to achieve your desired design outcome with Fisher & Paykel appliances. In this guide, you will find a range of conceptual, detailed, and dimensional product information to bring your ideas to life and create spaces that truly reflect your vision.

SUPPORT

For additional design planning and installation support please contact the Fisher & Paykel design support team.
designsupport@fisherpaykel.com

NOTES

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Refer to our website fisherpaykel.com for the latest document version. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Specific installation guidance will be available with the product on delivery and on our website.

CONTENTS

CONCEPT DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE	DEVELOPED AND DETAILED DESIGN	PAGE
Specification guide	3	Data sheets	5	Services	20
Specifications	4	Dishdrawer™ with pre-finished panels	6	Service placement options	21
		Dishdrawer™ with custom panels	7	Service specifications	22
		Contemporary square fine handle	8	Electrical and plumbing specifications	23
		Accessories	9		
		Handles	10		
		Stainless steel panels	11		
		Planning considerations	12		
		Cavity specifications	13		
		Over width cavity specifications	14		
		Pre-finished toe kick	15		
		Custom toe kick specifications	16		
		Custom panel specifications	17		
		Custom door panel preparation	18		
		Custom panel preparation	19		

SPECIFICATION GUIDE



OVERVIEW

Install your DishDrawer™ Dishwasher into an existing kitchen space or integrate into kitchen cabinetry. The touch-sensitive control panel is located inside this Integrated model, leaving an uninterrupted exterior that blends seamlessly with surrounding cabinetry.

PRODUCTS

DD60DTX6I1
Integrated Dishdrawer™, 60cm wide

DD60DTX6HI1
Integrated Dishdrawer™ with water softener, 60cm wide

ACCESSORIES

PRE-FINISHED PANEL ADDD60DTPX
Brushed stainless steel pre-finished panels

PRE-FINISHED PANEL ADDD60DTPB
Black stainless steel pre-finished panels

HANDLES





Handles are available for the Dishdrawer™ in Contemporary Fine style. Options include brushed aluminium, black, and stainless steel finishes. Two handle kits are required for double drawer models.

FEATURES

- ① Eight wash programs including Auto, 60min and Glassware, while modifiers such as Sanitize, Dry+ and Quiet provide added wash flexibility. The Quiet wash modifier reduces the noise on some cycles while maintaining performance - perfect for late night washing.
- ② Tall top drawer fits full-size dinner plates up to 310mm, with flexible racking for large cookware.
- ③ Wi-Fi capability and a SmartHQ™ app to see cycle status and notifications.
- ④ Both drawers fit a true half load. Each drawer operates independently, so you can wash one load while stacking the other drawer, or wash simultaneously on separate cycles
- ⑤ For ease-of-use, these DishDrawer™ Dishwashers have a knock to pause function. A knock on the front panel will pause the dishwasher, which can be restarted by using the start button.

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

DATA SHEETS

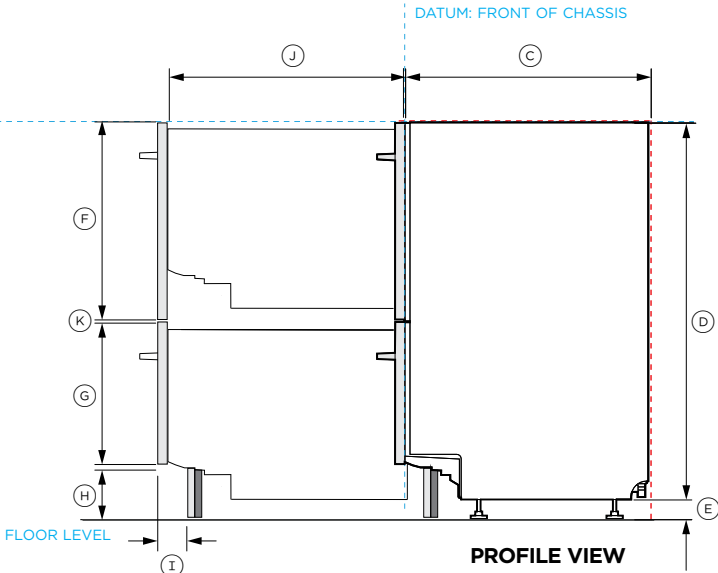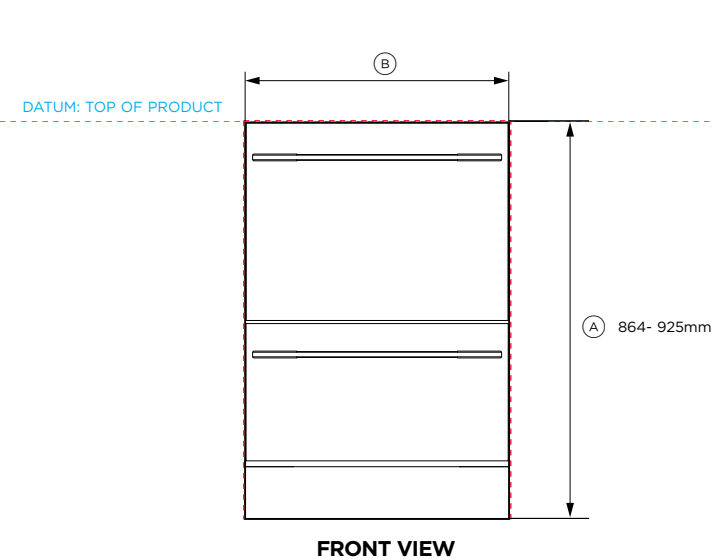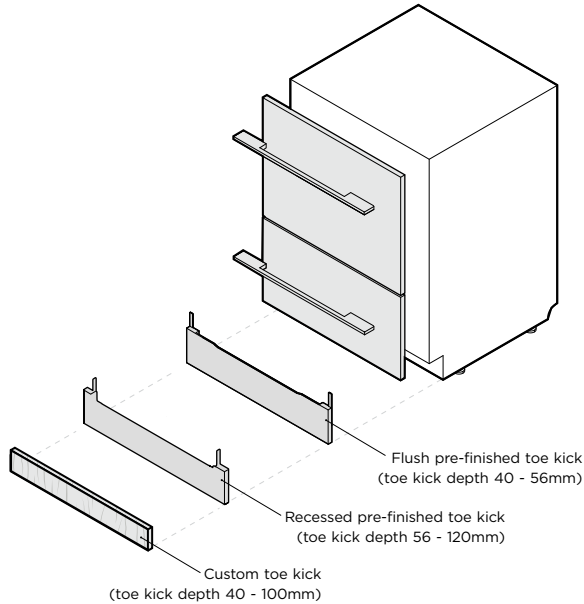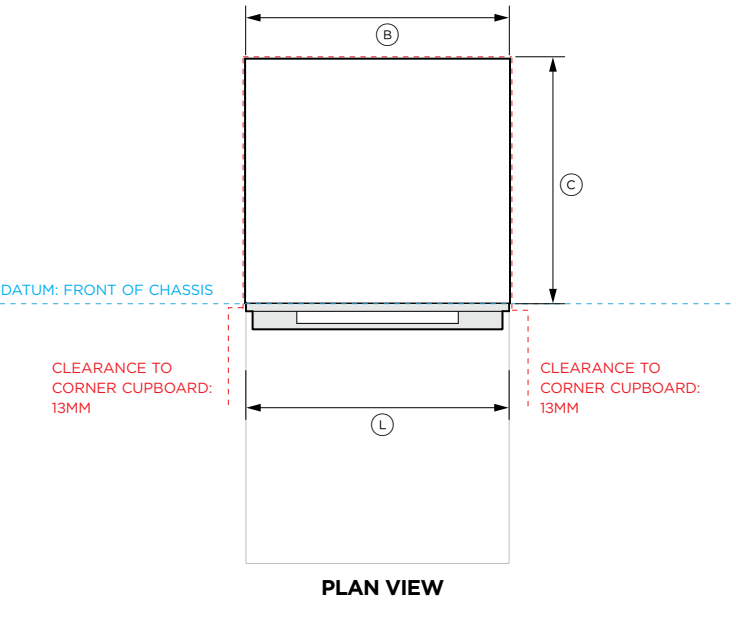

Model nos:
DD60DTX6HI1 & DD60DTX6HI1, DD60DTX6HI1-CN
Shown with Stainless Steel Drawer Panels, ADDD60DTPX
Available Black Stainless Steel Panels, ADDD60DTPB
Shown with Contemporary Square Fine Handle, AHD5DDDW60S

Product includes the following Toe Kick options:
Flush Pre-Finished Toe Kick
Recessed Pre-Finished Toe Kick (also used as a Custom toe kick bracket)

Product Dimensions	mm
A Overall height*	867 - 925
B Overall width of chassis	599
C Overall depth of chassis	553
D Height of chassis	854
E Height of feet*	10 - 70
F Height of upper drawer panel - minimum	442
G Height of lower drawer panel - minimum	311
H Height of toe kick	45-123
I Toe kick depth	40-120
J Maximum extension of drawer	527
K Ventilation gap between drawers	8
L Drawer panel width	596


*Depending on adjustment of leveling feet

Minimum Clearances	mm
Minimum inside height of cavity*	869
Minimum inside width of cavity	600
Minimum overall depth of cavity (includes panels)	578
Minimum clearance to corner cupboard	13
Minimum clearance to adjacent cupboard door	2
Minimum clearance between drawer panels	8

*Depending on adjustment of leveling feet

INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit fisherpaykel.com

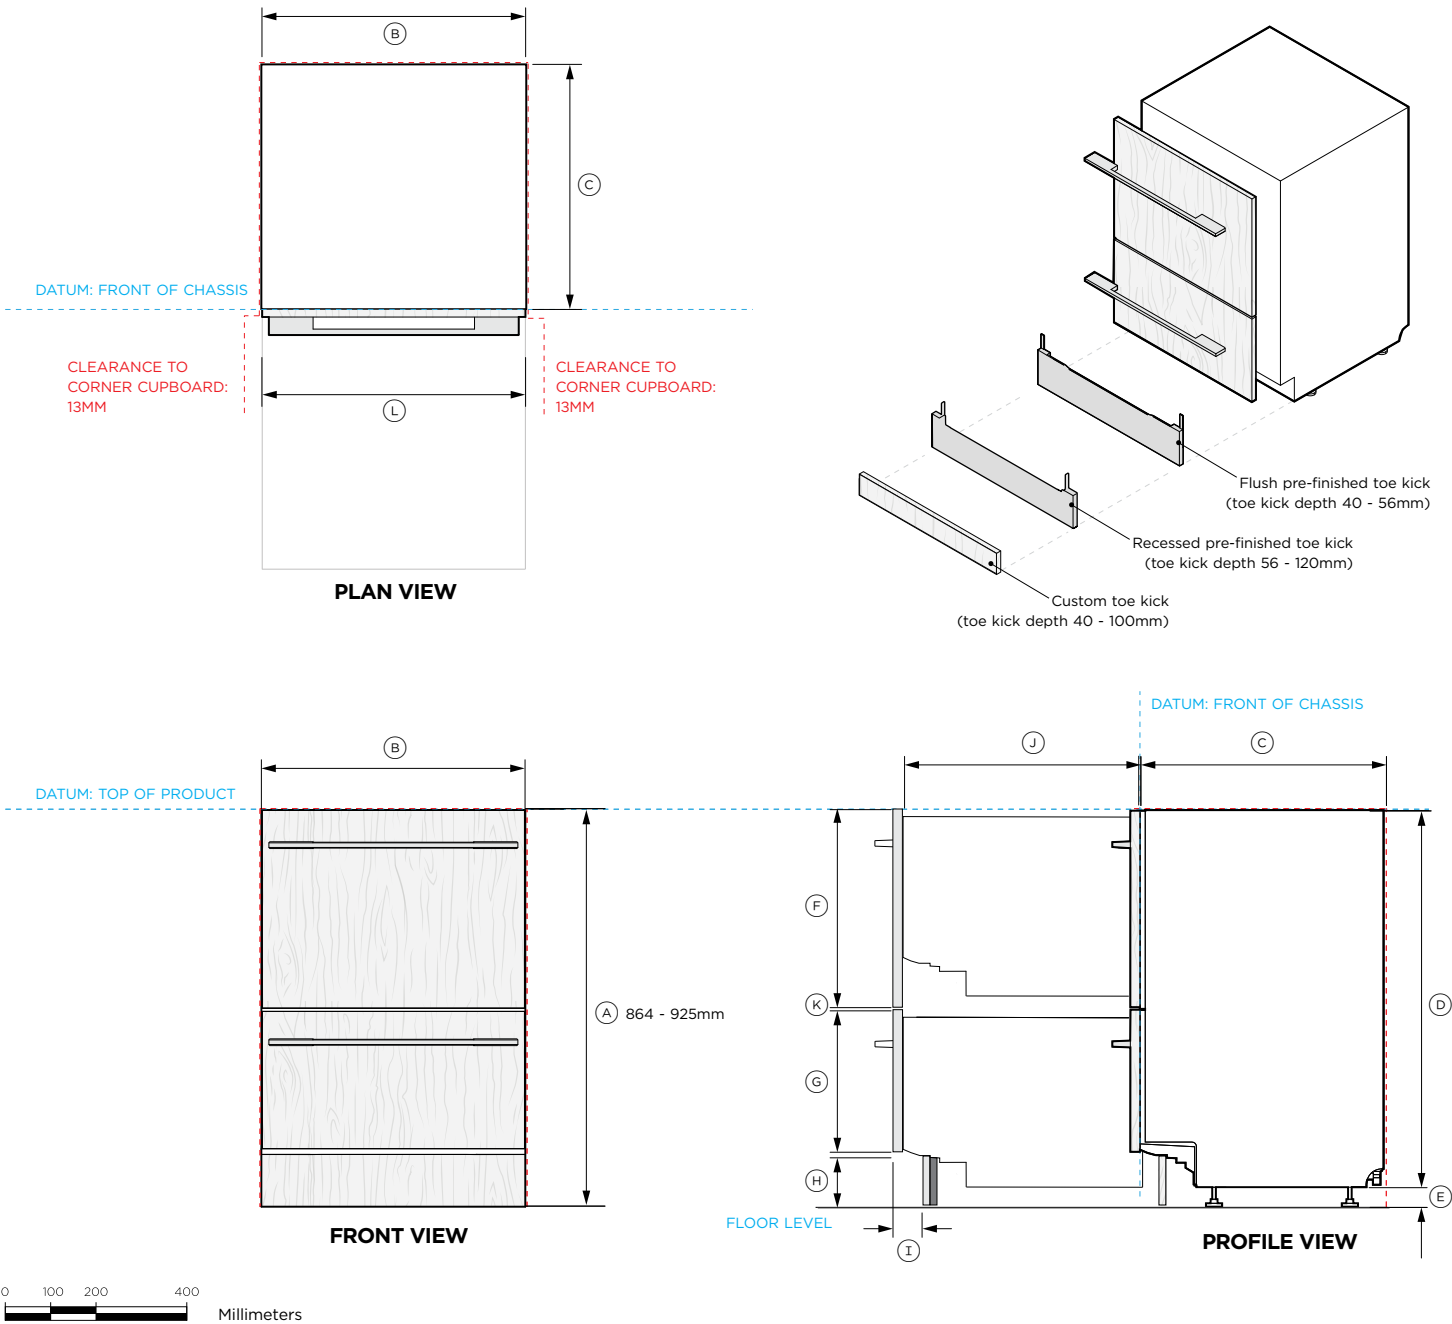

Model nos:
DD60DTX6HI1 & DD60DTX6HI1-CN
Shown with Custom Drawer Panels
Shown with Contemporary Square Fine Handle, AHD5DDDW60S

Product includes the following Toe Kick options:
Flush Pre-Finished Toe Kick
Recessed Pre-Finished Toe Kick (also used as a Custom toe kick bracket)

Product Dimensions	mm
① Overall height*	867 - 925
② Overall width of chassis	599
③ Overall depth of chassis	553
④ Height of chassis	854
⑤ Height of feet*	10 - 70
⑥ Height of upper drawer panel - minimum	442
⑦ Height of lower drawer panel - minimum	311
⑧ Height of toe kick	45 - 123
⑨ Toe kick depth	40 - 120
⑩ Maximum extension of drawer	527
⑪ Ventilation gap between drawers	8
⑫ Drawer panel width (custom panels widths can vary to fit adjacent cabinet doors/drawers)	596

*Depending on adjustment of leveling feet



Minimum Clearances	mm
Minimum inside height of cavity*	869
Minimum inside width of cavity	600
Minimum overall depth of cavity**	578
Minimum clearance to corner cupboard	13
Minimum clearance to adjacent cupboard door	2
Minimum clearance between drawer panels	8

*Depending on adjustment of leveling feet
**Assumes 19mm drawer panels on adjacent cabinetry

NOTE: Custom drawer panel and toe kicks to be manufactured/fitted by cabinetmaker.

INDICATES PRODUCT DATUM -----
INDICATES CABINETRY CLEARANCES -----

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit fisherpaykel.com

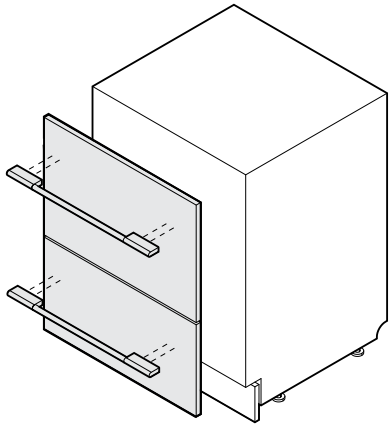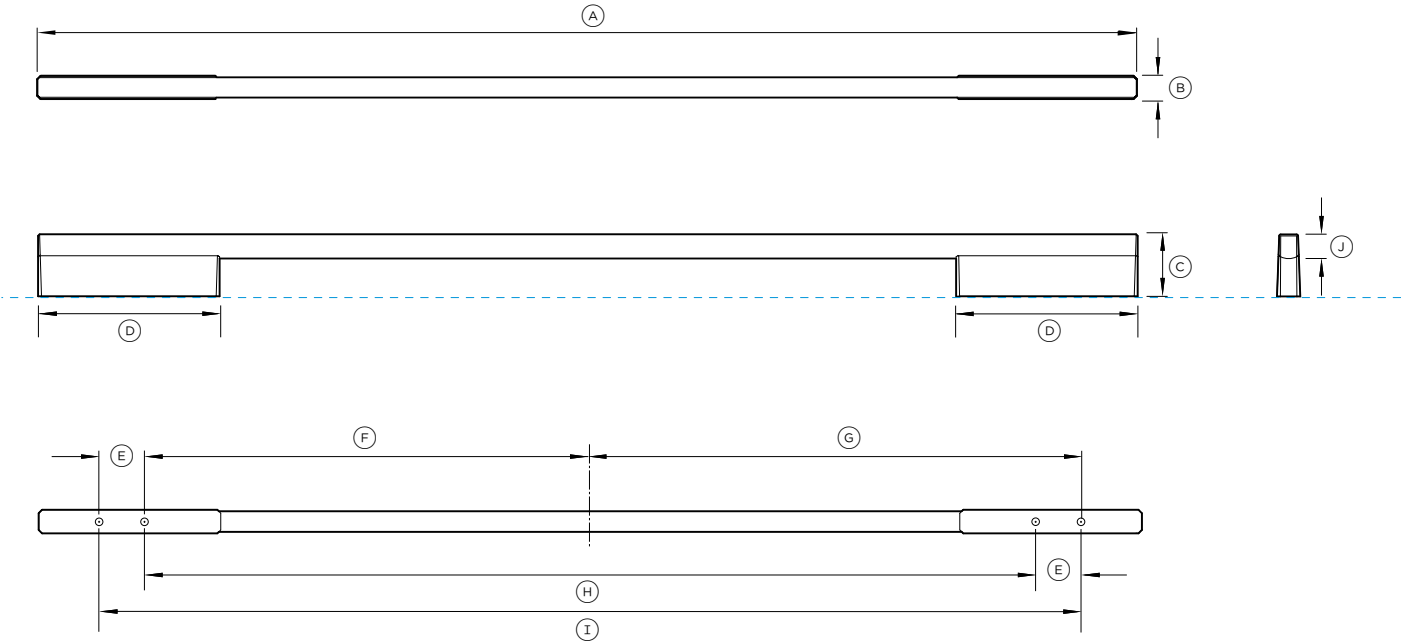

*M6 X 25mm Pan Head Socket Screw (2 per handle)

Model no:
Square Fine Handle AHD5DDDW60S
Black Square Fine Handle AHD5DDDW60B

For Models:
DD60DTX6I1, DD60DTX6HI1, DD60DI9, DD60DHI9

Compatible with drawer panel kits:
Square Fine Handle for drawer Panel Kits ADDD60DPX, ADDD60DTPX
Black Square Fine Handle for drawer Panel Kits ADDD60DPB, ADDD60DTPB
Custom drawer panels


Handle Dimensions	mm
A Overall length of handle	565
B Overall depth of handle	15
C Overall height of handle	41
D Length of off-stand	100
E Distance between attachment holes	32
F Distance from centreline to inner attachment holes	216
G Distance from centreline to outer attachment holes	248.5
H Distance between inner attachment holes	432
I Distance between outer attachment holes	497
J Thickness of handle rail	16

*Suits standard 19mm drawer panel. Thicker drawer panels may require counter boring or longer screws.

Note: Single Dishwasher requires one handle kit. Double Dishwasher requires two handle kits.

IMPORTANT NOTE: Throughout this guide, dimensions may vary by ±2mm (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit fisherpaykel.com

ACCESSORIES

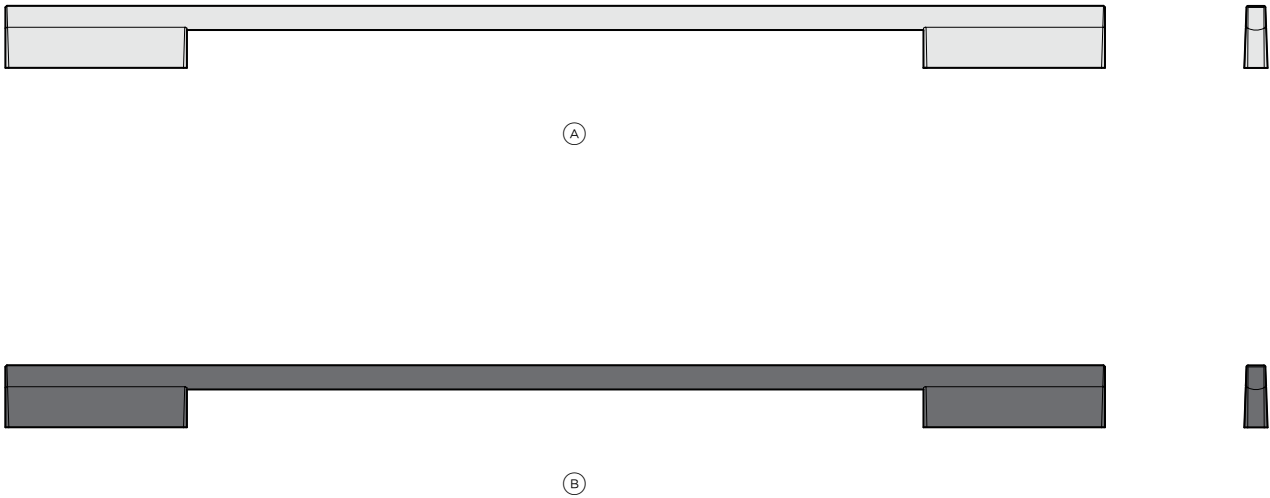

Handle kits		
Style	Model	Finish
Ⓐ Contemporary square fine	AHD5DDDW60S	Brushed aluminium
Ⓑ Contemporary square fine black	AHD5DDDW60B	Brushed black aluminium

Note: Double Dishwasher requires two handle kits.


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

PRE-FINISHED PANELS


Brushed Stainless Steel - ADDD60DTPX
Black Stainless Steel - ADDD60DTPB

Panel Dimensions	mm
Ⓐ Width of panels	596
Ⓑ Height of top drawer panel	442
Ⓒ Height of bottom drawer panel	311
Ⓓ Handle fixing point from top of panel	72
Ⓔ Handle fixing point from side of panel	81.5
Panel depth	18

Note: Custom toe kick panels can installed alongside pre-finished panels using the recessed pre-finished toe kick as a mounting jig.

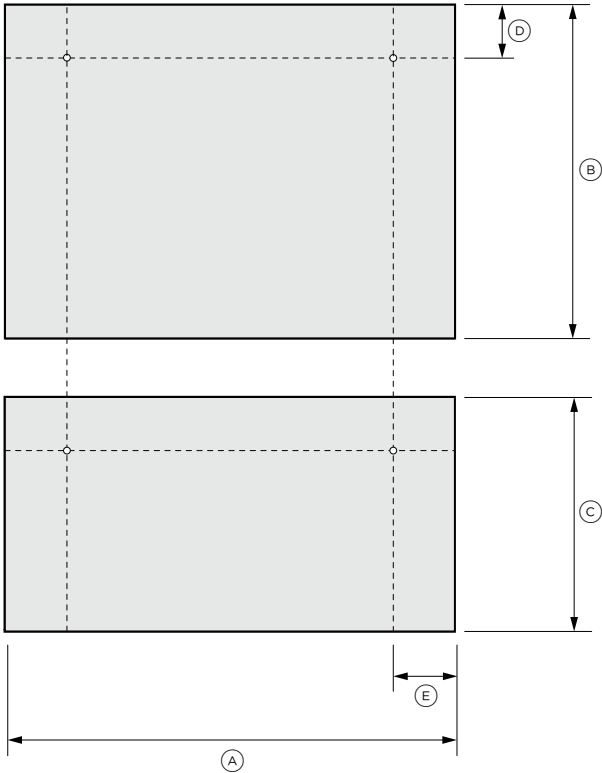

PRE-FINISHED PANEL ADDD60DTPX
BRUSHED STAINLESS STEEL

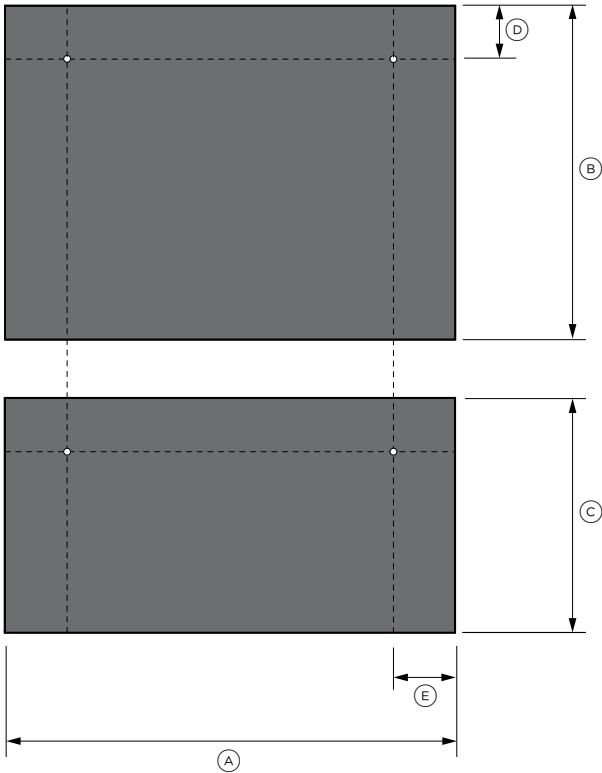

PRE-FINISHED PANEL ADDD60DTPB
BLACK STAINLESS STEEL

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com


PLANNING CONSIDERATIONS

CAVITY SPECIFICATIONS

The cavity height will vary according to your cabinetry design and counter top height.

Cavity Dimensions	mm
Ⓐ Cavity height*	869-927
Ⓑ Minimum cavity width	600
Ⓒ Minimum cavity depth**	578

*Cavity height depends on adjustment of levelling feet.
**Ensure there are no obstructions in the cavity if minimum cavity depth, width or height are specified.

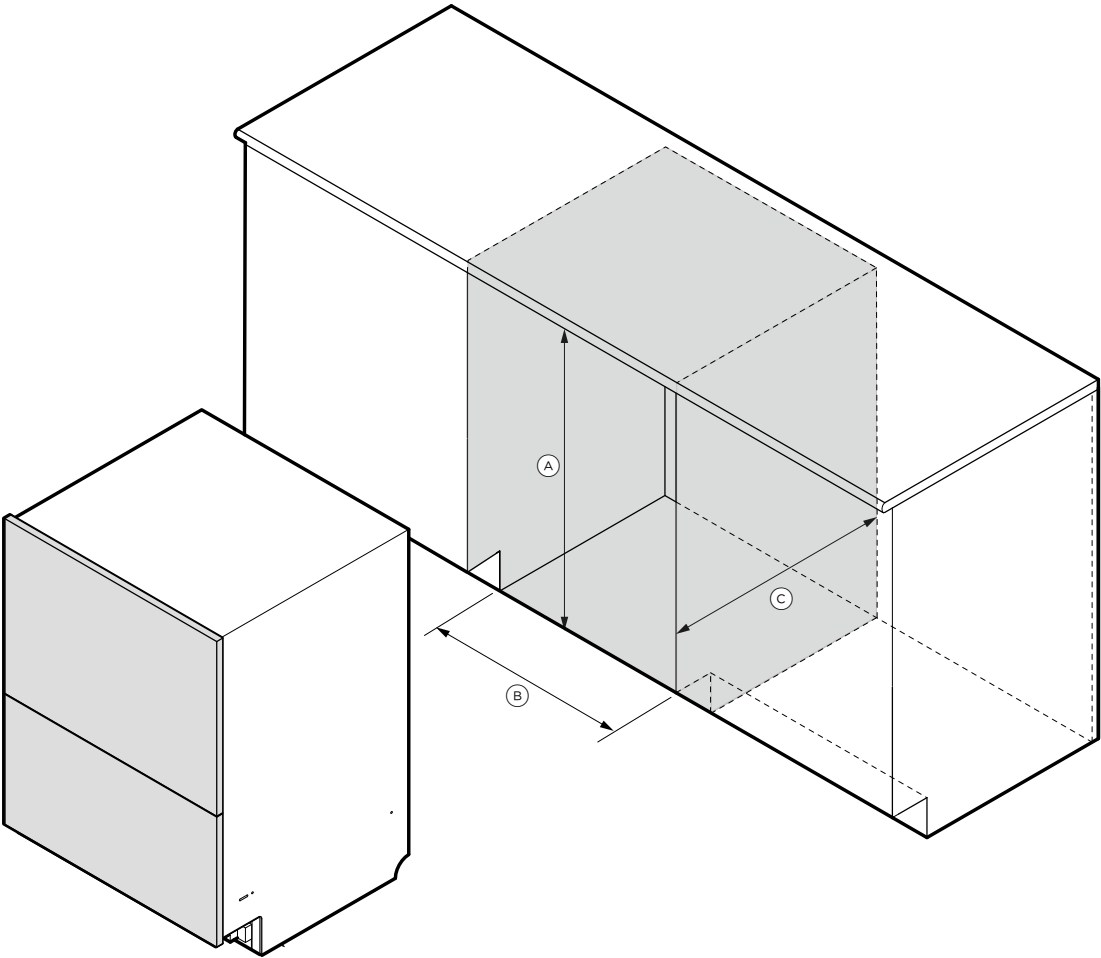

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com


CAVITY PACKING PLACEMENT

The dishwasher must be secured through chassis and into the cabinet sides. If the cavity is over width, packers must be installed to avoid bowing the chassis.

Extra packers are recommended above the fixing points.

Side and top brackets may be installed and fixed to the edge of the cabinet.

Dimensions	mm
Ⓐ Width between packers	600
Ⓑ Center of fixing points from top of chassis	640

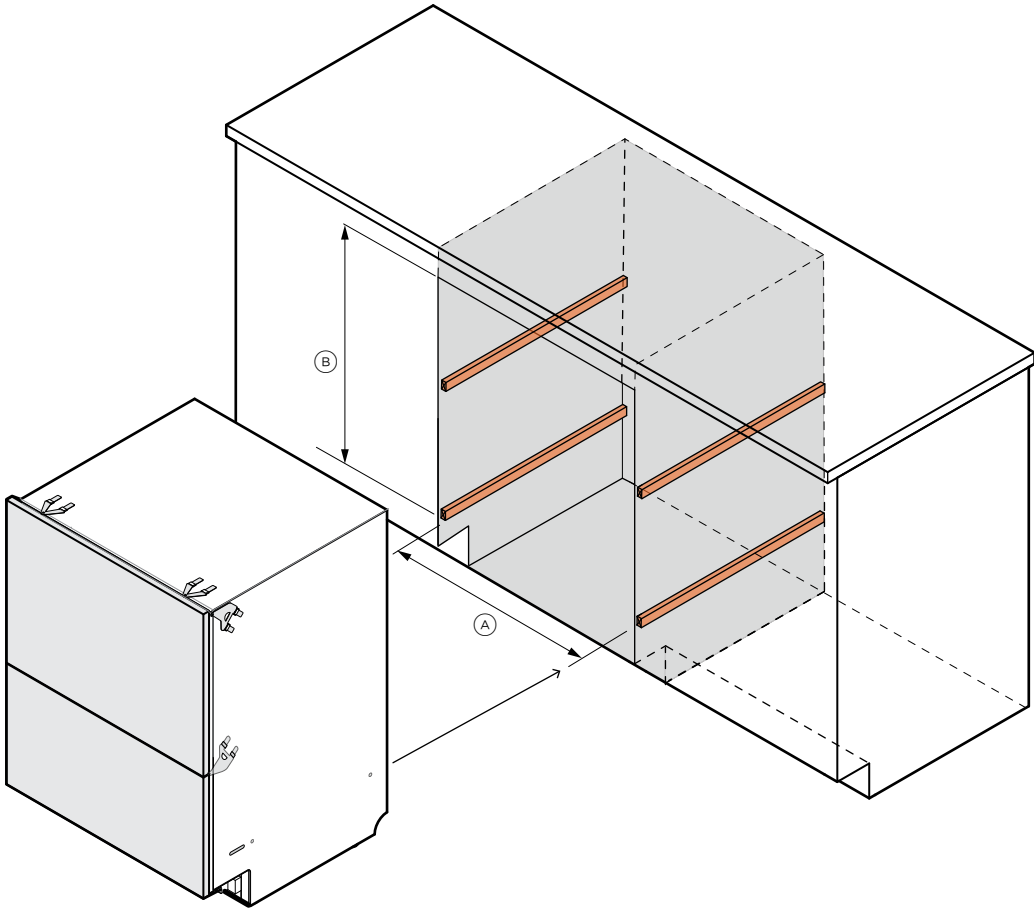


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

FLUSH PRE-FINISHED TOE KICK

Suitable for a toe kick depth of **40 to 56mm**. The pre-finished toe kick height can be cut to fit as needed.

Dimensions	mm
Ⓐ Toe kick height	45 - 123
Ⓑ Toe kick width	595
Ⓒ Minimum clearance between toe kick panel and floor	12
Ⓓ Depth of toe kick recess*	40 - 56
*Back of drawer to front of toe kick	

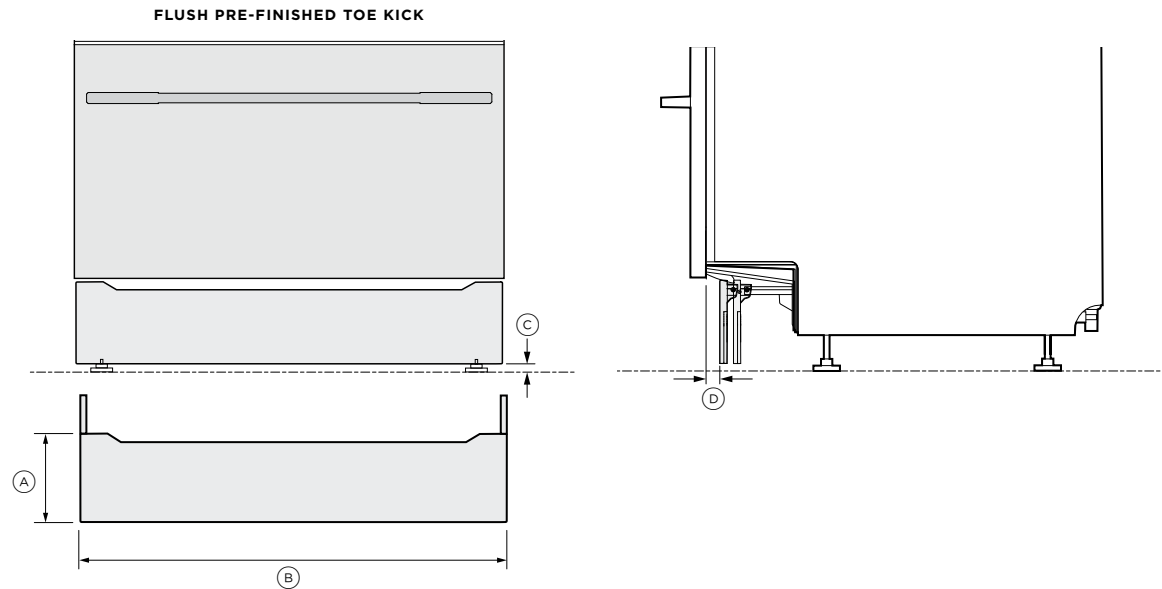


RECESSED PRE-FINISHED TOE KICK

Suitable for a toe kick depth of **56 to 120mm**. The pre-finished toe kick height can be cut to fit as needed.

The recessed toe kick is also used as a mount for custom panels.

Dimensions	mm
Ⓔ Toe kick height	45 - 123
Ⓕ Toe kick width	595
Ⓖ Minimum clearance between toe kick panel and floor	12
Ⓗ Depth of toe kick recess*	56 - 120
*Back of drawer to front of toe kick	

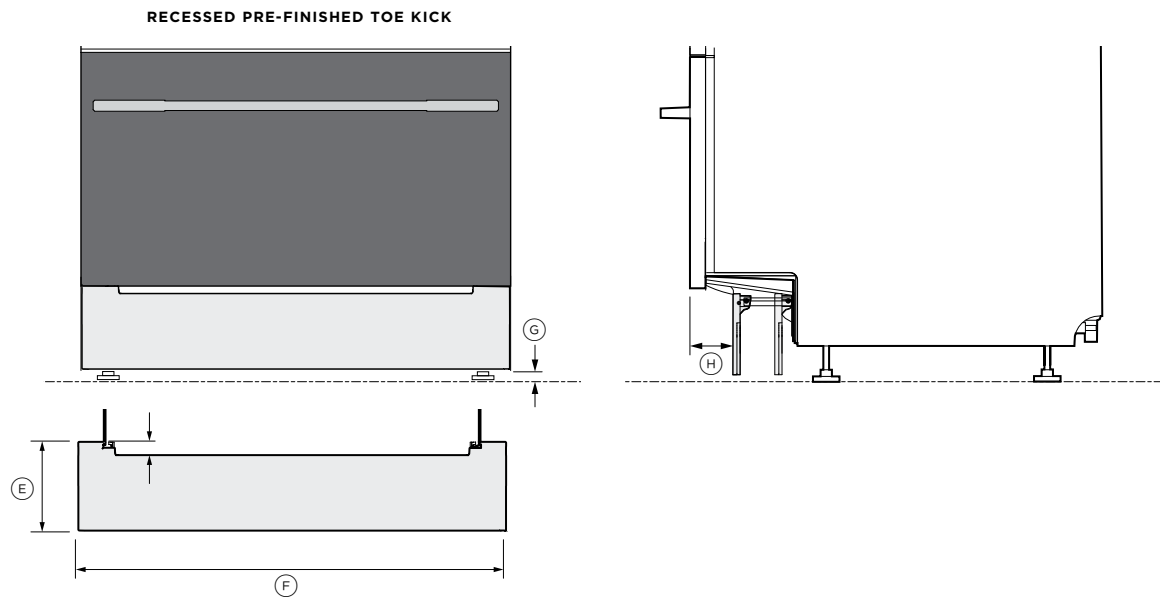

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

PLANNING CONSIDERATIONS | **CUSTOM TOE KICK SPECIFICATIONS**


CUSTOM TOE KICK SPECIFICATIONS

The custom panel is fixed to the recessed pre-finished panel.
The finished toe kick height will vary according to the toe kick depth and the adjusted height of the dishwasher.

The bottom drawer panel can be extended over the toe kick up to a maximum of 50mm.


Toe kick Dimensions	mm
A Product height	867 - 925
B Top panel height minimum	442
C Bottom panel height minimum	311
D Bottom panel maximum extension	50
E Minimum toe kick clearance to floor	12
F Toe kick panel height*	45-123
G Toe kick depth	40 - 120

*For overall cabinet toe kick height include the 12mm clearance gap.
Custom drawer panel and toe kicks should be manufactured and fitted by a cabinetmaker.

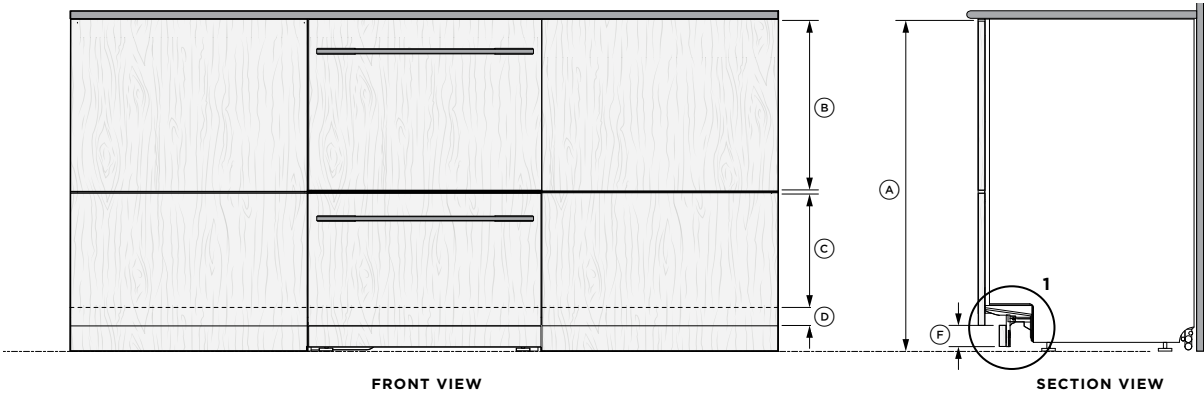


FRONT VIEW

SECTION VIEW

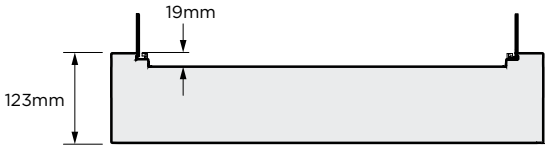


RECESSED PRE-FINISHED TOE KICK 40 - 100MM DEPTH

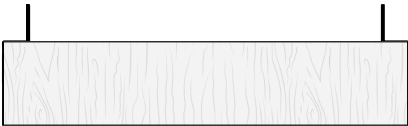


CUSTOM TOE KICK PANEL ALIGNMENT FOR 40MM TO 56MM DEPTH



CUSTOM TOE KICK PANEL ALIGNMENT FOR 56MM TO 120M DEPTH

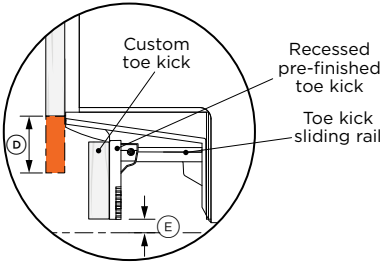

SECTION DETAIL VIEW 1
TOE KICK DEPTHS 40 - 56MM

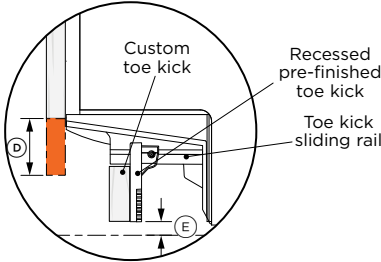

SECTION DETAIL VIEW 1
TOE KICK DEPTHS 56 - 120MM


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

PLANNING CONSIDERATIONS | **CUSTOM PANEL SPECIFICATIONS**

CUSTOM PANEL SPECIFICATIONS

Ensure that there are no obstructions under the counter top if the dishwasher is installed directly below.

Dimensions	mm
(A) Height of cavity	869-927
(B) Minimum panel width	596
(C) Minimum top panel height	442
(D) Minimum clearance gap between drawers	2
(E) Minimum bottom panel height	311
(F) Maximum bottom panel extension	50
(G) Minimum ventilation gap	8

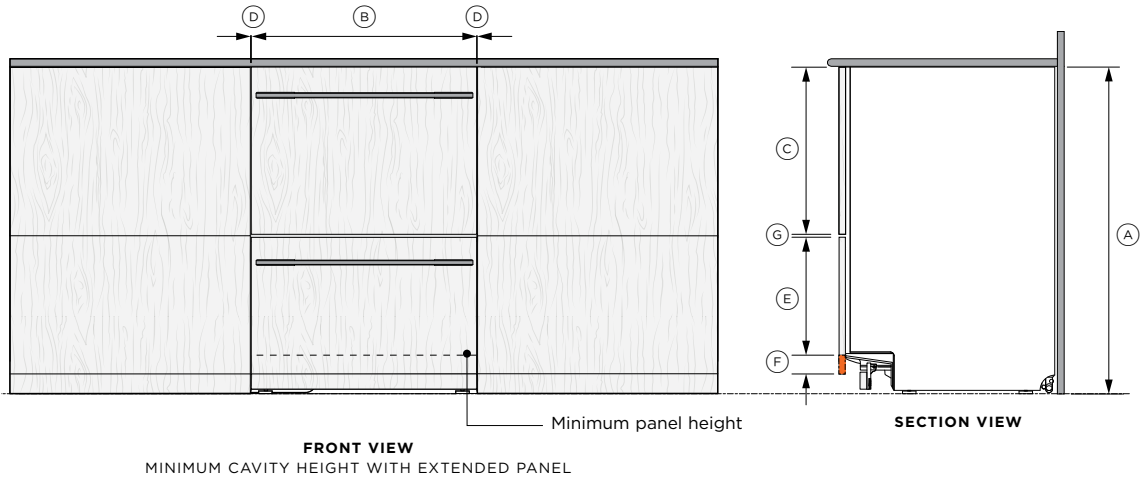


EXTENDING CUSTOM PANELS

Custom panels may need to extend to cover cabinet side walls or frames, or to create recessed handles.

Make sure the dishwasher drawer can always close securely against the seals on the chassis.

The dishwasher drawers must seal properly when closed to prevent humidity escape and condensation, which can damage the custom panel.

If the custom drawer panel contacts any cabinetry, the seal may be compromised, allowing humidity to escape and damage the drawer panels or cabinetry.

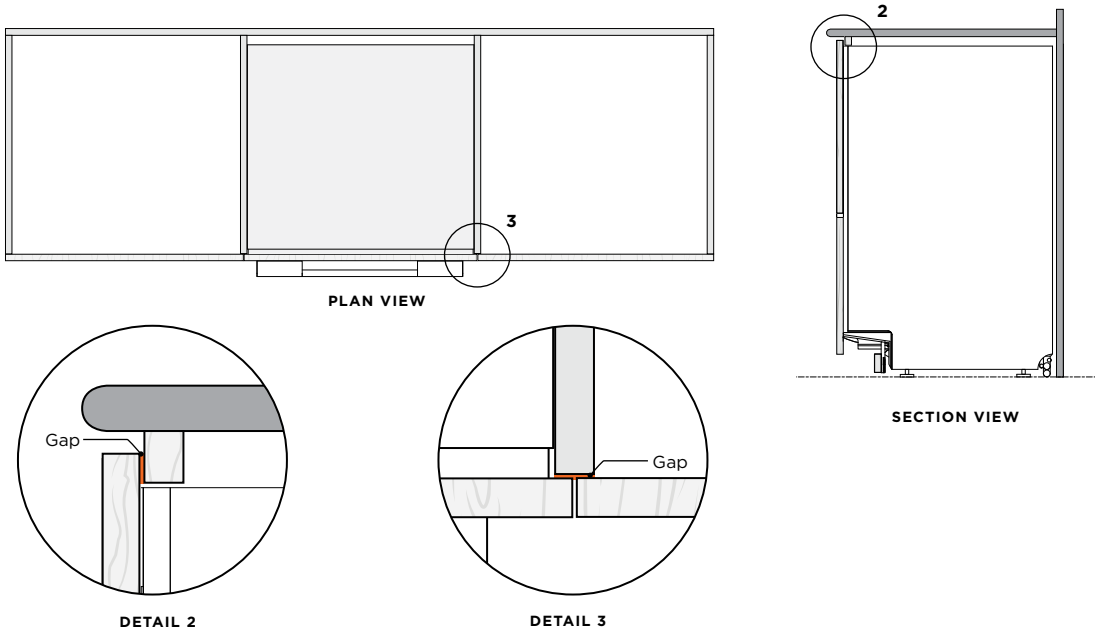

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

CUSTOM DRAWER PANEL PREPARATION

CUSTOM PANEL SPECIFICATIONS

Panel width and height will vary according to your cabinet specifications.



Custom drawer panel and toe kicks should be manufactured and fitted by a cabinetmaker.

Panel Dimensions	mm
Ⓐ Minimum panel width	596
Ⓑ Top drawer panel minimum height	442
Ⓒ Bottom drawer panel minimum height	311
Ⓓ Maximum bottom drawer panel extension	50
Maximum panel weight per drawer panel including handle	9kg

TOP PANEL EXTENSION


The top panel can be extended upwards. This can affect the ease of using the internal control panel.

For additional support please contact the Fisher & Paykel design support team at designsupport@fisherpaykel.com

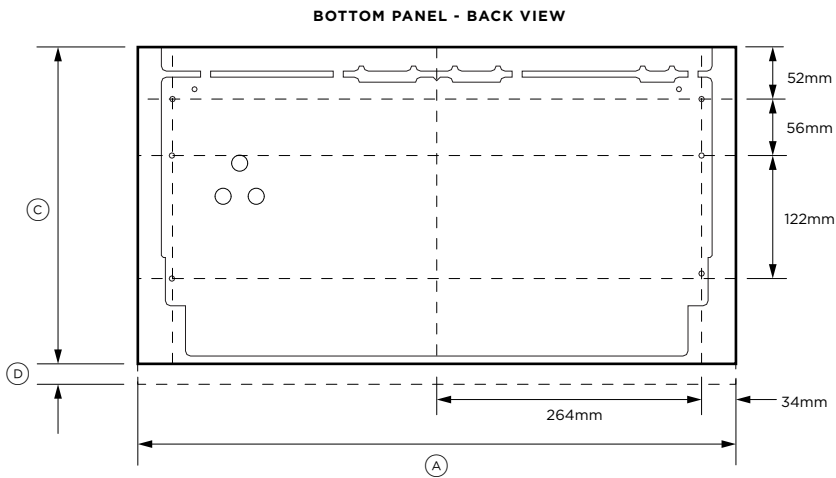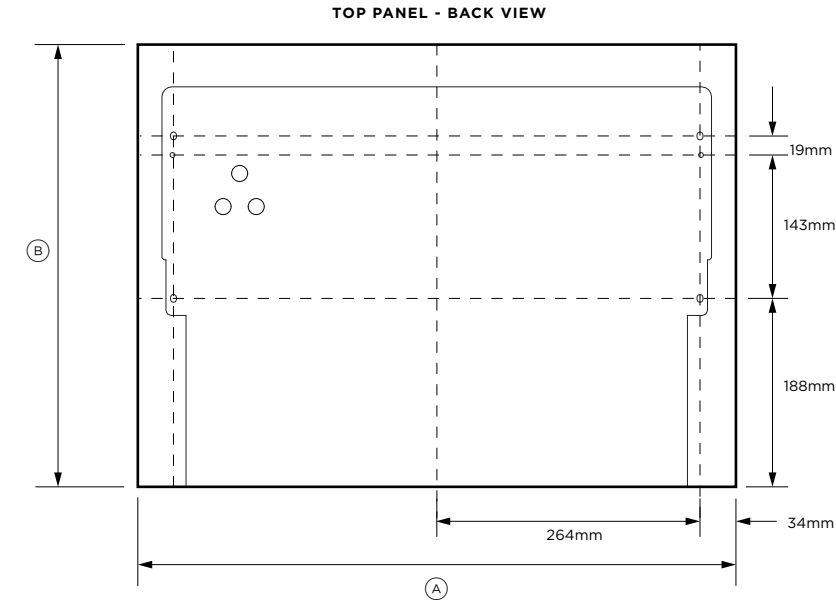


The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available with the product on delivery and on our website fisherpaykel.com

SERVICES

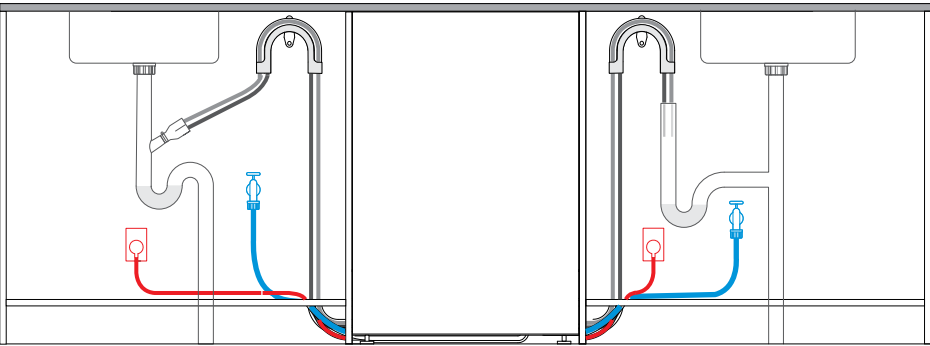


FRONT SECTION VIEW - SERVICES THROUGH TOE KICK

Services can be routed left or right through the toe kick and into the adjacent cabinet. Drainage can be routed to a spigot or stand pipe.

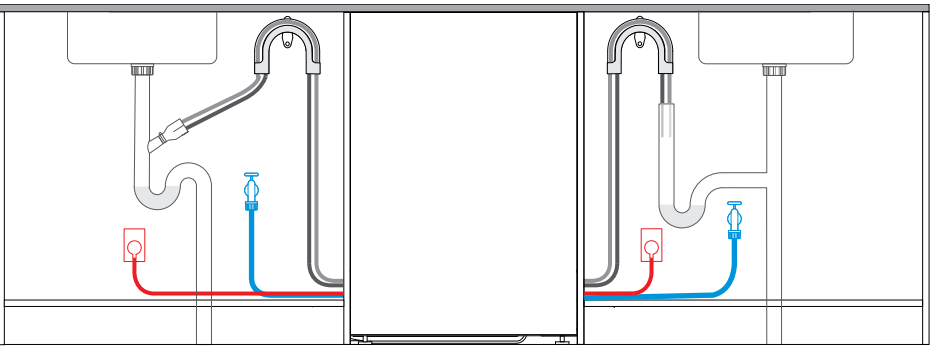


FRONT SECTION VIEW - SERVICES THROUGH CABINET SIDE

If routing directly through the cabinet side is necessary, ensure that the service hole is raised. There must be space behind the dishwasher for feeding hoses and cords.

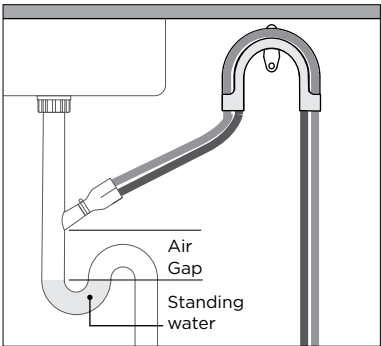

DETAIL VIEW - SPIGOT INSTALL

The spigot must be installed above the standing water with an air gap in between.

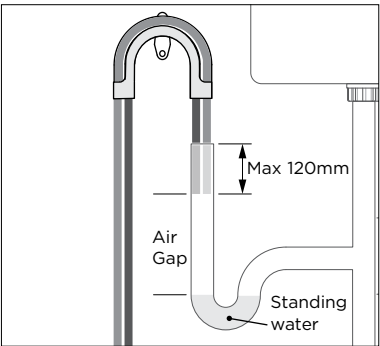


DETAIL VIEW - STAND PIPE INSTALL

The dishwasher drain must be installed no more than 120mm into the stand pipe.
An air gap between drain ends and standing water is required.


SERVICE REQUIREMENTS

- The drain hose support should be placed as close to the underside of the counter top as possible.
- Drain hoses must be installed higher than standing water with an air gap between to avoid drainage issues.
Hoses can be shortened to achieve the air gap.
- Hoses must not extend into a standpipe more than 120mm.
- If the drain hoses supplied are not long enough to reach your services, a Fisher & Paykel drain hose extension kit is available which will extend the drain hoses by 3.6m (part number 525798).

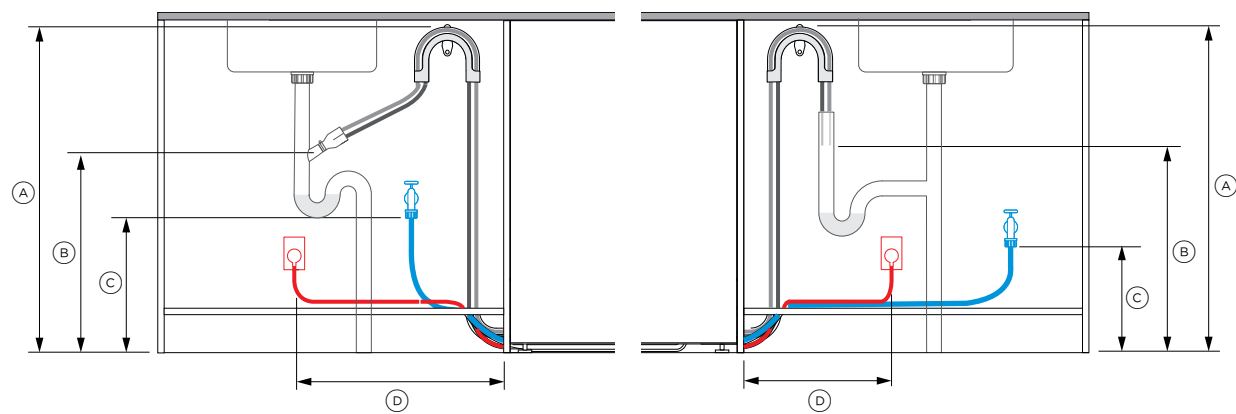


FRONT SECTION VIEW - SPIGOT INSTALL

FRONT SECTION VIEW - STAND PIPE INSTALL

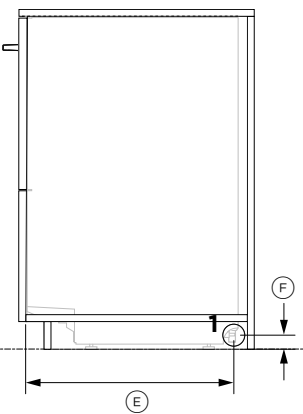

SIDE SECTION VIEW - SERVICE HOLE

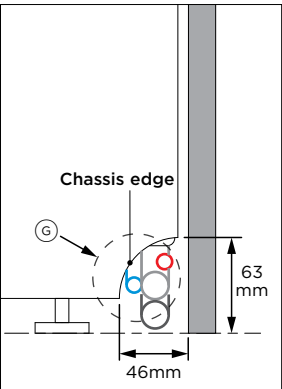

DETAIL 1 - SERVICE HOLE


Service dimensions	mm
A Minimum distance from floor to top of hose support	750
B Minimum distance from floor to end of drain hoses*	500
C Minimum distance from floor to inlet hose connection	200
D Maximum distance from cabinetry to the centre of electrical outlet	450

*Distances are the same for standpipe and waste tee installation.

Minimum service hole dimensions	mm
E Minimum distance between front of product* and center of service hole	538
F Maximum distance between floor and center of service hole	38
G Minimum diameter of all service holes	57

*Not including dishwasher panels

The models shown in this Planning Guide may not be available in all markets and are subject to change at any time. Product specifications may vary from those shown. This Planning Guide should not be used as installation guidance for any product. Further information is required to safely and correctly install the products featured here. Specific installation guidance will be available on our website fisherpaykel.com

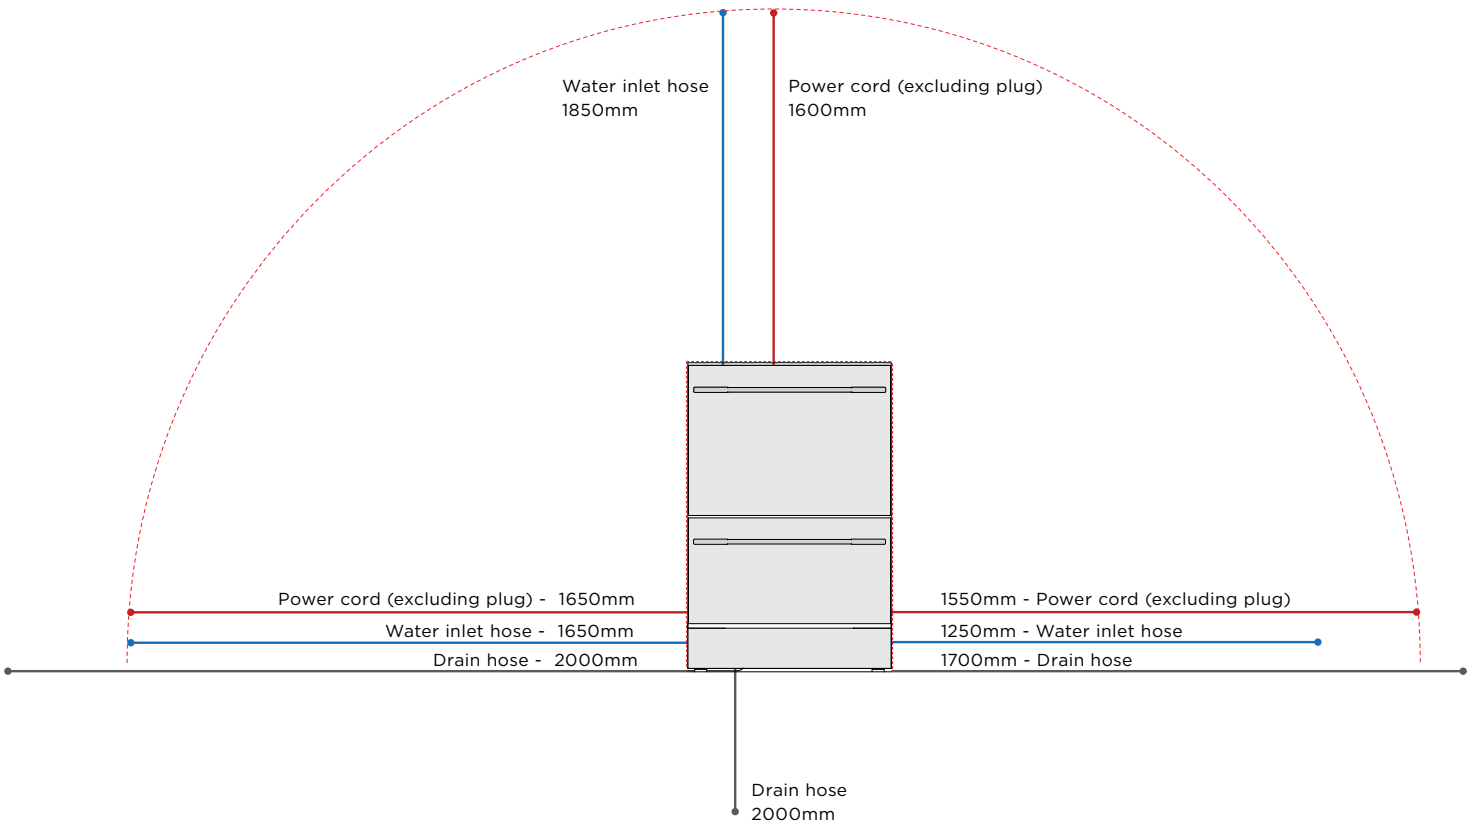

Electrical and plumbing specifications

DD60DTX6H1, DD60DTX6H11

Electrical

Supply	220-240V
Service	Min 9.5A

Plumbing

Supply	3/4" BSP (GB20) to suit flat washer
--------	-------------------------------------

Pressure

Min.	0.1 MPa (14.5 psi)
Max.	1 MPa (145 psi)
Recommended temperature	Cold (max 60°C)

Hose and cord lengths

	mm
Drain hoses*	2000
Water inlet	1850
Power	1600

*The Fisher & Paykel 3.6m drain hose extension kit (part number 525798) is available for purchase from fisherpaykel.com

IMPORTANT NOTE: Throughout this guide, dimensions may vary by $\pm 2\text{mm}$ (1/16"). Please read the Installation Guide for detailed information on installing the product. For full installation instructions visit fisherpaykel.com

