

90cm Series 7 5 Burner Gas Cooktop, Natural Gas

Series 7 | Contemporary




All the essentials in a large cooktop, including a wok burner for high heat cooking.

- Five burners including a wok burner
- A flame-failure safety device; if a flame goes out, the gas turns off

DIMENSIONS

Height	59 mm
Width	900 mm

Depth530 mm

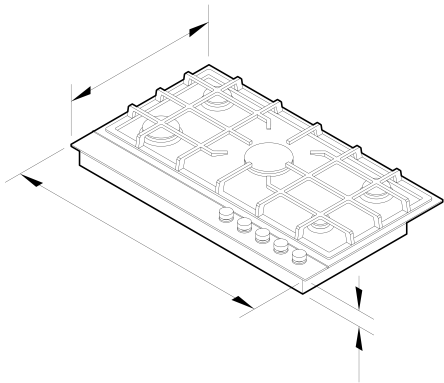

FEATURES & BENEFITS

Precise Control

The consistent flame and heat distribution of the burners, including the wok burner, combined with highly responsive dials offer precise heat control. Perfect a slow simmer for sauces or an intense heat for searing steaks.

Easy Handling

With flat cast-iron grates, pots and pans can easily be slid across elements, coming in handy in busy cooking environments.

Safe And Sound

The flame failure safety device automatically turns off the gas if the flame is accidentally extinguished.

Complementary Design

The brushed stainless steel and polished metal trim has been designed for durability but also provides a modern, stylish finish, matching the Fisher & Paykel family of kitchen appliances.

Easy To Clean

The stainless steel component is easily accessible and quick to clean. Cast iron trivets provide a durable and stable cooking platform, with rubber feet to prevent them from scratching the cooktop.

Handy Accessories

This cooktop comes with a small pan support and wok stand to complement different cooking styles.

SPECIFICATIONS

Accessories (included)

Small pan support	•
Wok stand	true

Burner ratings

Auxiliary burner (natural gas)	1.1kW
Rapid burner (natural gas)	2.8kW
Semi-rapid burner power	1.8kW
Wok burner power	5.0kW

Burners

Number of burners	5
-------------------	---

Cleaning

Easy clean cooktop design	•	Flame failure system	•
Quick component removal	•	Spill containment	2 L
Consumption		Zones	
Energy rating	Grade 2	Number of zones	5
Heating efficiency	59%		
Controls		SKU	83040
Ergonomic control dials	•	The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020	
Laser etched graphics	•		
Performance		Other product downloads available at fisherpaykel.com	
Cast iron trivets	•	↓ DWG	
Electronic ignition	•	↓ DXF	
Quick connect gas valves	•	↓ Installation Guide (Chinese)	
		↓ Revit	
		↓ Rhino	
		↓ Restriction of the Use of Hazardous Substances (Chinese)	
		↓ SketchUp	
		↓ User Guide (Chinese)	
Power requirements		Where applicable:	
Supply voltage	230-240 V		
Product dimensions			
Depth	530 mm		
Height	59 mm		
Width	900 mm		
Safety			

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.