

# 60cm Series 9 Integrated Refrigerator Freezer, Ice & Water


Series 9 | Integrated



- A slim profile, perfect for compact kitchens, or pair with other Integrated models for generous chilled and frozen storage.
- Flush fit design with 4mm gaps and custom height installation
  - Convenient access to fresh, chilled water and ice with internal water dispenser and ice maker
  - Customise with your own kitchen cabinetry or purchase our stainless steel door panel accessory
  - Easy-to-use touch-control panel and Wi-Fi capability

## DIMENSIONS

Height	1870 mm
Width	592 mm
Depth	576 mm

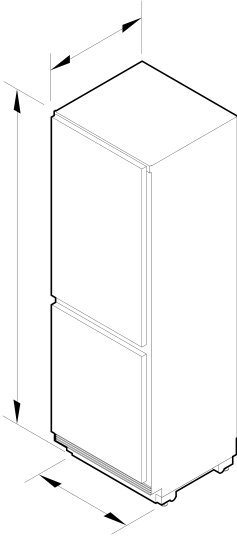

## FEATURES & BENEFITS

- Perfect Fit**
- These models fit flush, with only 4mm gaps around them and no visible hinges or grilles. Our Integrated models can be seamlessly hidden behind your cabinetry, or you can purchase our stainless steel door panel.
- Internal Water Dispenser And Ice Maker**

Both the water dispenser and ice maker are located inside this Integrated model, leaving an uninterrupted exterior that blends in seamlessly with surrounding cabinetry. The slimline water dispenser is flush fit in order to maximise internal storage space, with a temperature-controlled flow and an angled water delivery to reduce drips and spills.

**Mix & Match**

These modular refrigerators and freezers can be mixed and matched, with different sizes and finishes. Installed side by side or individually throughout the kitchen, you can create a cooling solution to suit your lifestyle. Customise with your own kitchen cabinetry and handles, or purchase our stainless steel door panel and handle options.

**Clever Energy**

ActiveSmart™ Foodcare learns how you live. It is technology that understands how you use your refrigerator and adjusts temperature, airflow and humidity inside to help keep food fresher for longer.

**Flexible Storage**

Designed to make it simple for you to store, access and remove food, this refrigerator includes LED-lit adjustable cantilevered shelving and full extension bins in the freezer.

**Simple Installation**

Our Integrated products are easy to install, whether you are renovating your kitchen or designing a new one. Adjustable front and rear feet allow for uneven floors alongside adjustable door panels that can be customised to match your kitchen. These models are designed to easily slide into place as separate units – a perfect fit for European design kitchens.

**Ease Of Use**

Using the intuitive touch-sensitive control panel, you can easily adjust the temperature to suit. Beautiful to use, the door is family safe with a soft-close mechanism.

## SPECIFICATIONS

<b>Accessories (included)</b>	
Hinge change (from right hinge to left hinge)	•
<b>Accessories (sold separately)</b>	
Door panel set stainless steel	<b>Right hinge RD6019BR, Left hinge RD6019BL</b>
Handle kit Classic	<b>AHCLRDB</b>
Handle kit Contemporary round, aluminium	<b>AHSRDB19</b>
Handle kit Contemporary square fine, aluminium	<b>AHD5RDB19</b>
Handle kit Contemporary square fine, black	<b>AHD5RDB19B</b>
Joiner kit	<b>AJRS19LR</b>
Toe kick stainless steel 1200mm	<b>AKRS12010</b>
Toe kick stainless steel 1800mm	<b>AKRS18010</b>
Toe kick stainless steel 600mm	<b>AKRS06010</b>
Water filter replacement	<b>847200 - FWC3</b>
<b>Capacity</b>	
Total gross capacity	<b>328 L</b>
Volume	<b>303 L</b>
Volume freezer	<b>123 L</b>
Volume refrigerator	<b>180 L</b>
<b>Consumption</b>	
Energy usage	<b>0.72kWh/24h</b>

<b>Features</b>	
Adjustable door shelves	<b>4</b>
Adjustable glass cantilevered shelves	•
Covered door shelves	<b>1</b>
Door alarm	•
Internal water dispenser	•
LED bin lighting	•
LED ceiling lighting	•
LED side lighting	•
SmartTouch control panel	•
Stackable bottle holders	<b>2</b>
Water tank capacity	<b>1 L</b>
<b>Freezer Features</b>	
Automatic ice maker	•
Bottle chill	•
Door alarm	•
Fast freeze	•
Freezer bins	<b>3</b>
Ice Boost	•
Ice making rate per day	<b>1 kg</b>
LED bin lighting	•
LED ceiling lighting	•
LED side lighting	•
<b>Installation Dimensions</b>	
Minimum inside width of cabinetry frame	<b>600 mm</b>
Minimum internal depth of cabinetry	<b>600 mm</b>
Minimum internal height of cabinetry	<b>1880 mm</b>

<b>Performance</b>	
ActiveSmart™ Foodcare	•
Adaptive defrost	•
Dual evaporator	•
Frost free	•
Humidity control system	•
Inverter controlled compressor	•
Sabbath mode	•
<b>Power requirements</b>	
Rated current	<b>10 A</b>
Supply frequency	<b>50 Hz</b>
Supply voltage	<b>230 V</b>
<b>Product dimensions</b>	
Depth	<b>576 mm</b>
Height	<b>1870 mm</b>
Width	<b>592 mm</b>
SKU	26215

The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020

Other product downloads available at fisherpaykel.com

- [↓](#) DWG K08 Hinge
- [↓](#) DWG
- [↓](#) DWG Appliance with Custom Panel
- [↓](#) DXF K08 Hinge
- [↓](#) DXF Appliance with Panel Preparation
- [↓](#) DXF
- [↓](#) DXF Appliance with Custom Panel
- [↓](#) Archicad
- [↓](#) Declaration of Conformity (Chinese)
- [↓](#) Energy Label
- [↓](#) Installation Guide (English)
- [↓](#) Installation Guide (Chinese)
- [↓](#) Planning Guide (English)
- [↓](#) Planning Guide (Chinese)
- [↓](#) Revit
- [↓](#) Rhino
- [↓](#) Rhino Appliance with Custom Panel
- [↓](#) Rhino Appliance Door with Classic Round Handle
- [↓](#) Rhino Appliance Door with Contemporary Round Handle
- [↓](#) Rhino Appliance Door with Professional Round Flush Handle
- [↓](#) Rhino Appliance Door with Square Fine Black Handle
- [↓](#) Rhino Appliance Door with Square Fine Handle
- [↓](#) SketchUp
- [↓](#) SketchUp Appliance with Custom Panel
- [↓](#) SketchUp Appliance Door with Classic Round Handle
- [↓](#) SketchUp Appliance Door with Contemporary Round Handle
- [↓](#) SketchUp Appliance Door with Professional Round Flush Handle
- [↓](#) SketchUp Appliance Door with Square Fine Black Handle
- [↓](#) SketchUp Appliance Door with Square Fine Handle
- [↓](#) User Guide (English)
- [↓](#) User Guide (Chinese)
- [↓](#)

Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.