

# 60cm Series 9 Contemporary Pyrolytic Oven

Series 9 | Contemporary




A highlight of the Fisher & Paykel collection, this Series 9 oven ensures that every dish you create is cooked to perfection.

- 85L total capacity with 11 oven functions including Roast and Pastry Bake
- Moisture level control with ActiveVent™ technology
- Pyrolytic self-cleaning function breaks down food residue for an easy clean
- Non-tip, full-extension shelves for safe removal of hot dishes

## DIMENSIONS

Height	598 mm
Width	596 mm
Depth	565 mm

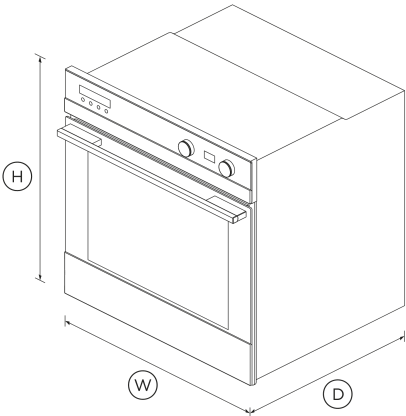

## FEATURES & BENEFITS

### Multi-Function Flexibility

11 functions including Roast, Pastry Bake and Fan Grill mean no matter what you're cooking, you've got the right heat to match.

### Generous Capacity

With a generous sized internal cavity, you can create several dishes at once using multiple shelves.

### Activevent Technology

With ActiveVent technology for optimised moisture levels and AeroTech for even heat distribution, you'll get perfect results even when using multiple shelves.

### Cleaning Is Simple

Pyrolytic self-clean breaks down food residue at a very high temperature, leaving a light ash that's easily removed with a damp cloth.

### Seamless Fit

Designed to fit seamlessly in your kitchen, this built-in oven fits flush with cabinetry to minimise gaps and add to a cohesive aesthetic.

### Safe And Sound

The CoolTouch door features triple glazing and a cooling system that ensures it's safe to touch from the outside - protecting both your hands and the surrounding cabinetry.

## SPECIFICATIONS

### Accessories (included)

Full extension sliding shelves	2 sets
Grill rack	1 set
Roasting dish	1
Wired temperature sensor	1

### Accessories (sold separately)

Handle kit Contemporary round, aluminium	81645 (optional)
Optional round handle	Part 81645

### Capacity

Shelf positions	6
-----------------	---

Total capacity	85 L	Pastry Bake	•	CoolTouch door	•
Usable capacity	72 L	Pyrolytic self-clean	•	Non-tip shelves	•
		Roast	•		
		Vent bake	•		
		Warm	•		
Cleaning				SKU	81670
Acid resistant graphite enamel	•				
Pyrolytic self-clean	•	Performance			
Removable oven door	•	ActiveVent™ system	•		
Removable oven door inner glass	•	AeroTech™ technology	•		
Removable shelf runners	•	Automatic rapid pre-heat	•		
		Grill power	3000 W		
Controls		Whisper quiet cooking	•		
Audio feedback	•			Other product downloads available at fisherpaykel.com	
Automatic cooking/minute timer	•	Power requirements		<a href="#">↓</a> DWG	
Automatic pre-set temperatures	•	Amperage	15 A	<a href="#">↓</a> DXF	
Celsius/Fahrenheit temperature	•	Supply frequency	50 Hz	<a href="#">↓</a> Data Sheet (English)	
Electronic clock	•	Supply voltage	220 - 240 V	<a href="#">↓</a> Installation Guide	
Electronic oven control	•			<a href="#">↓</a> Installation Guide (Chinese)	
Soft close doors	•	Product dimensions		<a href="#">↓</a> Installation Guide (Chinese)	
Turned stainless capacitive touch buttons with illuminated halos	•	Depth	565 mm	<a href="#">↓</a> Restriction of the Use of Hazardous Substances (Chinese)	
		Height	598 mm	<a href="#">↓</a> Restriction of the Use of Hazardous Substances (Chinese)	
Functions		Width	596 mm	<a href="#">↓</a> User Guide	
Bake	•			Where applicable:	
Classic bake	•	Safety			
Fan bake	•	Balanced oven door	•		
Fan forced	•	Catalytic venting system	•		
Fan grill	•	Control panel key lock	•		
Grill	•				
Number of functions	11				

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.