

61cm Series 11 Integrated Column Refrigerator, Water

Series 11 | Integrated

Panel Ready | Left hinge




Seamlessly integrate this model, installing it separately or pairing it with another Column. With a left hinge and sleek stainless steel interior, it combines functionality and style.

- With a premium interior for a refined look and feel, this model is the highlight of our Integrated Columns collection
- Designed to optimise energy performance and efficiency
- Flexible storage with two Variable Temperature Zones: choose Fridge, Pantry, or Chill mode

- Mix and match columns, install separately or pair, and customise with cabinetry or stainless steel panels

DIMENSIONS

Height	2134 mm
Width	603 mm
Depth	610 mm

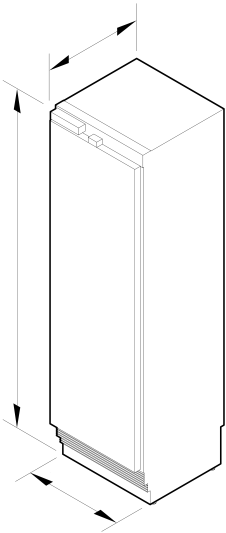

FEATURES & BENEFITS

Premium interior

Our Series 11 Columns are designed with a premium interior that balances form and function. Every element, from the seamless finish to the considered interior lighting, creates a sleek, understated aesthetic that integrates effortlessly into any kitchen.

Clever energy

With highly efficient vacuum insulation reducing heat transfer, this fridge uses only the energy it needs while keeping your food fresher for longer.

Variable Temperature Zones

When it comes to optimal food preservation, one temperature doesn't fit all. With Variable Temperature Zones, you can create the ideal climate for different types of food and drinks. Switch a compartment to Fridge, Pantry, or Chill Mode for everyday convenience, or adjust the settings to provide extra capacity when needed.

Mix & Match

Integrated Column Refrigeration offers the flexibility to mix and match. Choose from different-sized Column Fridges and Freezers that can be installed individually or paired together. Complete the look with your own customised door panels to blend seamlessly with your kitchen cabinetry, or purchase our stainless steel door panels.

Perfect Fit

These models fit flush and have only 3mm gaps around them with no visible hinges or grilles. Our Integrated models can be seamlessly hidden behind your cabinetry for an understated and clean look with any kitchen layout.

Pantry Mode

Not everything benefits from cold storage. Pantry Mode (11 to 13°C) is the perfect climate to store foods that benefit from a cool, dark place, including bread, many types of fruit, bananas, avocados, tomatoes, nuts, grains and cereals.

Easy install

Integrated Column Refrigerators and Freezers have been developed to make installation easy. The joiner kit is included when pairing refrigerators and freezers. All models come with front-adjustable levelling feet and they've been designed to easily slide into place as separate units.

SPECIFICATIONS

Accessories (sold separately)

Door panel stainless steel Left hinge 610mm	RD6121L10D
Door panel stainless steel Right hinge 610mm	RD6121R10D
Handle kit Classic	AHCLRDSF
Handle kit Contemporary round, aluminium	AHSRDSF
Handle kit Contemporary square fine, aluminium	AHD5RDSF
Handle kit Contemporary square fine, black	AHD5RDSFB
Handle kit Professional round flush	AHP3RDSF
Joiner kit	AJ-RS21LR
Toe kick stainless steel 1067mm	AKRS10710
Toe kick stainless steel 1220mm	AKRS12210
Toe kick stainless steel 1372mm	AKRS13710
Toe kick stainless steel 1524mm	AKRS15210
Toe kick stainless steel 1828mm	AKRS18310
Toe kick stainless steel 1981mm	AKRS19810
Toe kick stainless steel 610mm	AKRS06110
Toe kick stainless steel 762mm	AKRS7610

Capacity

Total gross capacity	383 L
Volume	351 L
Volume refrigerator	351 L

Features

Adjustable door shelves	4
-------------------------	---

Adjustable glass cantilevered shelves	•
Adjustable glass shelves	3
Covered door shelves	1
Door alarm	•
Gallon door shelves	1
LED bin lighting	•
LED ceiling lighting	•
LED side lighting	•
SmartTouch control panel	•
Soft-close fruit and vegetable bins	•
Stackable bottle holders	4

Performance

ActiveSmart™ Foodcare	•
Adaptive defrost	•
Dual evaporator	•
Frost free	•
Humidity control system	•
Inverter controlled compressor	•
Sabbath mode	•
Variable food modes lower compartment	Pantry; Fridge; Chill
Variable temperature zones	2

Power requirements

Rated current	10 A
Supply frequency	50 Hz
Supply voltage	230 V

Product dimensions

Depth	610 mm
Height	2134 mm
Width	603 mm

SKU	26990
-----	-------

The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020

Other product downloads available at fisherpaykel.com

- [↓](#) 2D-DWG Integrated Refrigeration - K05 Hinge
- [↓](#) 2D-DWG Integrated Refrigeration
- [↓](#) 2D-DXF Integrated Refrigeration - K05 Hinge
- [↓](#) 2D-DXF Integrated Refrigeration
- [↓](#) Declaration of Conformity ZH
- [↓](#) Energy Label (Chinese)
- [↓](#) Service & Warranty
- [↓](#) Planning Guide (Chinese)
- [↓](#) Planning Guide (English)
- [↓](#) Rhino 6 Refrigerator
- [↓](#) SketchUp Refrigerator
- [↓](#) User Guide (English)
- [↓](#) User Guide (Chinese)

Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.