

60cm Series 9 Minimal Pyrolytic Oven

Series 9 | Minimal




A highlight of the Fisher & Paykel collection, this Series 9 oven with touchscreen ensures that every dish is cooked to perfection.

- Touchscreen guided cooking capability offers helpful guidance for different food types as well as full recipes
- 85L total capacity with 16 oven functions including Roast and Pastry Bake
- Moisture level control with ActiveVent™ technology
- Pyrolytic self-cleaning function breaks down food residue for an easy clean

DIMENSIONS

Height	598 mm
Width	596 mm
Depth	565 mm

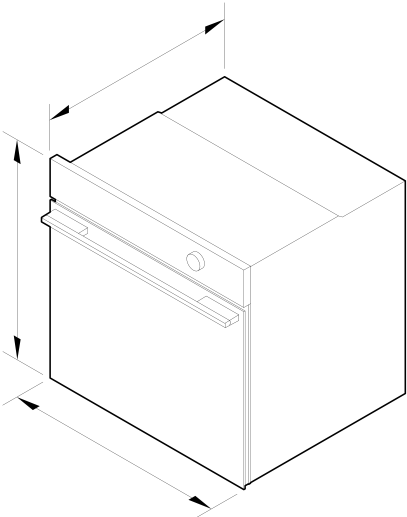

FEATURES & BENEFITS

Cook With Confidence

Our touchscreen interface provides an intuitive guided cooking experience that helps deliver perfect results, whether you've been cooking all your life or just starting out. Cook with a favourite method, a hero ingredient, or a go-to cooking function or recipe.

Generous Capacity

With a generous 85L total capacity, you can create several perfectly cooked dishes at once using multiple shelves.

Exceptional Performance

Our unique cooking technologies were developed to deliver perfect results. ActiveVent™ ensures optimised moisture levels, while AeroTech circulates heat evenly for a consistent temperature.

Multi-Function Flexibility

The cooking functions have each been tailored, tested, tweaked and perfected to ensure that no matter what you're cooking, you've got the right heat to match. A Wireless Temperature Sensor precisely monitors cooking in real time, giving you complete control.

Self-Cleaning

Our pyrolytic self-cleaning technology breaks down food residue at a very high temperature, leaving a light ash that's easily removed with a damp cloth. The enamel coated side racks don't need to be removed when using this function.

Design Freedom

Available in an elegant black or a stylish black with stainless steel, this oven is designed to fit seamlessly into your kitchen. Premium materials and detailing support a cohesive, considered kitchen design.

SPECIFICATIONS

Accessories (included)

Full extension sliding shelves	2 sets
Grill rack	1 set
Roasting dish	1
Wired temperature sensor	1

Accessories (sold separately)

Optional Accessory round handle	Part 81645
---------------------------------	------------

Capacity		Functions		Supply voltage		220 - 240 V				
Shelf positions	6	Air fry			<div></div>					
Total capacity	85 L	Bake								
Usable capacity	72 L	Classic bake								
		Dehydrate								
		Fan bake			Product dimensions					
		Fan forced			Depth	565 mm				
		Fan grill			Height	598 mm				
		Grill			Width	596 mm				
Cleaning		Number of functions	16	<div></div>						
Acid resistant graphite enamel		Pastry Bake						Safety		
Pyrolytic self-clean		Pizza bake						Balanced oven door		
Removable oven door		Pyrolytic self-clean						Catalytic venting system		
Removable oven door inner glass		Rapid proof		Control panel key lock						
Removable shelf runners		Roast		CoolTouch door						
		Slow cook		Non-tip shelves						
		Vent bake		<div></div>						
		Warm								
		Controls					Performance			
Adjustable audio and display settings		ActiveVent™ system					The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020			
Automatic cooking/minute timer		AeroTech™ technology								
Automatic pre-set temperatures		Automatic rapid pre-heat								
Celsius/Fahrenheit temperature		Grill power	3000 W							
Certified Sabbath mode		Whisper quiet cooking		Other product downloads available at fisherpaykel.com						
Dial with illuminated halo		<div></div>								
Electronic clock										
Electronic oven control										
Food probe				Power requirements						
Guided cooking by food type and recipes		Amperage	15 A	↓	DWG					
Intuitive touchscreen display		Supply frequency	50 Hz	↓	DXF					
Multi-language display	UK English, US English, Simplified Chinese, Français, Español			↓	Installation Guide					
Soft close doors				↓	Revit					

- [↓](#) Rhino
- [↓](#) Restriction of the Use of Hazardous Substances (Chinese)
- [↓](#) Restriction of the Use of Hazardous Substances (Chinese)
- [↓](#) SketchUp

Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.