

60cm Series 7 4 Zone Induction Cooktop, 2 SmartZones

Series 7 | Contemporary

Black Glass




Ultimate flexibility. Create a large cook zone with SmartZone, or match with a gas cooktop.

- Child and pet safe – cooktop remains cool to touch until a pot or pan is placed on the surface
- PowerBoost activates a very high heat, bringing liquid to boil in less than a minute

- Easily control each cook zone with Touch&Slide, including pairing cook zones to create a large SmartZone
- Mix and match your induction cooktop with our Gas on Glass cooktop, for even more cooking flexibility

DIMENSIONS

Height	49 mm
Width	600 mm
Depth	450 mm

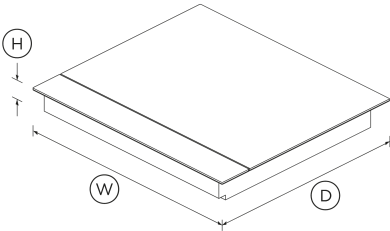

FEATURES & BENEFITS

Precise Control

Fisher & Paykel induction cooktops offer extremely accurate temperature control from very high to very low heats, so you can sear, sauté and temper like a pro. Touch&Slide controls react immediately when you adjust the temperature, so you can go from a boil to a simmer in seconds.

Safer Choice

Induction cooktops only start heating your pot or pan once you’ve placed it on the ceramic surface and stop as soon as you remove it – so you don’t have to worry about curious little fingers or leaving an element on.

Easy Cleaning

The surface around your cookware stays cool when you cook, preventing baked-on spills and making cleaning up a breeze. The durable ceramic cooktop surface just needs a quick wipe after use to maintain its good looks.

Enhanced Features

PowerBoost and GentleHeat deliver either very high or very low heat fast for specialised cooking tasks such as searing meat and melting chocolate. An integrated timer keeps you on track.

Superior Efficiency



No heat is wasted during induction cooking because only the cookware is heated, not the cooktop surface. This makes induction cooking more energy-efficient than electric or gas cooktops.

Larger Cooking Zone

SmartZone links two cooking zones and controls them as one, giving you the flexibility to use large pans and griddles and easily handle bigger food items like pancakes.

SPECIFICATIONS

Accessories (sold separately)

Joiner kit	Part 534731 (required to join two cooktops)	Power requirements			The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020
		Supply voltage	220-240 V		
Cleaning		Product dimensions			Other product downloads available at fisherpaykel.com
Flat easy clean glass surface	•	Depth	450 mm		↓ Service & Warranty
		Height	49 mm		↓ Installation Guide
		Width	600 mm		↓ Installation Guide - Joining Strip
Consumption					↓ 
Energy rating	Grade 3	Safety			↓ Revit Induction Cooktop
Heating efficiency	86%	Keylock	•		↓ Rhino Induction Cooktop
Standby power	1W	Pan detection system	•		↓ Restriction of Hazardous Substances (Chinese)
		Safety time out	•		↓ Sketchup Induction Cooktop
		Spillage auto off	•		↓ User Guide
		Surface hot indicators	•		↓ User Guide 
Controls					↓ User Guide (English)
Auto cut-off timer for each zone	•	Zone ratings			
Minute timer	•	Left front zone (PowerBoost set)	2100W (3700W)		Where applicable:
Soft-touch electronic controls	•	Left rear zone (PowerBoost set)	2100W (3700W)		
Touch and slide controls	•	PowerBoost	up to 3700W		All appliances use energy, and energy usage typically generates carbon emissions. Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.
		Right front zone (PowerBoost set)	2100W (3700W)		
		Right rear zone (PowerBoost set)	2100W (3700W)		
Performance					
Auto heat reduce	•	Zones			
Dual colour display	•	Number of zones	4		
Gentle heat	•				
Heat settings	9				
Induction cooking technology	•				
PowerBoost	•				
SmartZone	•				
Zone bridging	•				
		SKU	81358		