

60cm Series 7 Contemporary Pyrolytic Oven, 9 Function

Series 7 | Contemporary




With beautiful Contemporary styling and generous capacity, this built-in oven helps to ensure that every dish you create is cooked to perfection.

- 85L total capacity with nine oven functions including Pizza Bake and Roast
- Moisture level control with ActiveVent technology
- Pyrolytic self-cleaning function breaks down food residue for an easy clean

- Wi-Fi enabled for remote control and notifications through the SmartHQ™ app

DIMENSIONS

Height	598 mm
Width	596 mm
Depth	565 mm

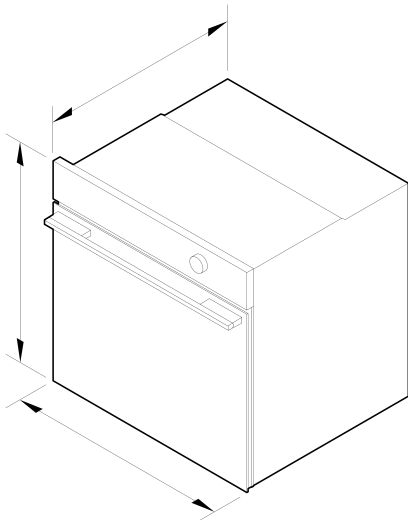

FEATURES & BENEFITS

Multi-Function Flexibility

Each function has been perfected to ensure that no matter what you're cooking, you've got the right heat to match. This built-in oven has nine functions including Pizza Bake and Roast, allowing you to use a variety of cooking styles.

Generous Capacity

With a generous 85L total capacity, you can create several perfectly cooked dishes at once using multiple shelves.

Cook With Confidence

The intuitive 2.4" screen provides an intuitive guided cooking experience that helps to deliver perfect results, whether you've been cooking all your life or are just starting out. Cook by food type and allow your oven to guide you through steps, or change temperature and heat type automatically, depending on your selection.

Exceptional performance

Our unique cooking technologies were developed to deliver perfect results. ActiveVent ensures optimised moisture levels, while AeroTech™ circulates heat evenly for a consistent temperature.

Self-Cleaning

Pyrolytic self-clean breaks down food residue at a very high temperature, leaving a light ash that's easily removed with a damp cloth.

Design Freedom

Designed to fit seamlessly into your kitchen, this built-in oven features premium materials and detailing to support a cohesive, considered kitchen design.

Safe And Sound

The CoolTouch door features triple glazing and a cooling system that ensures it's safe to touch from the outside – protecting both your hands and the surrounding cabinetry.

SPECIFICATIONS

Accessories (included)

Chromed shelf runners	•
Flat brushed baking tray	1
Roasting dish	1

Step down wire shelf	1	Multi-language display	UK English, US English, Simplified Chinese, Français, Español	Amperage	15 A
Telescopic sliding runners	1 set			Rated current	15 A
Wire shelf	1			Supply frequency	50 Hz
		Soft close doors	•	Supply voltage	220-240 V
		True convection oven	•		
		Turned stainless steel dials with illuminated halos	•		
Capacity		Functions		Product dimensions	
Shelf positions	6			Depth	565 mm
Total capacity	85 L			Height	598 mm
Usable capacity	72 L			Width	596 mm
Cleaning		Bake	•	Safety	
Acid resistant graphite enamel	•	Fan bake	•	Balanced oven door	•
Pyrolytic self-clean	•	Fan forced	•	Catalytic venting system	•
Removable oven door	•	Fan grill	•	Control panel key lock	•
Removable oven door inner glass	•	Grill	•	CoolTouch door	•
Removable shelf runners	•	Number of functions	9	Non-tip shelves	•
		Pizza bake	•	Safety thermostat	•
		Pyrolytic self-clean	•		
		Roast	•		
		Vent bake	•		
Controls		Performance		SKU	82567
Adjustable audio and display settings	•				
Automatic cooking/minute timer	•	ActiveVent™ system	•		
Automatic pre-set temperatures	•	AeroTech™ technology	•		
Celsius/Fahrenheit temperature	•	Automatic rapid pre-heat	•		
Certified Sabbath mode	•	Temperature range	50°C - 280°C		
Delay start	•	Whisper quiet cooking	•		
Electronic clock	•				
Electronic oven control	•				
Internal Light	•				
		Power requirements		Other product downloads available at fisherpaykel.com	

- [↓](#) DWG
- [↓](#) DXF
- [↓](#) Archicad
- [↓](#) Installation Guide (English)
- [↓](#) Installation Guide (Chinese)
- [↓](#) Planning Guide (English)
- [↓](#) Revit
- [↓](#) Rhino
- [↓](#) SketchUp
- [↓](#) User Guide (English)
- [↓](#) User Guide (Chinese)

Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.