

60cm Series 9 Minimal Built-in Coffee Maker

Series 9 | Minimal

Black




Our built-in coffee maker pours a delicious coffee, however you take it. Pairs perfectly with 60cm ovens and companion products.

- Barista-standard coffee just the way you like it, with 13 options from Flat White to Latte or Americano
- Your favourite coffee can be memorized and set to start at the same time each day, so it's ready when you are
- With self-cleaning function for an effortless clean

- Part of our suite of companion products, designed to match aesthetically for flexible configurations.

DIMENSIONS

Height	458 mm
Width	596 mm
Depth	480 mm

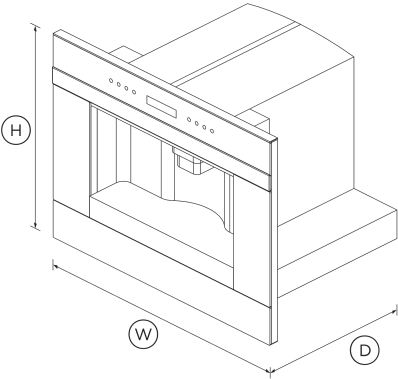

FEATURES & BENEFITS

Sized To Suit

This 60cm Built-in Coffee Maker is perfect for the compact kitchen and can be placed virtually anywhere. Companion products share standard dimensions and can be installed in multiple configurations to suit your kitchen design and preference.

Coffee Choice

Your Coffee Maker has 13 different choices to suit your taste and selection - from Espresso to Latte.

Barista-Style Coffee

The conical burr grinder delivers a consistent grind for the perfect coffee. Set it to suit your preference.

Self-Cleaning

The Coffee Maker has a self-cleaning function and comes with a removable drip tray and a waste container for used coffee grounds.

Personalise Your Cup

Program your Coffee Maker to start up at the same time every day and make your favourite coffee.

Beauty Of Choice

With the choice of a stylish stainless steel or elegant black trim, our companion products help you achieve a coherent kitchen aesthetic that suits your design style.

SPECIFICATIONS

Accessories (included)

Coffee spoon	•
Descaling agent bottle	•
Extractable steam outlet	•
Thermal milk jug (Auto Cappuccino)	0.5 L
Water filter	•

Accessories (sold separately)

Matching Trim Kit	Optional 76cm trim kit Part 81940
-------------------	-----------------------------------

Optional lower trim kit	Part 81662 (478mm)	Americano	•	Pump pressure	15 Bar
		Cappuccino	•		
		Coffee	•		
		Coffee strength levels	5	Power requirements	
Capacity		Cup size levels	4 + manual	Amperage	10 A
Coffee bean container capacity	350 g	Double espresso	•	Supply frequency	50 Hz
Drip tray capacity	0.8 L	Espresso	•	Supply voltage	240 V
Grounds container capacity	14 cups of coffee	Espresso macchiato	•		
Number of cups	1 or 2	Flat white	•	Product dimensions	
Water tank capacity	2.5 L	Hot milk	•	Depth	480 mm
		Hot water	•	Height	458 mm
Cleaning		Latte	•	Width	596 mm
Easy to remove coffee grinds container	•	Latte macchiato	•		
Easy to remove stainless steel hot water/ steam pipe	•	Long black	•		
Removable drip tray with level indicator	•	Number of functions	13	SKU	81922
Self-clean function	•	Personalised coffee	•		
		Steam	•		
		Takes pre ground coffee	•		
				The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020	
Controls		Performance		Other product downloads available at fisherpaykel.com	
Cleaning reminder	•	Coffee temperatures	5 x settings	↓ 2D-DWG Coffee Maker	
Coffee grounds full reminder	•	Grinder	Stainless steel conical burr	↓ 2D-DXF Coffee Maker	
High resolution touch display	•			↓ Archicad Coffee Maker	
Intuitive information display	•	Grinding coarseness	13 positions	↓ Archicad Coffee Maker with 600mm Trim	
LED lights	4	Heating system	Thermablock with stainless steel tube & steamer	↓ Archicad Coffee Maker with 760mm Trim	
Multi-language interface	true			↓ Installation Guide	
Refill coffee bean reminder	•	Heating system power (coffee / steam)	1200 W		
Water tank empty indicator	•	Integrated cup warmer shelf	•		
		Integrated storage for accessories	•		
Functions		Pump power	50		

- [↓](#) Revit Coffee Maker
- [↓](#) Revit Coffee Maker with 600mm Trim
- [↓](#) Revit Coffee Maker with 760mm Trim
- [↓](#) Rhino Coffee Maker
- [↓](#) Rhino Coffee Maker with 600mm Trim
- [↓](#) Rhino Coffee Maker with 760mm Trim
- [↓](#) Restriction of Hazardous Substances
- [↓](#) Sketchup Coffee Maker
- [↓](#) Sketchup Coffee Maker with 600mm Trim
- [↓](#) Sketchup Coffee Maker with 760mm Trim
- [↓](#) User Guide

Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.