

61cm Series 11 Integrated Column Freezer, Ice

Series 11 | Integrated




<p>Install it separately or pair with another Column for true design freedom – this model is left hinge with stainless steel interior.</p>

- ActiveSmart technology helps keep food fresher for longer by constantly maintaining the ideal temperature
- Variable Temperature Zone lets you change a compartment to Freeze, Soft Freeze or Deep Freeze for optimal storage
- Internal ice maker with boost for busy times
- Customise with your own kitchen cabinetry or purchase our stainless steel door panel accessory

DIMENSIONS

Height	2134 mm
Width	603 mm
Depth	610 mm

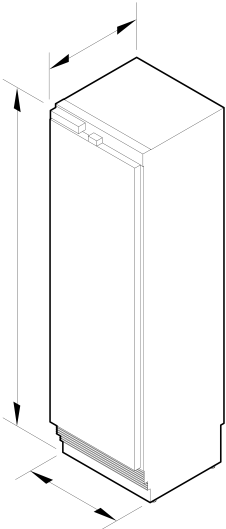

FEATURES & BENEFITS

Variable temperature zones

There's more than one way to freeze food, and different freezing temperatures and techniques affect food care – and your levels of convenience – in different ways. Optimal freezing is a question of what you're storing, how fresh it is, and when you plan to consume it. Change a compartment to Soft Freeze to enjoy maximum everyday convenience, or to Freeze Mode or Deep Freeze Mode to retain natural goodness for future use.

Deep Freeze Mode

Deep freezing (-25°C) allows food to be stored for months or even years with temperatures that halt bacterial activity. Freezing food quickly is the key to protecting quality and retaining nutrients, so they are not lost when defrosting.

Mix & Match

Integrated Column Refrigeration gives you the freedom to mix and match. Different sized Column Fridges and Freezers can be installed separately or paired. Finish them with our stainless steel door panels or customise to match your own kitchen cabinetry.

Clever Energy

Our ActiveSmart Foodcare Refrigerator Freezers adapt to daily use by cooling and defrosting only when needed. This means your refrigerator uses the energy it needs without compromising on food care.

Appealing Illumination

Bright LEDs light up each ceiling, shelves, bins and trays in both refrigerator and freezer, making it easy to find your food and creating a welcoming glow in your kitchen for those midnight snacks.

Design Quality

The premium design and quality finish includes a steel interior lining as well as full-extension metal shelf runners for easy access, and robust glass shelving.

Easy Install

Integrated Column Refrigerators and Freezers have been developed to make their installation easy. The joiner kit is included when pairing refrigerators and freezers. All models come with front adjustable levelling feet and they've been designed to easily slide into place as separate units.

SPECIFICATIONS

Accessories (included)

Joiner kit	AJ-RS21LR	Features	Frost free	•
		Adjustable door shelves	4	•
		Adjustable glass cantilevered shelves	•	•
		Adjustable glass shelves	4	•
		Adjustable half width door shelves	3	Noise emissions
		Front levelling feet	•	42 dBA
				Noise emissions class
				D
				Sabbath mode
				•
				Variable temperature zones
				2
Accessories (sold separately)		Freezer Features	Power requirements	
Door panel stainless steel Left hinge 610mm	RD6121L10D	Automatic ice maker	•	Connection power
Door panel stainless steel Right hinge 610mm	RD6121R10D	Bottle chill	•	330W
Handle kit Classic	AHCLRDSF	Door alarm	•	Rated current
Handle kit Contemporary round, aluminium	AHSRDSF	Fast freeze	•	10 A
Handle kit Contemporary square fine, aluminium	AHD5RDSF	Freezer bins	4	Supply frequency
Handle kit Contemporary square fine, black	AHD5RDSFB	Ice Boost	•	50 Hz
Handle kit Professional round flush	AHP3RDSF	LED bin lighting	•	Supply voltage
Joiner kit	AJ-RS21LR	LED ceiling lighting	•	230 - 240 V
Toe kick stainless steel 1220mm	AKRS12210	LED side lighting	•	
Toe kick stainless steel 1372mm	AKRS13710	SmartTouch interface at counter height	•	
Toe kick stainless steel 1828mm	AKRS18310			Product dimensions
Toe kick stainless steel 1981mm	AKRS19810			Depth
Toe kick stainless steel 610mm	AKRS06110			610 mm
Water filter replacement	847200 - FWC3			Height
				2134 mm
				Width
				603 mm
Capacity		Installation Dimensions	Product information	
Total gross capacity	368 L	Minimum inside width of cabinetry frame	610 mm	Packaged weight
Volume	336 L	Minimum internal depth of cabinetry	635 mm	137 kg
Volume freezer	336 L	Minimum internal height of cabinetry	2134 mm	Unpackaged weight
Volume variable temperature compartment	295 L			117 kg
Consumption		Performance	SKU	25679
Energy rating	Grade 1	ActiveSmart™ Foodcare	•	
Energy usage	1.15kWh/24h	Adaptive defrost	•	
		Dual evaporator	•	

The product dimensions and specifications in this page apply to the specific product and model. Under our policy of continuous improvement, these dimensions and specifications may change at any time. You should therefore check with Fisher & Paykel's Customer Care Centre to ensure this page correctly describes the model currently available. © Fisher & Paykel Appliances Ltd 2020

Other product downloads available at fisherpaykel.com

- [↓](#) DWG
- [↓](#) DXF
- [↓](#) Energy Label
- [↓](#) Water Filter Replacement Instructions - Parts 847200 and 847201 (English)
- [↓](#) Installation Guide - Toe Kick (English)
- [↓](#) Water Filter Replacement Instructions - Parts 847200 and 847201 (Chinese)
- [↓](#) Installation Guide (Chinese)
- [↓](#) Revit
- [↓](#) Rhino
- [↓](#) Rhino Appliance with Door Panel and Contemporary Round Handle
- [↓](#) Rhino Appliance with Door Panel and Contemporary Square Handle
- [↓](#) Restriction of the Use of Hazardous Substances (Chinese)
- [↓](#) SketchUp
- [↓](#) SketchUp Appliance with Door Panel and Contemporary Round Handle
- [↓](#) SketchUp Appliance with Door Panel and Contemporary Square Handle
- [↓](#) User Guide (Chinese)

Where applicable:

All appliances use energy, and energy usage typically generates carbon emissions. **Fisher & Paykel Appliances' In-use Energy Carbon Emissions Estimate** indicates carbon emissions from a product's in-use energy. This is calculated either annually or per cycle, using the product's market-specific energy label energy consumption data multiplied by the carbon emissions factor for energy in your country or region.

Our In-use Energy Carbon Emissions Estimate is designed to assist customers in making informed purchasing decisions when comparing different Fisher & Paykel products. For example, a heat pump dryer typically has a lower In-use Energy Carbon Emissions Estimate than a vented dryer.